



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for BOSCH BGB45300 GL45 PRO SILENCE. You'll find the answers to all your questions on the BOSCH BGB45300 GL45 PRO SILENCE in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual BOSCH BGB45300 GL45 PRO SILENCE
User guide BOSCH BGB45300 GL45 PRO SILENCE
Operating instructions BOSCH BGB45300 GL45 PRO SILENCE
Instructions for use BOSCH BGB45300 GL45 PRO SILENCE
Instruction manual BOSCH BGB45300 GL45 PRO SILENCE



[You're reading an excerpt. Click here to read official BOSCH BGB45300 GL45 PRO SILENCE user guide](http://yourpdfguides.com/dref/5905314)
<http://yourpdfguides.com/dref/5905314>

Manual abstract:

Intended use This vacuum cleaner is intended for domestic use and not for commercial use. Only use this vacuum cleaner in accordance with the instructions in this instruction manual. The manufacturer will not accept any responsibility for damage caused by improper use or incorrect operation. Therefore, please note the following points. The vacuum cleaner must only be operated with: Original replacement parts, accessories or special accessories. In order to avoid invalidating the warranty, we recommend that you operate your appliance using only original dust bags. In order to prevent injuries and damage, the vacuum cleaner must not be used for: Vacuum-cleaning persons or animals Vacuuming up: - insects or spiders. *Safety information* This vacuum cleaner complies with the recognised rules of technology and the relevant safety regulations. The appliance may be used by children over the age of 8 years and by persons with reduced physical, sensory or mental capacity or by persons with a lack of experience or knowledge if they are supervised or have been instructed on the safe use of the appliance and they have understood the potential dangers of using the appliance. Children must never play with the appliance.

Cleaning and user maintenance must never be carried out by children without supervision. @@@@ Proper use Only connect and use the vacuum cleaner in accordance with the specifications on the rating plate. Never vacuum without the dust bag or dust container, motor protection or exhaust filter. => This may damage the vacuum cleaner. Always keep the vacuum cleaner away from your head when using nozzles and tubes.

=> This could cause injury! When vacuuming stairs, the appliance must always be positioned below the user. Do not use the power cord or the hose to carry or transport the vacuum cleaner. For safety reasons, if this appliance's mains power cable becomes damaged, it must be replaced by the manufacturer, their after-sales service department or a similarly qualified person. If using the appliance for longer than 30 minutes, pull out the power cord completely. When disconnecting the appliance from the mains, pull on the plug itself to remove it; do not pull on the power cord.

When the cable is being automatically rewound, ensure that the mains plug is not thrown towards persons, body parts, animals or objects. => Use the mains plug to guide the power cord. Do not pull the power cord over sharp edges or allow it to become trapped. Pull out the mains plug before carrying out any work on the vacuum cleaner. Do not operate the vacuum cleaner if it is damaged. Unplug the appliance from the mains if a fault is detected. For safety reasons, only authorised after-sales service personnel are permitted to carry out repairs and fit replacement parts to the vacuum cleaner. Protect the vacuum cleaner from the weather, moisture and sources of heat. Do not pour flammable substances or substances containing alcohol onto the filters (dust bag, motor protection filter, exhaust filter, etc.).

The vacuum cleaner is not suitable for use on construction sites. => Vacuuming up building rubble could damage the appliance. When not in use, switch off the appliance and pull out the mains plug. At the end of its life, the appliance should immediately be rendered unusable, then disposed of in an appropriate manner. *Disposal information* Packaging The packaging is designed to protect the vacuum cleaner from being damaged during transportation. It is made of environmentally friendly materials and can therefore be recycled. Dispose of packaging that is no longer required at an appropriate recycling point. Old appliance Old appliances still contain many valuable materials. Therefore, please take appliances that have reached the end of their service life to your retailer or recycling centre so that they can be recycled. For current disposal methods, please enquire at a retailer or your local council.

Disposal of filters and dust bags Filters and dust bags are manufactured from environmentally friendly materials. Provided they do not contain substances that are not permitted in household waste, you can dispose of them with your normal household waste. *general information* Accessories Your accessories (nozzle, suction pipe, etc.) may look different from but work in the same way as those depicted in the illustrations in this instruction manual.

@@@@@ fold out picture pages.

@@@@@ Figure 3* a) Connect the handle and the telescopic tube together. b) Push the handle into the telescopic tube until it engages. @@@@ Figure 4* a) Connect the floor tool and the telescopic tube together. @@@@ => => Caution! @@@@ Worn undersides of floor tools may have sharp edges that can damage sensitive hard floors, such as parquet or linoleum. The manufacturer does not accept any responsibility for damage caused by worn floor tools.

Turbo brush If your vacuum cleaner is equipped with a turbo brush, please consult the accompanying instruction manual for notes on its use and maintenance. Figure 11* *Vacuuming with accessories* Attach the nozzles to the tube or handle as required: a) Crevice nozzle for vacuuming crevices and corners, etc. 2014 7:05 Uhr Seite 43 en Figure 12* *Pet hair tool III* Floor tool for easy and thorough vacuuming of pet hair. □ Push the telescopic tube into the connecting piece of the pet hair tool until it engages. Press on the locking collar and pull out the telescopic tube to disconnect. □ To clean, simply vacuum the tool using the suction pipe/telescopic tube. Figure 13* *Hard-floor brush III* For cleaning hard floor coverings (tiles, parquet flooring, etc.) III Connect the floor tool and the telescopic tube together. Figure 14 Once you have switched off the vacuum cleaner, you can use the parking aid on the back of the vacuum cleaner if you wish to stop vacuuming for a short time. To do this, slide the catch on the floor tool into the groove on the back of the vacuum cleaner.

Figure 19 a) Seal the dust bag by pulling the sealing strip and then remove it. b) Insert a new dust bag into the holder and close the dust bag compartment lid. ! Caution: the lid will only close when the dust bag is inserted. *Cleaning the motor protection filter* The motor protection filter should be cleaned regularly by knocking out the dirt and rinsing. Figure 20* III Open the dust bag compartment lid (see Figure 18). □ Pull out the motor protection filter in the direction of the arrow. III Clean the motor protection filter by tapping it. □ If it is very dirty, the motor protection filter should be rinsed. The filter must then be left to dry for at least 24 hours. □ After cleaning, slide the motor protection filter into the vacuum cleaner and close the dust bag compartment lid.

When the work is done Figure 15 III Unplug the vacuum cleaner. Figure 16 To store or transport the vacuum cleaner, use the storage aid on the underside of the vacuum cleaner. Stand the vacuum cleaner up on its end. Slide the catch on the floor tool into the groove on the underside of the vacuum cleaner.



[You're reading an excerpt. Click here to read official BOSCH](#)

[BGB45300 GL45 PRO SILENCE user guide](#)

<http://yourpdfguides.com/dref/5905314>

Cleaning the foam filter If your appliance is fitted with a filter frame and foam filter, the foam filter should be cleaned at regular intervals by tapping out the dust or rinsing the filter.

*Figure 21** Open the dust bag compartment lid (see Fig. 18). Pull out the filter frame and foam filter in the direction of the arrow. Remove the foam filter from the filter frame and clean it by tapping out the dust. If the foam filter is very dirty, it should be rinsed.

After rinsing it, allow the foam filter to dry for at least 24 hours. After cleaning, place the foam filter back in the filter frame, insert the filter frame with foam filter in the appliance and close the dust bag compartment lid. the vacuum cleaner ! Caution: the motor protection must not be operated without filter.

Changing the dust bag and filters Replacing the dust bag *Figure 17* If the dust bag change indicator lights up brightly and evenly when the floor tool is lifted from the carpet and the highest suction power is selected, the dust bag must be changed, even though it may not yet be full. In this case it is essential to change the dust bag due to the type of material it contains. @@@@*Figure 22** III Open the dust bag compartment lid. @@□ Insert the new HEPA filter and close the dust bag compartment lid. Replacing the exhaust filter You must replace the exhaust filter in your vacuum cleaner once a year. Replacing the micro-hygiene filter *Figure 23** III Open the dust bag compartment lid (see Figure 18). □ Release the filter hole receipt must be produced.

Dette direktiv angiver rammerne for indlevering og recycling af kasserede apparater gældende for hele EU. Sv en This appliance is labelled in accordance with European Directive 2012/19/EU concerning used electrical and electronic appliances (waste electrical and electronic equipment - WEEE). The guideline determines the framework for the return and recycling of used appliances as applicable throughout the EU. .



[You're reading an excerpt. Click here to read official BOSCH
BGB45300 GL45 PRO SILENCE user guide
http://yourpdfguides.com/dref/5905314](http://yourpdfguides.com/dref/5905314)