



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for BOSCH BKS4043. You'll find the answers to all your questions on the BOSCH BKS4043 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual BOSCH BKS4043**  
**User guide BOSCH BKS4043**  
**Operating instructions BOSCH BKS4043**  
**Instructions for use BOSCH BKS4043**  
**Instruction manual BOSCH BKS4043**

- » Gedrukt op Recyclingspapier
- » Imprimé sur papier recyclé
- » Stampato su carta riciclata
- » Gedrukt op Recyclingspapier
- » Trzyt på genbrugspapir
- » Trzyt på recyklet papir
- » Trzyt på återviningspapper
- » Trzyt på återvunnet papper
- » Impreso en papel reciclado
- » Impreso em papel reciclado
- » Тиснене на рециклирано папир
- » Выдруковано на папері з рециклингу
- » Vytlačované na papieri z recyklingu
- » Vytlačované na papieri vyrobené z recyklovanej suroviny
- » Отпечатано на рециклираном папиру
- » Отпечатано на рециклираном папиру
- » Imprimé sur papier recyclé
- » Impressione su carta riciclata
- » Impreso en papel reciclado
- » Тиснене на рециклираном папиру
- » Vytlačované na papieri z recyklingu



[You're reading an excerpt. Click here to read official BOSCH BKS4043 user guide](http://yourpdfguides.com/dref/5450831)  
<http://yourpdfguides.com/dref/5450831>

**Manual abstract:**

All plastic parts are marked for recycling. 4 Your vacuum cleaner en 6 5 7 8 9 4 10 3 11 2 12 1 13 1 Dust container 2 Dirt filter 3 Hard furnishings brush 4 Crevice nozzle 5 Dirt container release button 6 Handle 7 On/off button 8 Charging indicator 9 Suction unit 10 Cleaning brush 11 Cloth filter 12 Charger 13

Charger plug 5 en Please keep this instruction manual in a safe place. When passing the vacuum cleaner on to another person, please also pass on this instruction manual. Intended use This vacuum cleaner is intended for domestic use only, not for commercial use. @@@Therefore, please note the following points. @@ □ Damp or liquid substances – Highly flammable or explosive substances and gases – Ash, soot from tiled stoves and central heating systems Do not charge the appliance in temperatures below 0 °C or above 40 °C. Do not connect or open a defective charger; replace it with a new unit. do not operate a cordless vacuum cleaner if it is damaged. To avoid dangerous situations, repairs and spare part replacements, which are not dealt with in this instruction manual under "Cleaning", must only be carried out by an authorised after-sales service. Protect the vacuum cleaner and charger from exposure to weather, moisture and sources of heat.

At the end of its life, the vacuum cleaner should be disposed of in an appropriate manner. Disposal information Please contact your specialist retailer or your local council to find out about current means of disposal. caution: This appliance contains rechargeable nickel cadmium batteries. Before disposing of the appliance, remove the discharged batteries (see Fig. 13) and dispose of them in an environmentally responsible manner.

fold out the picture pages. Safety information This vacuum cleaner complies with the generally recognised standards of technology and relevant safety regulations. The charger must only be connected and operated as specified on the rating plate. Never use the vacuum cleaner without filter inserts. => The appliance may be damaged.

When disconnecting the charger from the mains, pull on the plug, not the power cord. @@@@Figure 11 Empty the dust container. If heavily soiled, the filters and dust container can be washed out. Then wipe out the dust container with a dry cloth. Allow the filters to dry completely before refitting. @@B)Fit the dust container onto the suction unit and lock into place. Filters can be obtained from our after-sales service as required ! @@@@Figure 4 Plug the charger plug into the socket. The charging indicator lights up. ! @@@@In this way, it is always ready for use. @@ crevice nozzle Figure 6 For vacuuming crevices and corners , etc.

@@@Fit the hard furnishings brush as shown onto the crevice nozzle. Figure 8 After vacuuming, return the appliance to the charger. Care Before cleaning the cordless vacuum cleaner, it must be switched off and disconnected from the charger. It can be cleaned with a standard commerciallyavailable plastic cleaner. Never immerse all-purpose the vacuum cleaner in water Battery disposal Before disposing of the appliance, please remove the battery cartridge and dispose of it separately. Figure 13 Slide open the battery compartment in the direction of the arrow. Cut through the retaining tape and remove the battery cartridge from the appliance. Cut through the power cables and, to ensure safety, bind and insulate each of the cable ends with tape. Sørg for, at brugsanvisningen medfølger, hvis støvsugeren gives videre til andre. 19 Beskrivelse av apparatet no 6 5 7 8 9 4 10 3 11 2 12 1 13 1 Støvbeholder 2 Smussfilter 3 Møbelpensel 4 Fugemunnstykke 5 Låseknapp for smussbeholderen 6 Håndtak 7 Av/på-knapp 8 Indikator for lading 9 Sugedel 10 Rengjøringsbørste 11 Tekstilfilter 12 Ladestasjon 13 Lader 20 no Ta godt vare på bruksanvisningen.

Kutt over ledningene, og lim for sikkerhets skyld hver kabelende for seg med isoleringstape. @@@@For claims under guarantee the sales receipt must be produced. @@" en "This appliance is labelled in accordance with the European directive 2002/96/EG concerning waste electrical and electronic equipment – WEEE. The directive provides the framework for the return and recycling of used appliances as applicable throughout the EU. .



[You're reading an excerpt. Click here to read official BOSCH  
BKS4043 user guide  
http://yourpdfguides.com/dref/5450831](http://yourpdfguides.com/dref/5450831)