




# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for BOSCH MUM-48R1. You'll find the answers to all your questions on the BOSCH MUM-48R1 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual BOSCH MUM-48R1  
User guide BOSCH MUM-48R1  
Operating instructions BOSCH MUM-48R1  
Instructions for use BOSCH MUM-48R1  
Instruction manual BOSCH MUM-48R1

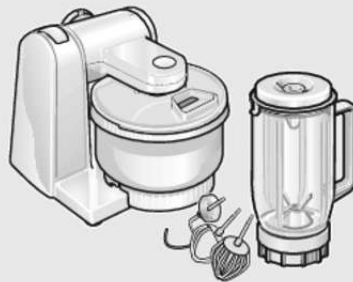

MUM44..  
MUM46..  
MUM48..



de	Gebrauchsanleitung	pt	Instruções de serviço
en	Operating Instructions	el	Οδηγίες χρήσης
fr	Notice d'utilisation	tr	Kullanma talimatı
it	Istruzioni per l'uso	pl	Instrukcja obsługi
nl	Gebruiksaanwijzing	hu	Használati utasítás
da	Brugsanvisning	uk	Інструкція з експлуатації
no	Brugsanvisning	ru	Инструкция по эксплуатации
sv	Brugsanvisning	ar	تعليمات الاستخدام
fi	Käyttöohje		
es	Instrucciones de uso		



[You're reading an excerpt. Click here to read official BOSCH MUM-48R1 user guide](http://yourpdfguides.com/dref/5450885)  
<http://yourpdfguides.com/dref/5450885>

**Manual abstract:**

Use in employee kitchens in shops, offices, agricultural and other commercial businesses, as well as use by guests in boarding houses, small hotels and similar dwellings. Use the appliance for processing normal quantities of food for domestic use. Do not exceed the stipulated maximum quantities. Please read the operating instructions carefully and keep them in a safe place. If the instructions for correct use of the appliance are not observed, the manufacturer's liability for any resulting damage will be excluded. @@ the appliance requires no maintenance. @@10 Robert Bosch Hausgeräte GmbH en For your safety General safety instructions odëâ=çÑ=ÉäÉÄîäÄ=ëÛçÄâ> Connect and operate the appliance only in accordance with the specifications on the rating plate. only use indoors. Do not use the appliance if the power cord and/or appliance are damaged. Keep children away from the appliance.

Do not allow persons (also children) with restricted physical sensory perception or mental abilities or with lack of experience and knowledge to operate the appliance unless they are supervised or have been instructed in the use of the appliance by somebody who is responsible for their safety. @@Do not leave the running appliance unattended. Do not place the power cord over sharp edges or hot surfaces. @@Only our customer service may repair the appliance. @@If the drive does not move, the swivel position has already been reached.

Settings 1–4 = Operating speed Setting 1 = Minimum speed – slow Setting 4 = Maximum speed – fast If the power is interrupted, the appliance remains switched on and restarts when the power is restored. @@@@Do not adjust the swivel arm while the appliance is switched on. Wait until the drive has come to a standstill. @@Do not immerse the base unit in water or clean under running water. Use the appliance with original accessories only. When using the accessories, follow the enclosed operating instructions. Use only one tool or accessory at any one time. Use only the rotary switch to switch the appliance on or off. The appliance restarts following a power interruption. Robert Bosch Hausgeräte GmbH en 17 18 19 20 Sealing ring Blender jug Lid Funnel □ Before operating the appliance and accessories for the first time, clean thoroughly; see “Cleaning and servicing”. Preparation □ Place the base unit on a smooth, clean \* If an accessory is not included in the product package, it can be purchased via the trade or customer service. □ Press the Release button and move the swivel arm. □ Move the swivel arm until it engages in the required position. Cake mixture Whisk (b) for whisking egg whites, cream and light dough, e. g.

Sponge mixture Kneading hook (c) with dough deflector (d) for kneading heavy dough and mixing-in ingredients that ought not be cut (e. Note: If the drive does not move, the swivel position has already been reached. Press the Release button and move the swivel arm to position 6. insert the bowl. The base of the mixing bowl must be inserted into the recess of the base unit. Depending on the processing task, insert the stirrer, whisk or kneading hook until it locks into position. If using the kneading hook, rotate the dough deflector until the kneading hook can lock into position. Put the ingredients to be processed into the bowl. Press the Release button and move the swivel arm to position 1. attach the cover.

Set the rotary switch to the desired setting. Robert Bosch Hausgeräte GmbH en Adding more ingredients □ Switch off the appliance with the rotary switch. □ Press the Release button and move the swivel arm to position 7. @@@@□ Press the Release button and move the swivel arm to position 6. □ Take the tool out of the drive.

□ Remove the bowl. □ Clean all parts, see “Cleaning and servicing”. blender Fig. @@ □ Remove the blender drive cover. @@@@While working, always hold the lid firmly with one hand.

However, do not place hand over the refill opening! □ Set the rotary switch to the desired setting. adding more ingredients Fig. □-6 □ Switch off the appliance with the rotary switch. @@@@Tip: It is recommended to clean the blender immediately after use. @@Wipe the base unit with a damp cloth. If required, use a little detergent. Then dry the base unit. @@Do not wedge plastic parts in the dishwasher as they could warp. @@@@ chipper disc (MUZ45PS1) For the continuous-feed shredder MUZ4DS3. For slicing raw potatoes for chips.

@@@@@) are described in the separate operating instructions. @@The accessories for the MUM 45. Appliance are also suitable for the MUM 44. @@ perforated disc set (MUZ45LS1) For the mincer MUZ4FW3. @@@@Stainless steel stirring bowl (MUZ4ER2) Up to 1 kg of flour plus ingredients can be processed in the bowl. viennese whirl attachment (MUZ45SV1) For the mincer MUZ4FW3. With metal template for 4 different pastry moulds. 15 Robert Bosch Hausgeräte GmbH en fr Grater attachment (MUZ45RV1) For the mincer MUZ4FW3. For grating nuts, almonds, chocolate and dried bread rolls. For pressing soft fruit, (except raspberries), tomatoes and rose hips, to a pulp.

At the same time e. Mill with conical grinder made of steel (MUZ4GM3) For all grain types except maize, also oil seeds, dried mushrooms and herbs. @@@@Please ask your dealer or inquire at your local authority about current means of disposal. Warranty conditions The guarantee conditions for this appliance are as defined by our representative in the country in which it is sold. Details regarding these conditions can be obtained from the dealer from whom the appliance was purchased.

The bill of sale or receipt must be produced when making any claim under the terms of this guarantee. EäÉîÉääÖ=íääöââÉ=ãÉÇ=âà>éÉí=î=ÇÉ&iacut.



[You're reading an excerpt. Click here to read official BOSCH](http://yourpdfguides.com/dref/5450885)

[MUM-48R1 user guide](http://yourpdfguides.com/dref/5450885)

<http://yourpdfguides.com/dref/5450885>