



Your PDF Guides


You can read the recommendations in the user guide, the technical guide or the installation guide for BOSCH PHO 16-82. You'll find the answers to all your questions on the BOSCH PHO 16-82 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual BOSCH PHO 16-82
User guide BOSCH PHO 16-82
Operating instructions BOSCH PHO 16-82
Instructions for use BOSCH PHO 16-82
Instruction manual BOSCH PHO 16-82

Bedienungsanleitung
Operating Instructions
Instructions d'emploi
Instrucciones de servicio
Manual de instruções
Istruzioni d'uso
Gebruiksaanwijzing
Betjeningsvejledning
Bruksanvisning
Brukerveiledningen
Käyttöohje
Οδηγία χειρισμού
Kullanım kılavuzu

BOSCH

PHO 16-82
PHO 20-82

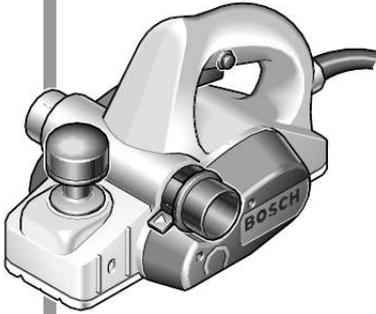

Deutsch
English
Français
Español
Português
Italiano
Nederlands
Dansk
Svenska
Norsk
Suomi
Ελληνικά
Türkçe





[You're reading an excerpt. Click here to read official BOSCH PHO 16-82 user guide](http://yourpdfguides.com/dref/2716460)
<http://yourpdfguides.com/dref/2716460>

Manual abstract:

Please observe the order number of your machine. The trade names of the individual machines may vary. Typically the A-weighted noise levels of the product are: sound pressure level: 90 dB (A); sound power level: 103 dB (A). For stationary use, the machine can be built into the base unit UG 37. @@@@Before using for the first time, ask for a practical demonstration. S For long hair, wear hair protection. Work only with closely fitting clothes. @@Never use the machine with a damaged cable. S Connect machines that are used in the open via a residual current device (RCD) with an actuating current of 30 mA maximum. Use only extension cables that are approved for outdoor use.

S Keep hands away from rotating parts. s Secure the workpiece. A workpiece clamped with clamping devices or in a vice is held more secure than by hand. S The planer base plate 11 must lay flat on the surface when working. s Never plane over metal objects such as nails or screws.

S Do not allow fingers to enter the chip ejector 3. S Always switch the machine off and wait until it has come to a standstill before placing it down. S For stationary use as a panel planer together with base unit UG 37 and the respective accessories: - Pull the mains plug before mounting. - Use the blade-shaft protector at all times. - Work small workpieces only with a suitable feeding device, e.

S Never allow children to use the machine. S Bosch is only able to ensure perfect operation of the machine if the original accessories intended for it are used. Observe correct mains voltage: The voltage of the power source must agree with the voltage specified on the nameplate of the machine. Equipment marked with 230 V can also be connected to 220 V. To start the machine, press the lock-off button 8 against starting first, then press and hold the On/Off switch 7. To switch off the machine, release the On/Off switch 7. For safety reasons the On /Off switch of the machine cannot be locked; it must remain pressed during the entire operation. The planing depth can be adjusted variably from 0 2. 0 mm with the adjustment knob 4, using the planing depth scale 5: Rotation in counterclockwise direction = reduces the planing depth Rotation in clockwise direction = increases the planing depth S Before any work on the machine itself, pull the mains plug. The dust that is produced while working can be detrimental to health, inflammable or explosive.

Suitable safety measures are required. examples: Some dusts are regarded as carcinogenic. Use suitable dust /chip extraction and wear a dust respirator. Piece of wood, compressed air, etc.) to clean clogged chip ejector. Do not allow fingers to enter the chip ejector 3. @@ the vacuum cleaner must be suitable for the material to be worked. @@@@Repeat the planing several times. @@@@A chip/dust bag 20 (accessory) can be used for smaller jobs. @@Always press the change lever until it engages in the end position.

@@ depending on required bevel width , use the corresponding V-groove. @@@@With base unit UG 37), the blade protector must be removed. Press the blade protector together from the sides and pull it off. For non-stationary use, the blade protector must always be assembled. @@@@S Before any work on the machine itself, pull the mains plug.

When both cutting edges are dull, the planer blade must be replaced. S Before any work on the machine itself, pull the mains plug. Loosen screw 10 and take off the belt cover 9. remove worn drive belt 28. @@Place the new drive belt on the small pulley 29 first and then work it on the large pulley 27 by hand while rotating.

Reattach the belt cover 9 and tighten with the screw 10. Loosen the two fastening screws 25 with the Allen key 24 by approx. 1 2 turns. If necessary, loosen the clamping element 23 by giving it a light blow with a suitable tool (e. Push the planer blade 26 sideways out of the blade drum with a piece of wood. S Before any work on the machine itself, pull the mains plug. S For safe and proper working, always keep the machine and the ventilation slots clean. If the machine should fail despite the care taken in manufacturing and testing procedures, repair should be carried out by an after-sales service centre for Bosch power tools. In all correspondence and spare parts orders, please always include the 10-digit order number given on the nameplate of the machine. The wires in the cable are coloured according to the following code: The guide groove of the planer blade always ensures continuous height adjustment when replacing or reversing it.

Clean the blade seat (clamping element) and the planer blade respectively, if required. S Rotate the blade drum 22 by hand and ensure that the planer blade does not run into the planer base plate or housing. @@@@These instructions are printed on recycled paper manufactured without chlorine. We declare under our sole responsibility that this product is in conformity with the following standards or standardization documents: EN 50 144 according to the provisions of the directives 89/336/EEC, 98/37/EC. Subject to change without notice .



[You're reading an excerpt. Click here to read official BOSCH PHO](http://yourpdfguides.com/dref/2716460)

[16-82 user guide](http://yourpdfguides.com/dref/2716460)

<http://yourpdfguides.com/dref/2716460>