




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for BOSCH PIL631B18E. You'll find the answers to all your questions on the BOSCH PIL631B18E in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual BOSCH PIL631B18E
User guide BOSCH PIL631B18E
Operating instructions BOSCH PIL631B18E
Instructions for use BOSCH PIL631B18E
Instruction manual BOSCH PIL631B18E

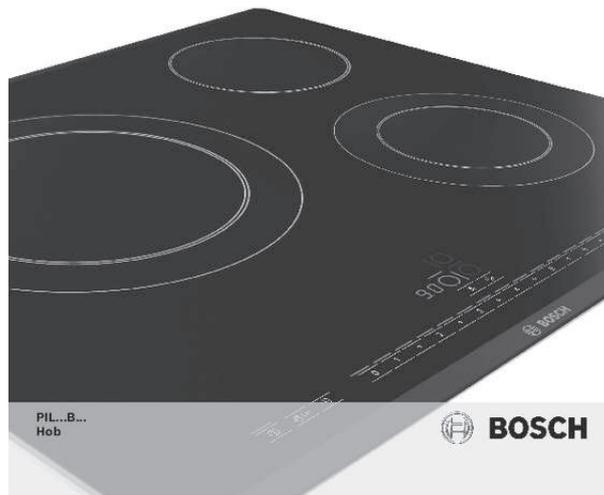

[en] Instructions for installation and use



[You're reading an excerpt. Click here to read official BOSCH PIL631B18E user guide](http://yourpdfguides.com/dref/5671957)
<http://yourpdfguides.com/dref/5671957>

Manual abstract:

..B... @@@@ @@@@10 Getting to know your appliance.....

.....
.....
.....

..11 The control panel ...

.....
.....
.....
.....

..... 11 The hotplates .

.....
.....
.....
.....
.....
.....

... 11 Residual heat indicator ..

.....
.....
.....
.....
.....
.....

11 Programming the hob.....

.....
.....
.....
.....

...12 Turning the hob on and off ..

.....
.....
.....
.....

... @@@@ @@@@13 Powerboost function ..

.....
.....

.....
.....
.....
.....

.....
..14 To activate ...

.....
.....
.....
.....
.....

.....
.....
.....
.....

..... 14 To deactivate

.....
.....
.....
.....
.....
.....

.....
.....
.....

.... 14 Time programming function

.....
.....
.....
.....

.14 Turning off a hotplate automatically

.....
.....

.....
.....
.....

. 14 The timer.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

... 14 Automatic time limitation ..

.....
.....
.....

.....
.....

.....
15 Basic settings.....

.....
.....

.....
.....

.....
.....

.....
.....

.....
.....

.15 Accessing the basic settings.....

.....
.....

.....
.....

.....
.....

... 16 Care and cleaning ..

.....
.....

.....
.....

.....
.....

.....
.....

.....
.....

..16 Hob ...

.....
.....

.....
.....

.....
.....

.....
.....

.....
.....

.....
.....

.....
.....

... 16 Hob frame

.....
.....

.....
.....

.....
.....

.....
.....

.....
.....

.....
.....

.. 16 Fixing malfunctions ...

.....

kitchen unit and kitchen wall (figure 4b). □ The selected connection current will have been properly saved. Installing the appliance, figures 5/6 Note: Wear protective gloves to fit the hob.

The non-visible surfaces may have sharp edges. Connect the appliance to the mains to check its working. □ □ Uninstalling the appliance Disconnect the appliance from the mains. Push the hob upwards from below to remove it. Caution! Damage to the appliance! Do not try to remove the appliance by prying it out from above.

Voltage, see specifications plate. Connect only according to the connection drawing (figure 6). 1. Brown 2. Blue 3. Yellow and green 7 INSTRUCTION MANUAL Produktinfo Additional information on products, accessories, replacement parts and services can be found at www.bosch-home.com and in the online shop www.bosch-eshop.com : Safety precautions Please read this manual carefully.

Please keep the instruction and installation manual as well as the appliance certificate in a safe place for later use or for subsequent owners. Check the appliance after removing it from the packaging. If it has suffered any damage in transport, do not connect the appliance, contact the Technical Assistance Service and provide written notification of the damage caused, otherwise you will lose your right to any type of compensation. This appliance must be installed according to the installation instructions included. This appliance is intended for domestic use only. The appliance must only be used for the preparation of food and drink. The appliance must be supervised during operation. Only use this appliance indoors. Do not use covers. @@Do not use inappropriate child safety shields or hob guards.

These can cause accidents. @@@@Children must not play with, on, or around the appliance. @@@@ @ Hot oil and fat can ignite very quickly. Never leave hot fat or oil unattended. Never use water to put out burning oil or fat.

Switch off the hotplate. @@ □ The hotplates become very hot. Never place combustible items on the hob. Never place objects on the hob. □ The appliance gets hot.

@@ □ The hob switches off automatically and can no longer be operated. It may switch on unintentionally at a later point. Switch off the circuit breaker in the fuse box.



[You're reading an excerpt. Click here to read official BOSCH](#)

[PIL631B18E user guide](#)

<http://yourpdfguides.com/dref/5671957>

Contact the after-sales service. Risk of burns! @@Never touch the hot surfaces. Keep children at a safe distance. □ The hotplate heats up but the display does not work. Switch off the circuit breaker in the fuse box. Contact the after-sales service. □ Metal objects on the hob quickly become very hot.

@@ □ After each use, always turn off the hob at the main switch. @@Risk of fire! Risk of fire! Risk of burns! Risk of burns! Risk of fire!! Risk of electric shock! □ Incorrect repairs are dangerous. Repairs may only be carried out and damaged power cables replaced by one of our trained after-sales technicians. If the appliance is defective, unplug the appliance from the mains or switch off the circuit breaker in the fuse box. Contact the after-sales service. □ Do not use any high-pressure cleaners or steam cleaners, which can result in an electric shock. □ A defective appliance may cause electric shock. Never switch on a defective appliance. Unplug the appliance from the mains or switch off the circuit breaker in the fuse box. Contaoon as the control knob is turned on.

The induction hotplate stops supplying heat if the pan is removed without having previously switched it off. □ □ Characteristics of the pan base The characteristics of the pan base may affect the uniformity of the cooking results. Pans made from materials which help diffuse heat, such as stainless steel sandwich pans, distribute heat uniformly, saving time and energy. Absence of pan or unsuitable size If no pan is placed on the selected hotplate, or if it is made of unsuitable material or is not the correct size, the power level displayed on the hotplate indicator will flash. Place a suitable pan on the hotplate to stop the flashing.

If this takes more than 90 seconds, the hotplate will switch off automatically. Empty pans or those with a thin base Do not heat empty pans, nor use pans with a thin base. The hob is equipped with an internal safety system. However, an empty pan may heat up so quickly that the "automatic switch off" function may not have time to react and the pan may reach very high temperatures. The base of the pan could melt and damage the glass on the hob.

In this case, do not touch the pan and switch the hotplate off. If it fails to work after it has cooled down, please contact the Technical Assistance Service. Pan detection Each hotplate has a minimum limit for detecting pans, which varies depending on the material of the pan being used. You should therefore use the hotplate that is most suitable for the diameter of your pacally once the selected time has elapsed. Programming the cooking time. The hob must be switched on: 1. Select the required hotplate and power level. 2. Press the 0 symbol. The Ū indicator on the hotplate lights Any cooking time can be programmed for up to 99 minutes.

The timer The timer can be set for periods of up to 99 minutes. It is independent of the other settings. This function does not automatically switch off a hotplate. How to program 1. The timer can be selected in two different ways: □ up. << is displayed on the time program function display. + symbol: 30 minutes. - symbol: 10 minutes. 3. Press the + or - symbol.

The basic setting appears: If you have selected the hotplate: press the 0 symbol twice. If you have not selected the hotplate: press the 0 symbol. □ The Ū indicator next to the U symbol lights up. << is displayed on the time program function display. 2. Press the + or - symbol. The basic setting appears. + symbol: 10 minutes. - symbol: 5 minutes. 3.

Set the desired time using the + or - symbols. 4. Press the + or - symbol until the required cooking time After a few seconds, the time will start to elapse. Changing or cancelling the time Press the 0 symbol various times until the Ū indicator next to the U symbol lights up. Change the time or set to << with the + or - symbols. Once the time has elapsed A warning signal sounds. << is displayed on the time program function display. After 10 seconds the indicators turn off. Pressing the 0 symbol turns off the indicators and stops the beeping. appears.

After a few seconds, the cooking time begins to count down. Note: The same cooking time can be automatically programmed for the all the hotplates. The programmed time passes independently for each of the hotplates. The Basic settings chapter provides information on automatically programming the cooking time. Changing or cancelling the time Select the hotplate . Press the 0 symbol and change the cooking time with the + or - symbols, or set to <<. 14 Automatic time limitation If the hotplate remains in use for a long time and no changes are made in the settings, the automatic time limitation function is triggered. The hotplate stops heating. @@The indicator goes out when any symbol is pressed. The hotplate can now be reset.

@@These settings may be adapted to the user's individual needs. @@@@, Only error signal activated. f Only confirmation signal activated. @@@@f 30 seconds. ,, 1 minute.

@@minimum power. ,, = 1,500 W. f = 2,000 W. etc.

Š or Š. @@@@Switch on the hob. 2. Within the next 10 seconds, press and hold the D symbol 3. @@Then select the required setting with the + and - symbols. for 4 seconds approximately. 5. Press the D symbol again for approximately 4 seconds. The settings should be correctly saved In the display ™ and , alternately light up and < lights up as a default setting. Quit To leave the basic settings, turn off the hob at the main switch.

Care and cleaning The advice and warnings contained in this section aim to guide you in cleaning and maintaining the hob, so that it is kept in the best possible condition □ □ □ Corrosive products such as oven sprays or stain removers Sponges that may scratch High-pressure or steam cleaners Hob Cleaning Clean the hob after each use. This prevents food remains left on the surface from burning. Wait until the hob is cool enough before attempting to clean it. Only use cleaning products specifically designed for hobs. Follow the instructions provided on the packaging. Do not use: □ □ □ The best way to remove stubborn stains is to use a glass scraper. Follow the manufacturer's instructions. Suitable glass scrapers can be obtained through the Technical Assistance Service or from our online shop. Hob frame In order to avoid damage to the hob frame, follow the indications below: □ □ □ Undiluted washing-up liquid Dishwasher detergent Abrasive products Use only slightly soapy hot water Do not use sharp or abrasive products Do not use a glass scraper Fixing malfunctions Malfunctions are usually due to small details. Before calling the Technical Assistance Service you should bear in mind the following advice and warnings.

Indicator none Malfunction The electric power supply has been cut off. The appliance has not been correctly connected following the connection diagram. Electronic system malfunction.



[You're reading an excerpt. Click here to read official BOSCH](#)

[PIL631B18E user guide](#)

<http://yourpdfguides.com/dref/5671957>

