

.....
.....
..... Fax Service .

.....
.....
.....

.....
Advice line.....

.....
.....

..... Fax Advice.....

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.... @@@@The typical hand/arm vibration is below 2.5 m/s². @@@@s Never pick up or carry the lawnmower while the motor is running. s Remove the plug from the socket: whenever you leave the machine before clearing a blockage before checking, cleaning or working on the lawnmower after striking a foreign object. Inspect the lawnmower for damage and make repairs as necessary if the lawnmower starts to vibrate abnormally (check immediately). s Keep all nuts, bolts and screws tight to be sure that the lawnmower is in safe working condition.

s Check the grassbox/bag frequently for wear or deterioration. s Replace worn or damaged parts for safety. s Ensure replacement parts fitted are Bosch approved. Robert Bosch GmbH, Geschäftsbereich Elektrowerkzeuge, D-70745 Leinfelden-Echterdingen www.bosch-pt.com F016 L70 483 6035A00EMN (06).



[You're reading an excerpt. Click here to read official BOSCH ROTAK 320 user guide](http://yourpdfguides.com/dref/2287435)
<http://yourpdfguides.com/dref/2287435>