



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for BOSCH SENSIXX B4. You'll find the answers to all your questions on the BOSCH SENSIXX B4 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual BOSCH SENSIXX B4**  
**User guide BOSCH SENSIXX B4**  
**Operating instructions BOSCH SENSIXX B4**  
**Instructions for use BOSCH SENSIXX B4**  
**Instruction manual BOSCH SENSIXX B4**



[You're reading an excerpt. Click here to read official BOSCH SENSIXX B4 user guide](http://yourpdfguides.com/dref/5906652)  
<http://yourpdfguides.com/dref/5906652>

**Manual abstract:**

Unplug the iron from the mains supply when you have to leave the iron unattended. Remove any label or protective cover from the soleplate. Fill the tank of the iron with tap water and set the temperature control to "max". Plug in the appliance to the mains. When the steam iron has reached the desired temperature (pilot light at the back of the water tank goes out), let the water create steam by setting the steam control to and by repeatedly pressing the button. During its first use the iron may produce certain vapours and odours that will die away after a few minutes. If cloth melts due to too high temperature on the stainless steel soleplate, switch off the steam and rub off the residue immediately with a thickly folded, dry cotton cloth. To keep the soleplate smooth, you should avoid hard contact with metal objects. Never use a scouring pad, or chemicals to clean the soleplate. Never decalcify the tank or treat it with detergents or solvents: otherwise the iron will drip water whilst steaming! Additional functions (Depending on the model) Multiple descaling system Using the appliance The pilot light switches ON while the appliance is heating up and switches OFF as soon as the set temperature is reached. If the temperature of the hot iron drops, you can continue ironing while the iron heats up again to the set temperature.

@@@This appliance is intended for domestic and not industrial use. Keep the operating instructions in a safe place! @@@This appliance must be connected to an earthed socket. If it is absolutely necessary to use an extension cable, make sure that it is suitable for 16 A or more and has a socket with an earth connection. In order to avoid that, under unfavourable mains conditions, phenomena like transient voltage drops or lighting fluctuations can happen, it is recommended that the iron is connected to a power supply system with a maximum impedance of 0.27 Ω.

If necessary, the user can ask the public power supply company for the system impedance at the interface point. This appliance is not intended to be used by persons (including children) with reduced physical, sensory or mental capacities, or lack of experience and knowledge, unless they have been given supervision or instruction. Children should be supervised to ensure that they do not play with the appliance. The appliance must be used and placed on a stable surface. When placed in a support, make sure that the surface on which the support stands is stable.

The iron should not be used if it has been dropped, if there are visible signs of damage or if it is leaking water. It must be checked by an authorized Technical Service Centre before it can be used again. Remove the plug from the socket before filling the appliance with water or before pouring out the remaining water after use. Never immerse the iron in water or any other fluid. The appliance must never be placed under the tap to fill the water. Do not leave the appliance exposed to weather conditions (rain, sun, frost, etc.) The electrical plug must not be removed from the socket by pulling the cable. Unplug the appliance from the mains supply after each use, or if a fault is suspected. With the aim of avoiding dangerous situations, any work or repair that the appliance may need, e.g.

@@@Use only clean water from the tap without mixing anything with it. @@@@This appliance has been designed to use normal tap water.

@@@Never fill beyond the "max" water level mark. @@ 1. @@ 2. @@@@ 1. @@ 2. @@ 3. After the necessary warm-up period, the pilot light goes out. Press the "clean" button and H gently shake the iron.

@@ 5. @@ 6. Repeat the process if the iron still contains impurities. r 3. @@@@ fig.

@@@@@@@Steam will be generated from the fabrics rather than the iron. If you tumble dry your fabrics before ironing them, set the tumble drier on the 'iron dry' programme. □ If the fabrics are damp enough, turn off the steam regulator completely. □ Stand the iron upright during pauses. Disposal Avant la première utilisation Please ask your dealer or inquire at your local authority about current means of disposal.

This appliance is labelled in accordance with European Directive 2002/96/CE –concerning used electrical and electronic appliances (waste electrical and electronic equipment – WEEE). The guideline determines the framework for the return and recycling of used appliances as applicable throughout the EU. You can download this manual from the local homepages of Bosch Retirez la protection ou toute étiquette de la semelle. The "Secure" auto shut-off function switches off the iron when it is left unattended, thus increasing security and saving energy. After plugging in the appliance, this function will be inactive for the first two minutes in order to give the appliance time to reach the set temperature. After such time, if the iron is not moved for 8 minutes while in the upright position or 30 seconds while resting on its soleplate or on its side, then the safety circuit will switch the appliance off automatically and the pilot light will start flashing. To reconnect the iron, just move it about gently. Spray Do not use the Spray function with silk. Press button repeatedly with intervals of at least 5 seconds. If the temperature is set too low, the steam is automatically switched off to avoid dripping.

There may be an audible click when this occurs. Operate the iron in a vertical position at a distance of 10 cm / 4 in, and press the button repeatedly with pauses of at least 5 seconds. Never direct the steam jet at garments that are being worn. Never aim the steam at people or animals. fig. 6 After ironing Switch the steam control from to and back again several times (self-cleaning). Empty the tank: Hold the iron with the point down and shake lightly. Store standing on the rear, not on the base (Fig. 7). Do not wrap the power cord too tight! @@@@@@@To release the fabric protector, pull down on the clip at the rear and remove the iron.

The fabric-protection soleplate cover may be purchased from the customer service or specialist shops : Accessory code (After-sales) 464851 Name of accessory (Specialist outlets) TDZ1510 Réglez thermostat sur puis, après la phase de chauffage, amenez le régulateur de vapeur sur ou . Défroissement vertical Cleaning If the iron is only slightly soiled, pull out the plug and allow the soleplate to cool down. Wipe the housing and the soleplate with a damp cloth only. Tips to help you save energy Steam production consumes the most energy. To help minimise the energy used, follow the advice below: Réglez la température sur 'max'.



[You're reading an excerpt. Click here to read official BOSCH](http://yourpdfguides.com/dref/5906652)

[SENSIXX B4 user guide](http://yourpdfguides.com/dref/5906652)

<http://yourpdfguides.com/dref/5906652>