



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for BOSCH SMS40E12EU. You'll find the answers to all your questions on the BOSCH SMS40E12EU in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual BOSCH SMS40E12EU User guide BOSCH SMS40E12EU Operating instructions BOSCH SMS40E12EU Instructions for use BOSCH SMS40E12EU Instruction manual BOSCH SMS40E12EU

Dishwasher summary of instructions (en)

9000 397 888 (8809) 6-40 EG

1 Brief and handy everything your dishwasher needs. Before using for the first time, read the operating instructions!

2 Filling the salt dispenser

3 Adding rinse aid

4 Adding detergent

5 Switching on the appliance

6 Select programme

7 Additional options **

8 Start programme Here we go ...

9 Switch off the appliance Everything o.k. ...

Adjusting the water softening system *

Water hardness (°dH)	Parish (°dH)	Reset	Set value on the display
0-8	soft	0-1.1	H00
9-10	soft	1.2-1.4	H01
11-12	medium	1.5-1.8	H02
13-15	medium	1.9-2.1	H03
16-20	medium	2.2-2.9	H04
21-25	hard	3.0-3.7	H05
26-35	hard	3.9-5.4	H06
36-42	hard	5.5-9.9	H07

*only before the first wash or if the water hardness has been changed

Quickly sorted ...

How to adjust the water softening system

- Switch on ON/OFF switch.
- Press and hold down the Start button A.
- Rotate programme selector B until H00 is indicated on the digital display.
- Release button.
- The factory-set value H04 is lit on the digital display.
- Rotate programme selector B until the required value is indicated on the digital display.
- Press Start button A.
- The set value is saved.

Dissolves limescale (not necessary for set value 0) ...

Unscrew cover. Fill the salt dispenser with water before the first wash only. Add salt (never add detergent!). Screw on the cover. Wash immediately.

Spick and span ...

Press mark 1, lift up cover 2. Refill if rinse-aid refill indicator is lit! Adding rinse aid. Screw on the cover. CLICK!

A lot of dirt, a lot of detergent ...

If required, open the cover (press button). Attention: Combination products are not suitable for all programmes, follow manufacturer's instructions. Adding detergent. Slide cover shut, press. FLOP!

Overview of programmes

The max. possible number of programmes is illustrated in this overview. The corresponding programmes for your appliance can be found on the fascia.

The programme data has been measured in the laboratory according to European standard EN 50242. Deviations are possible in practice. * half normal load

	Intensive 70	Normal 65	Eco 50	Gentle 40	Quick 45	Prerinse
Duration: h:m/s	2:15	2:10	2:20	1:10	0:29*	0:15
Energy Consumption: kWh	1.50	1.45	1.05	0.80	0.80	0.05
Water consumption: lt/litres	15	14	12	13	10	4

Additional options **

- Express Wash (VarioSpeed)** ... is obtained by increased energy consumption at a constant cleaning and drying performance.
- Half load** ... for a few items, saves water, energy and time
- IntensiveZone** ... perfect for a mixed load. Washing pressure and washing temperature are increased slightly.
- Hygiene** ... The temperature is increased during the rinsing process. This increases the hygienic status.
- Extra drying** ... improves the drying result by increased temperature in the final rinse. (Please take care with delicate dishes)

** depending on model



[You're reading an excerpt. Click here to read official BOSCH SMS40E12EU user guide](http://yourpdfguides.com/dref/3565745)
<http://yourpdfguides.com/dref/3565745>

Manual abstract:

.. Quickly sorted ... How to adjust the water softening system AB Switch on ON/OFF switch. Press and hold down the Start button A. Rotate programme selector B until H:0. is indicated on the digital display. Release button.

The factory-set value H:04 is lit on the digital display. @@ Press Start button A. The set value is saved. * only before the first wash or if the water hardness has been changed Filling the salt dispenser Dissolves limescale (not necessary for set value 0!) ..

. Unscrew cover. Fill the salt dispenser with water before the first wash only. Add salt (never add detergent!). Screw on the cover.

Wash immediately. Adding rinse aid Spick and span ... Press mark 1, lift up cover 2. Refill if rinse-aid refill indicator is lit! Adding rinse aid. Screw on the cover. @@@@Adding detergent. Slide cover shut, press. @@possible number of programmes is illustrated in this overview.

The corresponding programmes for your appliance can be found on the fascia. Duration: hs/mins 9000 397 888 (8809) The programme data has been measured in the laboratory according to European standard EN 50242. Deviations are possible in practice. * half normal load 2:15 1,50 Water consumption in litres 15 Energy Consumption: kWh 2:10 1,45 14 2:20 1,05 12 1:10 0,80 13 0:29* 0,80 10 0:15 0,05 4 Start programme Here we go ... Additional options
** Express Wash (VarioSpeed) ... @@Half load .

.. @@perfect for a mixed load. Washing pressure and washing temperature are increased slightly. Hygiene .

.. The temperature is increased during the rinsing process. This increases the hygiene status. Extra drying .

.. @@... ** depending on model Maintenance and care Filters ... @@insert ..

. @@@@Follow manufacturer's instructions (detergent). Select a more intensive programme. Clean the spray arms (see above). Clean the filters (see above). @@1. Unscrew water connection. 2. Clean filter in the water connection. 3.

Flow rate must be min. 10 l/min. when water supply is open. If the flow rate is less, replace the supply fitting. Install supply hose without kinks.

Display "E:24" and " " is lit Waste water hose is blocked or kinked Cover not attached to waste water pump Install waste water hose without kinks. Attach cover (see above). Stains and streaks Clean waste-water pump (see above). Milky deposits on the utensils (can be removed) Rinse-aid dosage too high/too low

Streaks: reduce dosage. @@Refill with salt.

Use dishwasher-proof glasses. @@@@Cutlery not rust-resistant. Hard knife blades are more susceptible Extraneous rust Use dishwasher-proof cutlery. Never wash rusting parts in the appliance. @@Discoloration is harmless; subsequent rinse cycles will cause it to fade. Rust on the cutlery More information can be found in the operating instructions Terminating the programme ... While the programme is running, press the START button for approx. 3 sec.

(Reset). The numerical display indicates "0:01" approx. .



[You're reading an excerpt. Click here to read official BOSCH SMS40E12EU user guide](http://yourpdfguides.com/dref/3565745)

<http://yourpdfguides.com/dref/3565745>