



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for BOSCH SMS69N48EU. You'll find the answers to all your questions on the BOSCH SMS69N48EU in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual BOSCH SMS69N48EU
User guide BOSCH SMS69N48EU
Operating instructions BOSCH SMS69N48EU
Instructions for use BOSCH SMS69N48EU
Instruction manual BOSCH SMS69N48EU



en Operating Instructions



[You're reading an excerpt. Click here to read official BOSCH SMS69N48EU user guide](http://yourpdfguides.com/dref/5583412)
<http://yourpdfguides.com/dref/5583412>

Manual abstract:

.....
.... 4 Safety instructions .
.....
.... 4 Before you switch ON the appliance Delivery.

.....
.....
.. Installation. . .
.....

..... In daily use . .
.....
.....
..... Door lock . .

.....
.....
.... Button lock .
.....

..... Damage .
.....
.....
.....

.. Disposal
.....
.....
.... 4 .5 .5 .6 .6 .6 .

7.7 Unloading the dishwasher Cups and glasses . . .
.....
.....
Pans

.....
.... Cutlery drawer. .
.....
..... Folding spikes .

.....
.... Small accessories holder .
.....
.. Adjusting the height of the basket 14 .

14 . 14 . 15 . 15 . 16 . 16 Detergent
.....
.....
.. 17 Adding detergent

..... 17 Combination detergent . . .
.....
.... 18 Overview of programmes . .
.. 19 Programme selection

.... 20 Information for test institutes
.. 20 Additional options
.....
.. 20 Express WaschPlus/ SpeedPerfectPlus (VarioSpeedPlus) . 20 Half load

.....
.... 20 HygienePlus .
.....
.....

operated safely. If there is no information or if the installation instructions do not include the appropriate information, contact the manufacturer of these appliances to ensure that the dishwasher can be installed above or below these appliances.

5 en Safety instructions If you cannot obtain any information from the manufacturer, you must not install the dishwasher above or below these appliances. If you install a microwave oven above the dishwasher, the microwave oven may be damaged. Install built-under or integratable appliances only under continuous worktops which have been screwed to adjacent cupboards to ensure stability. Do not install the appliance near heat sources (radiators, heat storage tanks, cookers or other appliances which generate heat) and do not install under a hob. After installing the appliance, ensure that the plug is easily accessible. (See Electrical connection) Some models: The plastic housing on the water connection contains an electric valve, the connecting cables are in the supply hose. Do not cut through this hose, do not immerse the plastic housing in water. In daily use Read and observe the safety information and instructions for use on the packaging for cleaning and rinsing agents. Childproof lock (door lock) * Do rlock The description of the childproof lock is at the back in the envelope. * depending on model Childproof lock (button lock) Butonlock You can secure your appliance from being unintentionally the programme terminated (e.

g. improper operation by children). Activating the button lock: 1. Start the required programme. 2. Hold down the button + for approx. 4 sec. until this is indicated on the digital display. If any button is pressed while the programme is running, this is indicated on the digital display. It is not possible to end (Reset) the programme.

6 Safety instructions en Deactivating the button lock: Hold down the button + for approx. 4 sec. until the display goes out. When the programme ends (: on the digital display), the button lock is cancelled. If there is a power failure, the button lock is retained.

Whenever a programme is restarted, the button lock must be reactivated. Damage The appliance may be repaired and opened up by a technician only. To do this, disconnect the appliance from the power supply. Pull out the mains plug or switch off the fuse. Turn off the tap.

If the appliance is damaged, especially the fascia (cracks, holes, broken buttons), or the door function is impaired, stop operating the appliance. Pull out mains plug or switch off fuse. Turn off tap, call customer service. Disposal 1. Make redundant appliances unusable to prevent subsequent accidents.



[You're reading an excerpt. Click here to read official BOSCH](http://yourpdfguides.com/dref/5583412)

[SMS69N48EU user guide](http://yourpdfguides.com/dref/5583412)

<http://yourpdfguides.com/dref/5583412>

2. Dispose of the appliance in an environmentally friendly manner. m Warning Risk of injury! To prevent injuries, e.g. caused by stumbling, open the dishwasher only briefly in order to load and unload the dishwasher.

Knives and other utensils with sharp points must be placed horizontally in the cutlery drawer. Do not lean or sit on the open door. In the case of free-standing appliances, ensure that the baskets are not overloaded. If the appliance is not in a cavity and a side panel is accessible, the door hinge area must be covered at the side for reasons of safety (risk of injury). The covers are available as optional accessories from customer service or specialist outlets. m Warning Risk of explosion! Do not add any solvents to the washing chamber. Danger of explosion! 7 en Safety instructions m Warning Risk of scalding! Open the door carefully when the programme is still running. There is a risk of hot water spraying out of the appliance. m Warning Risks to children! If fitted, use the childproof lock. An exact description can be found in the back of the enve lope.

Do not allow children to play with or operate the appliance. Keep children away from detergents and rinse aid. These may cause chemical burns in the mouth, throat and eyes or asphyxiation. Keep children away from open dishwasher. The water in the rinsing compartment is not drinking water and could contain detergent residue.

Ensure that children do not place fingers in the tablet collecting tray 1B. Small fingers could become caught in the slots. When opening and closing the door on an eye-level appliance, ensure that children do not become jammed or crushed between the appliance door and the cupboard door below. Children could become locked in the appliance (danger of suffocation) or get into another dangerous situation. Redundant appliances: Pull out the mains plug, sever and dispose of the power cord.

Destroy the door lock so that the door can no longer be closed. 8 Protection of the environment en Protection of the environment nco oteP i tr ef ho t m nv on ri te n e gN tt ie Getting to know your appliance w o n kt o r u o y eip ca nl a Both the packaging of new appliances and the old appliances themselves contain valuable raw materials and recyclable materials. Please dispose of the individual parts separated according to type. Please ask your dealer or inquire at your local authority about current means of disposal. Diagrams of the control panel and the interior of the appliance can be found in the envelope at the front. Individual positions are referred to in the text. Control panel (ON/OFF switch 0 Programme buttons ** 8 Display "Check water supply" @ Salt refill indicator H Rinse aid refill indicator P Door opener X Timer programming * `Additional options ** h START button)" Programme sequence indicator)* Digital display * depending on model ** Number depending on model Packaging All plastic parts of the appliance are identified with internationally standardised abbreviations (e.g. >PS< polystyrene). Therefore, plastic waste can be sorted out when the appliance is being disposed of.

Please follow the safety instructions under "Delivery". Old appliances Please follow the safety instructions under "Disposal of your appliance". This appliance is identified according to the European guideline 2012/19/EU on waste electrical and electronic equipment – WEEE. The guideline specifies the framework for an EU-wide valid return and re-use of old appliances. 9 en Water softening system/Special salt Appliance interior 1" Interior light * 1* Cutlery drawer 12 Top basket 1: Top spray arm 1B Tablet collecting tray 1J Bottom s of rinse aid can be set from : to : . Please set rinse aid on : to obtain very good drying results (: is already set in factory). Change this setting, only if streaks (select lower setting) or water stains (select higher setting) are left on the utensils. 1. Close the door. 2.

Switch on ON/OFF switch (. 12 Utensils 3. Hold down programme button # and press START button h until : ...
is indicated on the digital display. 4. Release both buttons. @@5.

Press programme button # until the factory set value : is indicated on the digital display)*. To change the setting: 1. slash; Setting 3 max. ø 16 cm 18.5 cm 21 cm Bottom basket 30 cm 27.5 cm 25 cm 3. To raise the basket, hold the basket on the sides of the upper edge and lift it up. 4. Before re-inserting the basket again, ensure that it is at the same height on both sides. Otherwise, the appliance door cannot be closed and the upper spray arm will not be connected to the water circuit.

Appliance height 86.5 cm Top basket Setting 1 max. ø Setting 2 max. ø Setting 3 max. ø 18 cm 20.5 cm 23 cm Bottom basket 33 cm 30.5 cm 28 cm 16 Detergent en Detergent trt nD e ge e Adding detergent 1. If the detergent dispenser 9" is still closed, press the lock 9* to open the detergent dispenser. Pour detergent into the dry detergent dispenser 9" only (insert tablet flat, not on its edge). Dosage: see manufacturer's instructions on the packaging. The graduated detergent dispenser 9" helps you add the correct amount of powder or liquid detergent. Usually 20 ml–25 ml are adequate for normal soiling. If using tablets, one tablet is adequate. You can use tablets as well as powder or liquid detergents for dishwashers, but never use washing up liquid. The dosage can be individually adjusted with powder or a liquid detergent according to the degree of soiling.

Tablets contain an adequately large amount of active ingredients for all cleaning tasks. Modern, powerful detergents predominantly use a lowalkaline formulation with phosphate and enzymes. Phosphates bond the lime in the water. Enzymes break down starch and remove protein. Phosphate-free detergents are less frequent.

These have a slightly weaker lime bonding capacity and require a higher dosage. To remove coloured stains (e.g. tea, tomato sauce), oxygenbased bleaching agents are usually used. Note To ensure a good washing result, always follow the instructions on the detergent packaging! If you have further questions, we recommend that you contact the detergent manufacturers' helpline. 2. Close the cover on the detergent dispenser by sliding it up until the lock engages without difficulty. m Warning – Read and observe the safety information and instructions for use on the packaging for cleaning and rinsing agents. The detergent dispenser opens automatically at the optimum time depending on the programme. The powder or liquid detergent is distributed in the appliance and is dissolved, the tablet falls into the tablet collecting tray where it dissolves in doses.

17 en Detergent Notes You will obtain optimum rinsing and drying results by using solo detergents and applying salt and rinse aid separately. If programmes are short, tablets may not have full cleaning effect due to different dissolving properties and there may even be undissolved detergent residue.



[You're reading an excerpt. Click here to read official BOSCH SMS69N48EU user guide](http://yourpdfguides.com/dref/5583412)
<http://yourpdfguides.com/dref/5583412>

It is recommended to use washing powder for these programmes. The Intensive programme (on some models) requires one tab only. When using washing powder, you can apply some of this cleaning agent to the inside of the appliance's door. Even if the rinse-aid and/or salt refill indicator is lit, the rinse programme will run correctly with combined detergents. If using detergents in a water-soluble protective cover: Take hold of the cover with dry hands only and put the detergent into an absolutely dry detergent dispenser only, otherwise the detergent may stick. If you switch from combined detergents to solo detergents, ensure that the water softening system and amount of rinse aid have been set to the correct value. Tip If the utensils are only lightly soiled, slightly less than the indicated amount of detergent is usually adequate. Suitable detergents and care products can be purchased online via our website or via customer service (see back page).

Combination detergent Apart from conventional detergents (Solo), a number of products are offered with additional functions. These products contain not only the detergent but also rinse-aid and salt replacement substances (3in1) and, depending on the combination (4in1, 5in1, etc.), additional components such as glass protection or stainless steel cleaner. Combination detergents function only up to a specific degree of hardness (usually 21°dH). Over this limit salt and rinse-aid must be added.

As soon as combined detergents are used, the rinse programme is adjusted automatically to ensure the best possible rinsing and drying result. **m Warning – Do not place small parts for washing in the tablet collecting tray 1B; this prevents the tablet from dissolving evenly.** **m Warning – If you want to add more utensils after the programme has started, do not use the tablet collecting tray 1B as a handle for the upper basket. The tablet could already be there and you will touch the partially dissolved tablet.** **18 Overview of programmes en Overview of programmes m ov apfir rr O g v eov me s The max.** possible number of programmes is illustrated in this overview. The corresponding programmes and their arrangement can be found on the fascia. **Type of utensils** Type of soiling **Programme** Possible additional options **Programme sequence** pots and pans, non-sensitive utensils and cutlery very adhesive burned **Intensive 70° in or dried-on food remnants containing starch or protein ±° Á Á Auto 45° - 65° all Prerinse Clean 70° Intermediate rinse Final rinse 65° Drying Is optimised according to the soiling with the aid of sensors. Is optimised according to the soiling with the aid of sensors. Prerinse Clean 50° Intermediate rinse Final rinse 65° Drying Pre-rinse Clean 40° Intermediate rinse Final rinse 60° Drying Clean 45° Intermediate rinse Final rinse 55° Prerinse all Auto 45° - 65° all mixed utensils and cutlery part dried, common household food remnants á/à Eco 50° all sensitive utensils, cutlery, slightly adhesive, temperaturefresh food remnants sensitive plastic and glasses é/è Glass 40° IntensivZone Express Wash/ Speed Perfect (VarioSpeed) Half load Extra drying Extra drying ñ/ð Quick 45° all types of utensils cold rinsing, intermediate cleaning Prerinse ù/ø none **19 en Additional options Half load Programme selection** You can select a suitable programme according to the type of utensils and degree of soiling. § **Half load** * Information for test institutes Test institutes receive the information for comparability tests (e.g. according to EN60436). These are the conditions for conducting the tests, however these are not the results or consumption values. Request by e-mail to: dishwasher@test-appliances.**

com The product number (E no.) and the production number (FD) are required which you can find on the rating plate 92 on the appliance door. If you have only a few items to wash (e.g. glasses, cups, plates), you can switch to "half load". This will save water, energy and time. It is recommended to put a little less detergent in the detergent dispenser than for a full load. **HygienePlus * Hygien Plus** This function increases the temperatures and retains them for an extra long time to obtain a defined disinfection performance. Continuous use of this function increases the hygiene status. This additional option is ideal for

g. chopping boards and baby bottles. **Intensive zone * Intensivezone** Additional options **liA a ni otd sit np oo** * depending on model Additional options can be set with the buttons **` Perfect for a mixed load. @@@@20% to 66% depending on the selected rinse programme.** @@@@They refer to normal conditions and the water hardness set value : . Different influencing factors such as e.g. @@This conserves environmental resources and not least saves you money. @@@@The Aqua sensor is used according to the programme. @@@@5% Your dishes are being rinsed. @@The running time is determined during the programme by the water temperature, the number of utensils as well as the degree of soiling and may vary (depending on the selected programme). Switching on the appliance 1. Turn on the tap fully. 2. Switch on ON/OFF switch (. The Eco 50° programme display flashes. @@The expected programme duration flashes on the digital display)*. 3. Press the START button h.

@@1. Close the door. 2. Switch on ON/OFF switch (. 3. Press button X + until the digital display)* jumps to : . 4. @@5. Press START button h, timer programming is activated. 6.

@@@@The setting can be selected from : to : . : Appliance does not switch off automatically. @@When the door is closed the light is off. @@@@: Appliance switches off after 1 min. : Appliance switches off after 120 min.

1. Close the door. 2. Switch on ON/OFF switch (. 3.

Hold down programme button # and press START button h until : ... is indicated on the digital display. 4. Release both buttons. @@5. Keep pressing programme button # until the value : ...

@@Press programme button 3. @@2. Press START button h. @@Switch off ON/OFF switch (. 2. Turn off the tap (not applicable if Aqua-Stop fitted). 3. Remove the utensils when they have cooled down. @@@@Press START button h for approx. 3 sec.

The numerical display)* indicates : . 2. The programme sequence lasts approx. 1 min. On the digital display)* is indicated : .

3. @@@@The running time may increase slightly. (Caution if utensils are delicate!) 1. Close the door. 2.

Switch on ON/OFF switch (. 3. @@is indicated. 4. Release both buttons. @@5. @@Switch off ON/OFF switch (. The LEDs go out. The programme is saved. @@@@2.

@@The manufacturer is not liable for any consequential damage. Regularly wipe the front of the appliance and fascia with a damp cloth; water and a little washing up liquid are adequate. Do not use sponges with a rough surface or abrasive detergents, as these could scratch the surfaces. Stainless steel appliances: To prevent corrosion, avoid using sponge cloths or wash them out thoroughly several times before using for the first time.



[You're reading an excerpt. Click here to read official BOSCH SMS69N48EU user guide](http://yourpdfguides.com/dref/5583412)
<http://yourpdfguides.com/dref/5583412>

To change the setting, 1. Press the button 3 to switch the Intensive drying on : or off : . 2. Press START button h. The set value is saved. Cleaning and maintenance gC ne i nl a d n a en cm nti aa e A regular inspection and maintenance of your machine will help to prevent faults. This saves time and prevents problems. m Warning – Health hazard Never use other domestic detergents, e.g. containing chlorine! Overall condition of the machine Check spray arm for grease and limescale deposits. If you find such deposits: Fill detergent dispenser with detergent. Start the appliance without utensils in the programme with the highest rinsing temperature. Clean the appliance with detergents/ appliance cleaners which are particularly suitable for use with dishwashers. To ensure that the door seal always remains clean and hygienic, regularly clean it with a damp cloth and a little washing-up liquid. If the appliance is switched off for a prolonged period, leave the door ajar to prevent the formation of an unpleasant odour. Special salt and rinse aid Check the refill indicators @ and H.

If required, refill salt and/or rinse aid. 24 Cleaning and maintenance en Filters The filters IZ keep large foreign objects in the rinsing water away from the pump. These foreign objects may occasionally block the filters. The filter system consists of a coarse filter, a flat fine filter and a microfilter. 1. After each washing cycle check the filters for residue. 2. Unscrew filter cylinder as illustrated and take out filter system. Spray arms Limescale and contaminants in the rinsing water may block nozzles and bearings on the spray arms 1: and 1J. 1.

Check outlet nozzles on the spray arms for blockages. 2. Unscrew the upper spray arm 1: . 3. Remove the lower spray arm 1J upwards. 4. Clean spray arms under running water. 5. Re-engage or screw on spray arms. 3.

Remove any residue and clean filters under running water. 4. Re-install filter system in reverse sequence and ensure that the arrow marks are opposite each other after closing the filter system. 25 en Fault, what to do? Fault, what to do? ,IF l u w t a h o t d ? o Experience has shown that you can rectify most faults which occur in daily operation yourself. This ensures that the machine is quickly available to you again.

In the following overview you can find possible causes of malfunctions and helpful information for rectifying them. Note If the appliance stops during dishwashing or does not start for no obvious reason, first run the Abort programme function (Reset). (See chapter entitled “Operating the appliance”) In this case: 1. First always disconnect the appliance from the power supply. 2.

Take out top basket 12 and bottom basket 1b. 3. Remove the filters IZ. 4. Scoop out water, use a sponge if required. 5. Prise out the white pump cover (as illustrated) using a spoon. Grip the cover on the crosspiece and lift diagonally inwards. Remove cover completely. m Warning – Don’t forget: Repairs may be carried out by technicians only.

If a component has to be replaced, ensure that only original spare parts are used. Improper repairs or use of non-original spare parts may cause considerable damage and put the user at considerable risk. Waste water pump Large food remnants or foreign objects which were not captured by the filters may block the waste water pump. The rinsing water will then be above the filter. 6. Check impeller wheel and remove any foreign objects. 7. @@8. Install filters. 9.

@@Cause Supply hose kinked. Tap turned off. Tap jammed or calcified. Remedial action Install supply hose without kinks. Turn on the tap. Turn on the tap. Flow rate must be min. 10 l/min. when water supply is open. Filter in the water supply blocked.

Switch off the appliance and pull out the mains plug. Turn off the tap. Unscrew water connection. Error code : Error code : is lit. is lit. Filters IZ are soiled or blocked. Waste water hose is blocked or kinked. Siphon connection still sealed. @@Mains voltage too low. Clean filter in the supply hose.

Screw water connection on again. Check for leaks. Reconnect power supply. Switch on the appliance. Clean filters. @@Check connection to siphon and open if required. Lock cover correctly. (See Waste water pump) Clean pump and lock cover correctly. @@Cause A technical fault has probably occurred.

Remedial action Switch off appliances with the ON/OFF switch (.

After a short time restart the appliance. If the problem recurs, turn off the tap and pull out the mains plug. Call customer service and mention the error code. Close the door. @@Refill rinse aid.

Refill with special salt. Use different special salt. @@Check refill indicator, levels. Clean filters and area underneath (see Waste water pump). @@@@and/or rinse-aid H is lit.

No salt. Sensor does not detect salt tablets. Refill indicator for salt @ Refill indicator switched off. and/or rinse-aid H is not lit. There is still enough special salt/ rinse aid available. @@of the programme. The programme has not yet ended. 28 Fault, what to do? Fault Utensils not dry. Cause No or too little rinse aid in the dispenser. Programme selected without drying.

Water collecting in depressions on the utensils and cutlery. Remedial action Refill rinse aid. @@Arrange utensils in a sloping position, arrange affected utensils as sloping as possible. en Use different combination detergent with better drying performance. Use of rinse aid also increases the drying performance. Intensive drying to increase Activate intensive drying (see Operating drying not activated. the appliance) Utensils were removed too early Wait until program ends or wait until 30 min or drying process had not ended after program ends before removing yet. utensils. The eco rinse aid used has a poor Use a proprietary rinse aid. Eco products are drying performance.

much less effective. Plastic utensils not dry. Special properties of plastic. Plastic has a lower heat storage capacity and therefore dries less well. Cutlery not dry.

Cutlery not arranged properly Separate cutlery if possible, prevent contact in the cutlery basket. points. Cutlery not arranged properly Arrange cutlery properly and separate if in the cutlery drawer. possible. Appliance interior wet after No appliance fault.

On account of the “Condensation drying” rinse cycle. principle, water droplets are physically induced and required in the container. The humidity in the air condenses on the inner walls of the dishwasher, drains and is pumped out. The combined detergent used has a poor drying performance. 29 en Fault, what to do? Cause Utensils placed too closely together, utensils basket overfilled. Spray arm rotation obstructed. Spray arm nozzles blocked. Filters IZ dirty. Filters IZ inserted incorrectly and/or not engaged. Rinse programme too weak.

Utensils precleaned too intensely; sensors therefore decide on weak programme sequence. Stubborn soiling cannot be completely removed. Tall narrow receptacles in corner areas are not rinsed adequately. Remedial action Arrange utensils with adequate clearance between them ensuring that the spray jets can reach the surface of the utensils.



[You're reading an excerpt. Click here to read official BOSCH](http://yourpdfguides.com/dref/5583412)

[SMS69N48EU user guide](http://yourpdfguides.com/dref/5583412)

<http://yourpdfguides.com/dref/5583412>

Prevent contact points. Arrange utensils so that the spray arm can rotate without obstruction. Clean the spray arm nozzles, (See Cleaning and maintenance). Clean filters, (see Cleaning and maintenance). Insert and engage filters correctly. Select a more intensive rinse programme.

Do not prerinse utensils. Remove only large food remnants. Recommended programme Eco 50° or Intensive. Fault Food remnants on the utensils. Detergent residue Do not place hollow receptacles too obliquely and do not place in the corner area.

Top basket 12 on right and left Set top basket to same height using side not set to same height. levers. Detergent dispenser cover Detergent dispenser cover must not be blocked by utensils and therefore obstructed by utensils. does not open fully. Do not place utensils or fragrance dispenser in the tablet collecting tray.

Detergent dispenser cover Tablet must be inserted flat and not upright. blocked by the tablet. Tablets used in the quick or short Dissolving time of tablets too long for programme. a quick or short programme. Dissolving time of the detergent Use a detergent powder or select a more is not reached in the selected intensive programme. short programme. Change detergent. Washing effect and dissolving performance are reduced after a prolonged storage time or detergent is very lumpy. 30 Fault, what to do? Fault Water stains on plastic parts Cause Droplet formation on plastic surface is physically unavoidable. After drying, water stains are visible.

en Remedial action Use a more intensive programme (more water changes). Arrange utensils in a sloping position. Use rinse aid. If required, increase softening setting. Washable or water-soluble Detergent substances are Change detergent brand. coatings in the container or deposited. These coatings cannot Clean appliance mechanically. on the door. usually be removed with chemicals (appliance cleaner, ..

.). Increase softening setting and change If there is a "white coating" on the container floor, the water detergent if required. softening system has been set marginally. Salt dispenser cover IR not Close salt dispenser cover correctly.

closed. Only for glasses: Initial glass See Glass and utensil damage. corrosion – can only apparently be wiped off. White, stubborn coatings; Detergent substances are Change detergent brand. limescale on the utensils, deposited.

These coatings cannot Clean appliance mechanically. container or door. usually be removed with chemicals (appliance cleaner, ...). Hardness range incorrectly set or Set water softening system according water hardness greater than to instructions for use or top up salt. 8.9 mmol/l. Set water softening system according 3 in 1 detergent or bio/eco detergent not effective enough.

to instructions for use or use separate detergents (proprietary detergent, salt, rinse aid). Underdosing of detergent. Increase detergent dosage or change detergent. Too weak rinse programme Select a more intensive rinse programme. selected. Tea or lipstick residue on Too low rinsing temperature. Select programme with higher washing the utensils. temperature. Too little or unsuitable detergent. Use suitable detergent at correct dosage.

Utensils precleaned too intensely; Do not prerinse utensils. Remove only large sensors therefore decide on food remnants. weak programme sequence. Recommended programme Eco 50° Stubborn soiling cannot be completely removed. 31 en Fault, what to do? Cause Film formation consisting of ingredients from vegetables (e.

g. cabbage, celery, potatoes, noodles, ...) or the tap water (e.

g. manganese). Film formation caused by metallic components on silver or aluminium utensils. Film formation consisting of ingredients from food remnants and substances from the tap water (limescale), "soapy" Remedial action Can be partly removed with machine cleaner or by mechanical cleaning. Coatings are harmless. Fault Coloured (blue, yellow, brown), difficult to remove to non-removable coatings in the appliance or on stainless steel utensils. Can be partly removed with machine cleaner or by mechanical cleaning. Coloured (yellow, orange, brown), easily removable deposits inside the appliance (mainly in the floor area) Plastic parts discoloured. Removable streaks on glasses, glasses with metallic appearance and cutlery. Initial or existing, irreversible clouding of glass.

Check function of the water softening system (refill with salt) or, if using combined detergents (tablets), activate water softening system (see chapter Water softening system/Special salt) Too low rinsing temperature. Select programme with higher washing temperature. Utensils precleaned too intensely; Do not prerinse utensils. Remove only large sensors therefore decide on food remnants. weak programme sequence. Recommended programme Eco 50° Stubborn soiling cannot be completely removed. Too much rinse aid. Set rinse aid amount to lower setting. No rinse aid added or setting too Add rinse aid and check dosage low. (recommended setting 4-5).

Detergent residue in the final Detergent dispenser cover must not be rinse programme section. obstructed by utensils. Detergent dispenser cover Do not place utensils or fragrance dispenser blocked by utensils (cover does in the tablet collecting tray. not open fully). Utensils precleaned too intensely; Do not prerinse utensils.

Remove only large sensors therefore decide on food remnants. weak programme sequence. Recommended programme Eco 50° Stubborn soiling cannot be completely removed. Glasses not dishwasher-proof, Use dishwasher-proof glasses. only suitable for dishwasher.

Avoid long steam phase (standing time after wash cycle ends). Use wash cycle at lower temperature. Set water softening system according to the water hardness (if required one setting lower). Use detergent with glass protection component. 32 Fault, what to do? Fault Rust spots on the cutlery. Cause Cutlery not adequately rustresistant. Knife blades are frequently more severely affected. Cutlery will also rust if rusting parts are rinsed at the same time (pan handles, damaged utensil baskets, etc.). Salt content in the rinsing water too high, as salt dispenser lock not fastened firmly or salt was spilled while being refilled.

The mains fuse has tripped. Power cord not inserted. Remedial action Use corrosion-resistant cutlery. en Do not wash rusting parts. Fasten salt dispenser lock firmly or remove spilled salt. The appliance does not start. Programme starts automatically. The door is difficult to open. Door cannot be closed. Cover on the detergent dispenser cannot be closed.

Detergent residue in the detergent dispenser or in the tablet collecting tray. Check mains fuse. Ensure that the power cord is plugged all the way into the back of the appliance and into the socket. Check that the socket functions. The appliance door has not been Close the door.

shut properly. You did not wait until programme Perform reset. ended. (See Terminating the programme). Child-proof lock is activated. Deactivate childproof lock. (See instructions for use at the back) Door lock has been activated.



[You're reading an excerpt. Click here to read official BOSCH](http://yourpdfguides.com/dref/5583412)

[SMS69N48EU user guide](http://yourpdfguides.com/dref/5583412)

<http://yourpdfguides.com/dref/5583412>

Close door with increased force. Door cannot be closed due to Check appliance installation: Door or installation. attached parts must close without obstruction. Detergent dispenser or cover Remove detergent residue. guide blocked by sticky detergent residue. Spray arms blocked by utensils, Ensure that the spray arms can rotate freely. therefore detergent is not rinsed out. The detergent dispenser was Pour detergent into the dry detergent damp when filled.

dispenser only. 33 en Fault, what to do? Cause Door not closed properly. Do not place utensils or fragrance dispenser in the tablet collecting tray. Top basket presses against inner door and prevents door from being closed securely. Power and/or water supply interrupted. Depends on domestic installation, as appliance is not defective. No effect on appliance function. Spray arm strikes the utensils, utensils not positioned correctly. If there is a low load, the water jets strike the washing tank directly. Light utensils move during the wash cycle.

Handwash liquid in the rinse aid dispenser. Rinse aid spilled. Remedial action Close the door. Check whether rear panel is being pressed in, e.g. by socket or by hose holder which has not been removed. Fault Appliance stops in the programme or programme is interrupted. Restore power and/or water supply. No remedial action possible. Filling valves making striking noises.

Knocking or rattling noise. Position utensils so that the spray arms do not strike the utensils. Load the appliance with more utensils or distribute the utensils more evenly in the dishwasher. Arrange light utensils securely. Immediately refill rinse aid dispenser with rinse aid. Remove rinse aid with a cloth. Unusual foam formation. 34 Customer service en Customer service m ou C t s r e v s cr ie If you are unable to rectify the fault, please contact your customer service. We always find a suitable solution, even to avoid unnecessary visits by technicians. Contact information for your nearest customer service can be found on the back of these instructions for use or on the enclosed customer service list.

When calling, please state the appliance number (ENr. = 1) and the production number (FD = 2) which can be found on the rating plate 92 on the appliance door. Installation and connection na as otltn i d n a nc oto in e c The dishwasher must be connected correctly, otherwise it will not function properly.

@@Install the appliance in the correct sequence: 1. Checking appliance on delivery 2. Installing the appliance 3. Waste water connection 4. Drinking water connection 5. Electrical connection Rely on the competence of the manufacturer. Contact us.

@@@This may cause small water stains. @@Level the appliance with the aid of the height-adjustable feet. Ensure that the appliance is situated securely on the floor. A built-under or integrated appliance which is installed subsequently as a free-standing appliance must be secured to prevent it from overturning, e.g.

by screwing it to the wall or by installing it under a continuous worktop which is screwed to adjacent cupboards. The appliance can easily be installed in a fitted kitchen between wooden and plastic walls. Technical specifications Weight: max. 60 kg Voltage: 220–240 V, 50 Hz or 60 Hz Connected load: 2.0–2.4 kW Fuse: 10/16 A (UK 13A) Power input: switched off 0.1 W not switched off 0.1 W Water pressure: at least 0.05 MPa (0.5 bar), maximum 1 MPa (10 bar). At a higher water pressure: connect pressure-reducing valve ahead. Inlet rate: minimum 10 litres/minute Water temperature: cold water; hot water max. temperature 60 °C. Waste-water connection 1. @@If required, fit a siphon with an drainage connection.

2. @@@@Ensure that the drinking water connection is not kinked, crushed or twisted. 2. When replacing the appliance, always use a new water supply hose. Water pressure: At least 0.05 MPa (0.5 bar), maximum 1 MPa (10 bar). At a higher water pressure: connect pressure-reducing valve ahead. Inlet rate: Minimum 10 litres/minute Water temperature: Cold water; hot water max. temperature 60 °C.

Setting hot water: 1. Close the door. 2. Switch on ON/OFF switch (. 3.

Hold down programme button # and press START button h until : ... is indicated on the digital display. 4.

Release both buttons. @@5. Press programme button # until the factory set value : is indicated on the digital display)*. To change the setting: 1. By pressing the 3 button, you can switch the hot water setting off : or on : . 2. Press START button h. The set value is saved. Warm water connection * Warmwaterconnection Electrical connection Connect the appliance to an alternating current only, ranging from 220 V to 240 V and 50 Hz or 60 Hz via a correctly installed socket with protective earth conductor. See rating plate for required fusing 92.

The socket must be near the appliance and freely accessible following installation. If the plug is not freely accessible, an allpole disconnecter with a contact opening of at least 3 mm must be fitted on the installation side to satisfy the relevant safety instructions. The connection may be modified by technicians only.

A power cord extension may be purchased from customer service only. * depending on model The dishwasher can be connected to cold or hot water up to max. 60 °C. Connection to hot water is recommended if the hot water can be supplied by energetically favourable means and from a suitable installation, e.g. solar heating system with circulation line. This will save energy and time.

The hot water setting : allows you to adjust your appliance optimally to operation with hot water. It is recommended to have a water temperature (temperature of the incoming water) of at least 40 °C and no more than 60 °C. It is not recommended to connect the appliance to hot water if the water is supplied from an electric boiler. 37 en Installation and connection Use only a residual current operated circuit-breaker which features the symbol . Only this extension guarantees compliance with the currently valid regulations.

The appliance features a water damage protection system. Please note the system will not function unless the power supply is connected. Transportation

Empty the dishwasher and secure loose parts. Drain the appliance according to the following steps: 1. Turn on the tap.

2. Close the door. 3. Switch on ON/OFF switch (. 4. Select programme with the highest temperature. The expected programme duration is indicated on the numerical display)*. 5. Press START button h. Programme sequence starts.

6. After approx. 4 minutes press the START button h until : is indicated on the digital display. After approx. 1 min : is indicated on the digital display . 7.

Switch off ON/OFF switch (. 8. Turn off the tap, disconnect supply hose and drain water. Transport appliance upright only.

(This prevents residual water from running into the machine control and damaging the programme sequence.) Removing the appliance Also observe the sequence of worksteps here. 1. Disconnect the appliance from the power supply. 2.

Turn off the water supply. 3. Undo the waste water and drinking water connection.



[You're reading an excerpt. Click here to read official BOSCH SMS69N48EU user guide](http://yourpdfguides.com/dref/5583412)
<http://yourpdfguides.com/dref/5583412>

4. Loosen fastening screws for the furniture parts.

5. If fitted, remove the base panel. 6. Pull out the appliance, carefully pulling the hose behind. Protection against frost Protectionag instfrost(Emptyingtheap
liance) If the appliance is in a room where there is a risk of frost (e.g. holiday home), empty the appliance completely (see Transportation). 38 *9000913262*
9000913262 en (9307) 640MG .



[You're reading an excerpt. Click here to read official BOSCH
SMS69N48EU user guide
http://yourpdfguides.com/dref/5583412](http://yourpdfguides.com/dref/5583412)