



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for BOSCH SMS69T08EU. You'll find the answers to all your questions on the BOSCH SMS69T08EU in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

## User manual BOSCH SMS69T08EU User guide BOSCH SMS69T08EU Operating instructions BOSCH SMS69T08EU Instructions for use BOSCH SMS69T08EU Instruction manual BOSCH SMS69T08EU

**Summary of instructions Dishwasher** en

9000 496 328 (8009) 640 TV

**1** **Adjusting the water softening system \***

Brief and handy, everything your dishwasher needs. Before using for the first time, read the Installation instructions and Operating instructions!

Ask your water supply company what the water hardness is and enter ...

Water hardness range °dH / Clarke	Hardness range	mmol/l	Factory setting
0-8	soft	0-1.1	H00
9-10	soft	1.2-1.4	H01
11-12	medium	1.5-1.8	H02
13-15	medium	1.9-2.1	H03
16-20	medium	2.2-2.9	H04
21-26	hard	3.0-3.7	H05
27-38	hard	3.8-5.4	H06
39-62	hard	5.5-9.9	H07

\* only before the first wash or if the water hardness has been changed

Quickly sorted ...

**How to adjust**

- Switch on ON/OFF switch.
- Hold down programme button **A** and press START button until **H0...** is indicated on the digital display.
- Release both buttons. The LED for button **A** flashes and the factory set value of **H04** is indicated on the digital display.
- Press programme button **C**. Each time the button is pressed the set value increases by one setting, when the value reaches **H07**, the display jumps back to **H00** (off).
- Press START button. The chosen setting has now been stored.

**2** **Filling the salt dispenser** Dissolves limescale (not necessary for set value 0!) ...

Unscrew cover. Fill the salt dispenser with water before the first wash only. Add special salt (never add detergent!). Screw on the cover. Wash immediately.

**3** **Adding rinse aid** Spick and span ...

Press mark 1, lift up cover 2. Fill in rinse aid. Screw on the cover. CLICK!

**4** **Adding detergent** A lot of dirt, a lot of detergent ...

If required, open the cover (press button). Attention: Combination products are not suitable for all programmes, follow manufacturer's instructions. Pour detergent into the dry detergent dispenser only. Side cover shut, press. PLOP!

**5** **Switching on the appliance**

**6** **Select programme** Quick, economical or intensive ...

**7** **Start programme** Here we go ...

**8** **Switch off the appliance** Everything o.k. ...

**9**

**Overview of programmes**

The max. possible number of programmes is illustrated in this overview. The corresponding programmes for your appliance can be found on the fascia.

The programme data has been measured in the laboratory according to European standard EN 50242. Deviations are possible in practice. \* half normal load

	Auto 65°-75°	Auto 45°-65°	Eco 50°	Auto 35°-45°	Quick 45°	Prerinse
Duration: h:m	1:40-2:15	1:30-2:30	2:20	1:05-1:20	0:29 *	0:15
Energy consumption in kWh	1.30-1.60	0.95-1.60	0.96	0.70-0.85	0.80	0.05
Water consumption in litres	-	-	10	-	10	4
With Aquasensor	11-15	8-19	-	10-15	-	-

**Additional options \*\***

**Express Wash** is obtained by increased energy consumption at a constant cleaning performance.

**Half load** for a few items, saves water, energy and time.

**Flexibility ...**

**Intensive zone** perfect for a mixed load. Washing pressure and washing temperature are increased slightly.

**Hygiene** the temperature is increased during the final rinse process. This increases the hygiene status.

**Extra drying** improves the drying result by increased temperature at the final rinse. (Please take care with delicate dishes.)

\*\* depending on model



[You're reading an excerpt. Click here to read official BOSCH SMS69T08EU user guide](http://yourpdfguides.com/dref/3710167)  
<http://yourpdfguides.com/dref/3710167>

**Manual abstract:**

.. @ @ : < : < : < ^ A B C h : min. Hold down programme button A and press START button until H:0... is indicated on the digital display. Release both buttons. The LED for button A flashes and the factory set value of H:04 is indicated on the digital display. Press programme button C. Each time the button is pressed the set value increases by one setting; when the value reaches H:07, the display jumps back to H:00 (off). Press START button. The chosen setting has now been stored. Filling the salt dispenser Dissolves limescale (not necessary for set value 0!) ..  
Unscrew cover. Fill the salt dispenser with water before the first wash only. Add special salt (never add detergent!). Screw on the cover.  
@@CLICK! 1 % If required, open the cover (press button). @@@possible number of programmes is illustrated in this overview. The corresponding programmes for your appliance can be found on the fascia. h Auto 65°75° Auto 45°65° Eco 50° Auto 35°45° Quick 45° Prerinse 1 Duration: hs : mins Energy consumption in kWh Water consumption in litres With Aquasensor Flexibility ... Á 1:30-2:30 0,95-1,60 8-19 áà 2:20 0,96 10 - é 1:05-1:20 0,70-0,85 10-15 ñð 0:29 \* 0,80 10 Extra drying ù ø Start Start programme Here we go ... 9 87 The programme data has been measured in the laboratory according to European standard EN 50242.

Deviations are possible in practice. \* half normal load 1:40-2:15 1,30-1,60 11-15 0:15 0,05 4 - Additional options \*\* Switch off the appliance Everything o.k. ... Y Express Wash ... @@@perfect for a mixed load.

@@the temperature is increased during the final rinse process. This increases the hygiene status. ¿ ...

@@@check, if required, clean. @@rinse under running water ... insert .

.. @@Remove filters and scoop out water. Lever off cover (A). Check area around the fan impeller for foreign objects. Click cover shut (B). Insert filters. Spray arms ...

@@as it is worth doing it yourself! Remedial action Open supply fitting. 1. Unscrew water connection. 2. Clean filter in the water connection. 3. Flow rate must be min. 10 l/min., when water supply is open. If the flow rate is less, replace the supply fitting.

Install supply hose without kinks. More information can be found in the operating instructions Possible causes Supply fitting jammed or calcified Fault Utensils are not clean Sand or gritty residue on the utensils Possible causes Utensils are situated close together or one above the other Too little detergent Unsuitable programme selected Spray arm nozzles blocked Filters dirty, not seated firmly Spray arms blocked Remedial action Separate the utensils, prevent contact points. Follow manufacturer's instructions (detergent). Select a more intensive programme. Clean the spray arms (see above).

Clean the filters (see above). Arrange the utensils so that the spray arms can rotate freely. Display "E:24" and "6" are lit Waste water hose is blocked or kinked Cover not attached to waste water pump Install waste water hose without kinks. Attach cover (see above). @@Water or limescale stains: increase dosage.

Clean waste-water pump (see above). @@Change the product. Use rinse aid. Activate intensive drying (depending on model). Correctly set water softening system. @@Unplug appliance. Residual water in the appliance The programme has not yet ended Switch on and close the appliance or terminate the programme (see Terminating the programme). Glasses not dishwasher-proof Use dishwasher-proof glasses. Use a detergent suitable for glasses. Rust on the cutlery Cutlery not rust-resistant Hard knife blades are more susceptible Extraneous rust Use dishwasher-proof cutlery.

@@Discoloration is harmless; subsequent rinse cycles will cause it to fade. Terminating the programme ... The numerical display indicates "0:01"; approx. @@3 sec. (Reset). Switch off the appliance. .



[You're reading an excerpt. Click here to read official BOSCH SMS69T08EU user guide](http://yourpdfguides.com/dref/3710167)  
<http://yourpdfguides.com/dref/3710167>