



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for BOSCH SMS88TI01E. You'll find the answers to all your questions on the BOSCH SMS88TI01E in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual BOSCH SMS88TI01E**  
**User guide BOSCH SMS88TI01E**  
**Operating instructions BOSCH SMS88TI01E**  
**Instructions for use BOSCH SMS88TI01E**  
**Instruction manual BOSCH SMS88TI01E**



en Instruction manual



[You're reading an excerpt. Click here to read official BOSCH SMS88TI01E user guide](http://yourpdfguides.com/dref/5793362)  
<http://yourpdfguides.com/dref/5793362>

**Manual abstract:**

.. @@.....  
.....  
.. 5 ( Safety instructions. . .  
..... 5 Before you switch ON the appliance .  
  
.....  
.. Delivery. . .  
.....  
..... Installation. . .  
  
.....  
In daily use . . . . .  
.....  
.. Damage . . . . .  
  
..... Disposal . . . . .  
.....  
.....  
Door lock . . . . .  
  
.....  
.....  
.....  
  
.....  
.....  
.....  
  
..... 5 5 5 6 7 7 8 Environmental protection . . . . .  
.. 10 Packaging. . . . .  
.....  
.....  
  
.. 10 Old appliances . . . . .  
.....  
..... 10 appliance .  
.....  
  
..... 10 Eco drying . . . . .  
.....  
.....  
..... 10 Control panel . . . . .  
  
.....  
.....  
10 Appliance interior . . . . .  
.....  
  
11 Info button . . . . .  
.....  
.....  
11 Time setting . . . . .  
  
..... 11 Switching on the appliance for the first time .  
.....  
.....  
..... 12 Settings. . . . .  
  
.....  
.....  
.....  
.. 13 special salt . . . . .

.....	15 Water hardness table ..
.....	.....
.....	.....
15	Adjusting the water softening system .....
.....	.....
...	15 Using special salt ..
.....	.....
.....	15 Detergent with a salt component ..
16	Switching off water softening system .....
.....	.....
.....	.....
....	16 7 Utensils. ....
.....	.....
....	18 Not suitable .
.....	.....
.....	.....
....	18 Glass and utensil damage. ....
...	18 Loading the dishwasher ..
.....	.....
...	18 Upper basket. ....
.....	.....
..	18 Lower basket ...
.....	.....
.....	.....
19	Cutlery basket .....
.....	.....
....	19 Cutlery drawer .
.....	.....
.....	20 Etagere ...
.....	.....
.....	.....
.....	.....
20	Folding spikes .....
.....	.....
...	21 Small items holder. .
.....	.....
...	21 Knife rack .....
.....	.....
.....	.....
....	21 Baking sheet spray head. ....
.....	.....
....	22 Unloading the dishwasher .....
...	22 Adjusting the height of the basket ..
23 - *	Getting to know your . Detergent ...
.....	.....
.....	24 Adding detergent. ....
.....	.....
.....	.....
25	Combination detergent .....
25 /	Overview of programmes .....
27	Programme selection ...
.....	.....
....	28 Information for test institutes .
.....	28 0 Additional functions .....
.....	.....
.....	29 Save time (VarioSpeedPlus) Half load .....
.....	.....



. . .	32	Child-proof lock . . . . .	
		. . . . .	
		. . . . .	
	32	Eco drying . . . . .	
		. . . . .	
	.32	Greeting . . . . .	
		. . . . .	
		. . . . .	
. . .	.32	Factory setting . . . . .	
		. . . . .	
		. . . . .	
..33		Switching the appliance on . . . . .	
	33	Time preselection . . . . .	
		. . . . .	
	33	Programme end . . . . .	
		. . . . .	
..33		Switching off the appliance . . . . .	
	34	Interrupting the programme . . . . .	
. . .	.34	Terminating the programme . . . . .	
. . . . .	.34	Changing the programme . . . . .	
. . . . .	.34	1 3 Fault, what to do? . . . . .	
		. . . . .	
	.37	Error message . . . . .	
		. . . . .	
. . .	37	Waste water pump . . . . .	
		. . . . .	
. . .	38	Fault table . . . . .	
		. . . . .	
. . . . .	39	4 Customer service . . . . .	
		. . . . .	
. . . . .	48	5 Installation and connection . . . . .	
..48		Contents of package . . . . . Safety instructions . . . . .	
		. . . . . Delivery . . . . .	
		. . . . .	
..		Technical specifications . . . . . Installation . . . . .	
		. . . . .	
. .		Drainage connection . . . . . Drinking water connection . . . . . Warm water connection . . . . . Electrical connection . . . . .	
		. . . . . Removal . . . . .	
		. . . . .	
. . . . .		Transporting . . . . .	
. . . . .		Protection against frost (Emptying the appliance) . . . . .	
		. . . . .	
		. . . . .	
		. . . . .	
		. . . . .	
		. . . . .	
		. . . . .	
		. . . . .	
		. . . . .	
. . . . .	48	48 49 49 49 49 50 50 51 51 51 . . . . .	

... 51 2 Cleaning and maintenance . .  
. 35 Overall condition of the machine . Special salt and rinse aid . . .  
... Filters.....

.....  
.....  
Spray arms .....  
.....

.....  
. @@@@ They contain important information on how to install, use and maintain the appliance. Retain all documents for subsequent use or for the next owner. Check the packaging and dishwasher immediately for damage caused in transit. Do not switch on a damaged appliance, but contact your supplier. Please dispose of the packaging material in an environmentally friendly manner. Do not let children play with packaging and its parts. There is a risk of suffocation from collapsible boxes and film. Installation □ □ □ □ Following installation, ensure that the back of the dishwasher is not freely accessible (protection against contact due to hot surface). Install and connect the appliance according to the installation and assembly instructions.

Prior to installation, disconnect the dishwasher from the power supply. Ensure that the protective conductor system of the domestic supply has been correctly installed. The electrical connection conditions must correspond with the specifications on the dishwasher rating plate 9: 5 en Safety instructions □ □ □ □ □ □ If the power cord of this appliance is damaged, it must be replaced with a particular power cord. To prevent injury, the power cord may be purchased from customer service only. If the dishwasher is installed in a high-sided unit, the unit must be secured properly. If the dishwasher is installed below or above other domestic appliances, follow the information for installation in combination with a dishwasher in the installation instructions for the particular appliances. Also follow the installation instructions for the dishwasher to ensure that all appliances are operated safely. If there is no information or if the installation instructions do not include the appropriate information, contact the manufacturer of these appliances to ensure that the dishwasher can be installed above or below these appliances. If you cannot obtain any information from the manufacturer, you must not install the dishwasher above or below these appliances.

If you install a microwave oven above the dishwasher, the microwave oven may be damaged. □ □ □ □ Install built-under or integratable appliances only under continuous worktops which have been screwed to adjacent cupboards to ensure stability. Do not install the appliance near heat sources (radiators, heat storage tanks, cookers or other appliances which generate heat) and do not install under a hob. After installing the appliance, ensure that the plug is easily accessible. ~ "Electrical connection" on page 51 For some models: The plastic housing on the water connection contains an electric valve. The supply hose contains electrical connection cables. Do not cut through the supply hose. Do not immerse the plastic housing in water. In daily use Read and observe the safety information and instructions for use on the packaging for cleaning and rinsing agents. 6 Safety instructions en Damage □ □ The appliance may be repaired and opened up by a technician only.

To do this, disconnect the appliance from the power supply.



[You're reading an excerpt. Click here to read official BOSCH](#)

[SMS88TI01E user guide](#)

<http://yourpdfguides.com/dref/5793362>

Pull out the mains plug or switch off the fuse. Turn off the tap. If the appliance is damaged, especially the control panel (cracks, holes, broken buttons), or the door function is impaired, stop operating the appliance. Pull out the mains plug or switch off the fuse.

Turn off tap, call customer service. Do not lean or sit on the open door. □ In the case of free-standing appliances, ensure that the baskets are not overloaded. The appliance could tip. □ If the appliance is not in a cavity and a side panel is accessible, the door hinge area must be covered at the side for reasons of safety (risk of injury).

The covers are available as optional accessories from customer service or specialist outlets. \* depending on the features of your dishwasher □ Disposal 1. : Warning 2. Make redundant appliances unusable to prevent subsequent accidents. Dispose of the appliance in an environmentally friendly manner. Risk of explosion! Do not add any solvents to the rinsing compartment. Danger of explosion! : Warning : Warning □ Risk of injury! To prevent injuries, e.g. caused by stumbling, open the dishwasher only briefly in order to load and unload the dishwasher. □ Knives and other utensils with sharp points must be placed with the points downwards in the cutlery basket\*1b or horizontally on the knife shelf\* or in the cutlery drawer\*1\*.

Risk of scalding! Open the door carefully when the programme is still running. There is a risk of hot water spraying out of the appliance. 7 en Safety instructions : Warning □ Risk to children! □ If fitted, use the childproof lock. □ Do not allow children to play with or operate the appliance. □ Keep children away from detergents and rinse aid. These may cause chemical burns in the mouth, throat and eyes or asphyxiation. □ Keep children away from open dishwasher. There may be small parts in the dishwasher which children could swallow and the water inside the dishwasher is not drinking water as it may contain detergent residue. □ Ensure that children do not place fingers in the tablet collecting tray 1B. Small fingers could become caught in the slots.

□ When opening and closing the door on an eye-level appliance, ensure that children do not become jammed or crushed between the appliance door and the cupboard door below. Children could become locked in the appliance (danger of suffocation) or get into another dangerous situation. Redundant appliances: Pull out the mains plug, sever and dispose of the power cord. Destroy the door lock so that the door can no longer be closed. k c o l r o D Childproof lock (door lock) \* The child-proof lock (door lock) protects children from potential hazards which the dishwasher poses.

: Warning Risk of suffocation! Children may become locked in the dishwasher and suffocate. Always completely close the appliance door when leaving the dishwasher. 8 Safety instructions en Activate the child-proof lock (door lock) as follows: 1. Pull the catch of the child-proof lock towards yourself (1). 2. Close the door (2). The child-proof lock is activated. Deactivate the child-proof lock (door lock) as follows: 1. Press the catch of the child-proof lock to the right (1). 2. Press the catch of the child-proof lock backwards (2). The childproof lock is deactivated. Open the door with activated child-proof lock (door lock) as follows: 1. Press the catch of the child-proof lock to the right (1). 2.

Open the door (2). \* ble below. Settings Switching on the appliance for the first time Language Time format Time setting Water hardness Rinse aid disp. Water connection \* ----- Change the setting as follows: 1. Keep pressing button > ) \* until the required setting is displayed. 2. Make the setting with setting buttons + - X. 3. Press and hold the Info button { 8 for 3 seconds. The chosen setting has now been stored.

Factory setting Infotext by pressing Info button { Language selection. 12h or 24h. Set the current time. Setting water hardness. When using Multitabs, select the lowest setting.

Amount of rinse aid affects drying. When using Multitabs, select setting 0. Connection to hot water (40-60°C) or cold water (<40°C) possible. Deutsch 24h 12:00 °E 16 - 20 medium Setting 5 Cold water \* depending on the features of your dishwasher 12 Getting to know your appliance en Settings The dishwasher has been preset with certain settings for your convenience. You can change this factory setting.

Change the setting as follows: 1. Open the door. 2. Switch on ON/OFF switch ( . 3. Press Info button { 8 for 3 seconds until the following text is indicated on the display window at the top @: Scroll with < > Set with - + Leave with Setup 3 sec. 4. Keep pressing button > ) \* until the required setting is displayed.

Setting Time setting Time format Time display Language Water hardness Rinse aid disp. Sensor setting Extra dry Water connection \* Eco forecast Auto Power Off Emotion Light \* Front display \* Timelight \* Factory setting 12:00 24h Time Deutsch °E 16 - 20 medium Setting 5 Standard Off Cold water Off after 1 min.

On On On 5. Make the setting with setting buttons 6. Press and hold the Info button { + - X. 8 for 3 seconds. The chosen setting has now been stored. You have the option of resetting all changed settings back to the original factory settings. Note: When you reset your dishwasher to the factory settings, you are taken directly to the settings for switching on the appliance for the first time. Infotext by pressing Info button { Set the current time. 12h or 24h. Show end of programme with display "Finish in" or "Finish at".

Language selection. Setting water hardness. When using Multitabs, select the lowest setting. Amount of rinse aid affects drying. When using Multitabs, select setting 0.

Adjustment of soiling detection for optimum cleaning result. Improved drying for glasses and plasticware. Connection to hot water (40-60°C) or cold water (<40°C) possible. Show the water and energy consumption. Appliance automatically switches off at end of rinsing process.

Interior light. The front display can be selected. While programme is running, status information is projected onto floor. 13 en Getting to know your appliance

Setting Infolight \* Start programme Tone volume \* Button volume Childproof lock \* Eco drying \* Greeting Factory setting Factory setting On Eco 50° Setting 2 Setting 2 Off On On Confirm/Back Infotext by pressing Info button { Light is projected to signal an active cleaning cycle. When switching on, the last selected programme appears. Volume of signal at end of programme. Volume when using buttons. Activated child-proof lock impedes opening of door. Door opens automatically at the end of the programme. When switching on the appliance, the brand logo can be deselected.

Resetting to the factory setting. \* depending on the features of your dishwasher ----- 14 Water softening system/special salt en + Water softening t l a l a i ceps /me t sys gn i ne f os re t aW system / special salt Adjusting the water softening system The amount of salt dispensed can be set from 0 to 62°E.



[You're reading an excerpt. Click here to read official BOSCH](#)

[SMS88TI01E user guide](#)

<http://yourpdfguides.com/dref/5793362>

Salt is not required at the set value 0-8. Set the softening system as follows: 1. Ask your local water utility company for the water hardness value of the tap water. 2. Required setting can be found in the water hardness table. 3. Open the door. 4.

Switch on ON/OFF switch (. 5. Press Info button { 8 for 3 seconds until the following text is indicated on the display window at the top @: Scroll with < > Set with - + Leave with Setup 3 sec. 6. Keep pressing button > )\* until the water hardness is indicated on the display window at the top @.

7. Make the setting with setting buttons + - X. 8. Press and hold the Info button { 8 for 3 seconds. The chosen setting has now been stored.

To ensure good rinsing results, the dishwasher requires soft water, i.e. water which is low in lime, otherwise limescale will be deposited on the utensils and interior container. Tap water above 7° dH (1.2 mmol/l) must be softened. The water is softened with special salt (regeneration salt) in the water softening system of the dishwasher. The setting and therefore the required amount of salt depends on the degree of hardness of your tap water (see following water hardness table). Water hardness table Using special salt As soon as the low salt indicator P is lit on the control panel or is requested on the front display \* ), salt should be topped up. Always refill with special salt immediately before switching on the appliance. This ensures that overrun special salt solution is immediately washed out and does not corrode the rinsing tank.

Caution! Detergent will destroy the water softening system! Never pour detergent into the salt dispenser. 15 en Rinse aid Top up the salt as follows: 1. Undo the screw plug on the dispenser IR. 2. Fill the dispenser with water (required only when switching on the appliance for the first time). 3. Add salt as illustrated (do not use table salt or tablets). The water is displaced and runs out. me t sys gn i ne t f os re t aw f o gn i hc t iwS If the use of combined detergents with a salt component impairs the low salt indicator P on the control panel or the text on the display window at the top @ (enough salt for x rinse cycles), the displays can be switched off. Proceed as described under "Setting water softening system" and set the value to 0-8.

The water softening system and salt refill indicator are now switched off. Switching off low salt indicator / water softening system , Rinse aid \* depending on the features of your dishwasher d i a esn i R Using detergents with salt component t nenopmoc t l as a h t iw t negre t eD If combined detergents with a salt component are used, special salt can usually be omitted up to a water hardness of 21° dH (37° fH, 26° Clarke, 3.7 mmol/l). If the water hardness is over 21° dH, salt must be used. As soon as the low rinse-aid indicator H is lit on the control panel or is requested on the front display \* ), rinse-aid should be topped up.

The rinse aid is required for stain-free utensils and clear glasses. Use only rinse aid for domestic dishwashers. Combined detergents with rinse-aid component may be used up to a water hardness of 21° dH (37° fH, 26° Clarke, 3.7 mmol/l) only. If the water hardness is over 21° dH, rinse-aid must be used.

\* depending on the features of your dishwasher 16 Rinse aid en Top up the rinse-aid as follows: 1. Open dispenser 9"; press lug on the lid (1) and lift (2).

Setting amount of rinse aid The amount of rinse aid to be dispensed can be set from 0 to 6. Set the amount of rinse aid to be dispensed to 5 to obtain a very good drying result. Do not change the amount of rinse aid unless there are streaks or water stains on the utensils. Set a lower level to avoid streaks. Set a higher level to avoid water stains. Set the amount of rinse aid as follows: 1. Open the door. 2.

Switch on ON/OFF switch (. 3. Press Info button { 8 for 3 seconds until the following text is indicated on the display window at the top @: Scroll with < > Set with - + Leave with Setup 3 sec. 4. Keep pressing button > )\* until the rinse aid dispenser is indicated on the display window at the top @. 5. Make the setting with setting buttons + - X. 6. Press and hold the Info button { 8 for 3 seconds. The chosen setting has now been stored.

2. Add rinse-aid up to the max. mark. 3. Close the lid.

4. Remove overflowed rinse aid with a Lid "clicks" into position. cloth. This prevents excessive frothing during the next rinse cycle. Switching off rinse aid refill indicator If the use of combined detergents with a rinse-aid component impairs the low rinse-aid indicator H on the control panel or the text on the front display ): (enough rinse aid for x rinse cycles), the displays can be switched off.

Proceed as described under "Setting amount of rinse aid" and select setting 0. \* depending on the features of your dishwasher 17 en Utensils - Utensils s l i s ne t U Loading the dishwasher 1. Remove large food remnants. It Not suitable   Cutlery and utensils made of wood. Delicate decorative glasses, craft and antique utensils. These decors are not dishwasher-proof.  Plastic parts not resistant to heat.  Copper and tin utensils.  Utensils which are soiled with ash, wax, lubricating grease or ink. Aluminium and silver parts have a tendency to discolour and fade during the wash cycle.

Even some types of glass (e.g. crystal glass objects) may turn cloudy after many wash cycles. is not necessary to prerinse utensils under running water. 2.

Place the utensils so that – they are secure and cannot tip over. – all utensils with their openings face down. – parts with curves or indentations are at an angle, thereby allowing water to drain. – does not obstruct rotation of the two spray arms 1: and 1J. Very small utensils should not be washed in the machine, as they may fall out of the baskets.

Glass and utensil damage Causes:  Glass type and glass production process.  Chemical composition of the detergent.  Water temperature of the wash programme. Recommendation:  Use only glasses and porcelain which the manufacturer designates as dishwasher-proof.  Use a detergent which protects utensils.

Take glass and cutlery out of the dishwasher as soon as possible after the programme ends. Upper basket Arrange cups and glasses in the upper basket 12.

\* depending on the features of your dishwasher 18 Utensils en Note: Utensils must not be placed above the tablet collecting tray 1B. These may block the lid of the detergent dispenser and prevent it from opening fully. Tip: Heavily soiled utensils (pans) should be placed in the lower basket.

The more powerful spray jet provides a better dishwashing result. Tip: Other examples, such as the best way of loading your dishwasher, can be found on our homepage. These can be downloaded free of charge. The corresponding Internet address can be found on the back page of these instructions for use. Cutlery basket \* t eksab y re l t uC Lower basket Arrange pots and plates in the lower basket 1j.



[You're reading an excerpt. Click here to read official BOSCH](http://yourpdfguides.com/dref/5793362)

[SMS88TI01E user guide](http://yourpdfguides.com/dref/5793362)

<http://yourpdfguides.com/dref/5793362>



Place cutlery, always unsorted with the tips face down, in the cutlery basket \*. To prevent injuries, place long, pointed implements and knives on the knife shelf \*. \* depending on the features of your dishwasher \* depending on the features of your dishwasher 19 en Utensils Cutlery drawer \* reward y re l t uC Arrange the cutlery in the cutlery drawer 1\* as illustrated. Separately arranged utensils are easier to remove after washing. You can take out the cutlery drawer.

\* depending on the features of your dishwasher Etagere \* e r e g a t E Depending on the features of your dishwasher, you can fold down the side shelves to provide more room for taller items of cutlery. The front rows of prongs can be folded down to provide room for wider handles. The etagere and the space underneath can be used for small cups and glasses or for larger items of cutlery, such as wooden spoons or serving cutlery. If you do not require the etagere, it can be folded up. \* Depending on the features of your dishwasher, you can adjust the etagere 3 times the height. Adjust the height of the etagere as follows:

1. Position the etagere vertically and pull upwards. 2. Push etagere at a slight angle downwards to the required height (1, 2, or 3). 3.

Engage etagere. Etagere "clicks" into position. 20 Utensils en Folding spikes \* s e k i p s g n i d l o F \* Depending on the features of your dishwasher, the spikes can be folded down. This facilitates arrangement of pots, bowls and glasses. Fold down the spikes as follows: 1.

Press lever forwards (1). 2. Fold down spikes (2). Knife rack \* k c a r e f i n K \* Depending on the features of your dishwasher, the upper basket is fitted with a knife shelf. Long knives and other utensils can be placed in the knife shelf.

Small items holder \* r e d l o h s m e t i l a m S \* Depending on the features of your dishwasher, the upper basket is fitted with small items holders. The small items holders can be used to securely attach light plastic parts. 21 en Utensils Baking sheet spray head \* d a e h y a r p s t e h s g n i k a B \* depending on the features of your dishwasher Large trays or grilles as well as large plates (gourmet plates, pasta plates, dinner plates) can be cleaned with this spray head. Insert the spray head as follows: 1. Remove upper basket 12. 2. Insert spray head as illustrated and turn to the right. Spray head is engaged. Unloading the dishwasher To prevent water from dripping off the upper basket onto the utensils in the lower basket, it is recommended to empty the appliance from the bottom up. Tip: Hot utensils are sensitive to shock! Therefore, when the programme ends, leave the utensils to cool down in the dishwasher until they can be handled.

Note: When the programme ends, water droplets can still be seen inside the appliance. This does not affect the drying of the utensils. To ensure that the spray jet can reach all parts, arrange the baking sheets as illustrated (max. 2 baking sheets and 2 grilles). Note: Ensure that the dishwasher is always operated with upper basket 12 or baking tray spray head. 22 Utensils en t e k s a b e h t f o t h g i e h e h t g n i t s u j d A \* depending on the features of your dishwasher If required, the height of the upper basket 12 can be adjusted to create more space for taller utensils either in the upper or lower basket. Appliance height 81.5 cm With cutlery basket Upper basket Setting 1 max. ø Setting 2 max. ø Setting 3 max.

ø With cutlery drawer Setting 1 max. ø Setting 2 max. ø Setting 3 max. ø 22 cm 24.5 cm 27 cm Upper basket 16 cm 18.

5 cm 21 cm Lower basket 31 cm 27.5 cm 25 cm Lower basket 31 cm 27.5 cm 25 cm Lower basket 34 cm 30.5 cm 28 cm Lower basket 34 cm 30.5 cm 28 cm Adjusting the height of the basket \* Arrange large plates up to a diameter of 31/34\* cm in the lower basket 1j as illustrated.

\* depending on the features of your dishwasher Appliance height 86.5 cm With cutlery basket Upper basket Setting 1 max. ø Setting 2 max. ø Setting 3 max. ø With cutlery drawer Setting 1 max. ø Setting 2 max. ø Setting 3 max. ø 24 cm 26.5 cm 29 cm Upper basket 18 cm 20.5 cm 23 cm 23 en Detergent Upper basket with side levers 1.

Pull out upper basket 12. 2. Hold the sides of the basket along . Detergent t n e g r e t e D the upper edge. This prevents it from suddenly dropping. 3. To lower the upper basket; press in both levers on the left and right on the outside of the basket. The upper basket lowers. 4. To lift the upper basket; grip the You can use tablets as well as powder or liquid detergents for dishwashers, but never use washing up liquid.

The dosage can be individually adjusted with powder or a liquid detergent according to the degree of soiling. Tablets contain an adequately large amount of active ingredients for all cleaning tasks. Modern, powerful detergents predominantly use a low-alkaline formulation with phosphate and enzymes. Phosphates bond the lime in the water. Enzymes break down starch and remove protein.

Phosphate-free detergents are less frequent. These have a slightly weaker lime bonding capacity and require a higher dosage. To remove coloured stains (e.g. tea, tomato sauce), oxygen-based bleaching agents are usually used.

Note: To ensure a good washing result, always follow the instructions on the detergent packaging! If you have further questions, we recommend that you contact the detergent manufacturers' helpline. sides of the upper basket along the upper edge and lift. 5. Ensure that both sides of the upper basket are at the same height. 6. Push in upper basket. Upper basket with upper and lower pairs of rollers 1. Pull out upper basket 12. 2. Remove upper basket.

3. Re-attach upper basket to the upper : Warning (Setting 3) or lower (Setting 1) rollers. Risk of injury and damage due to non-observance of the safety instructions for detergent and rinse-aid products! Always follow the safety instructions for detergent products and rinse-aid products. 4. Push in upper basket. 24 Detergent en Adding detergent 1. If the detergent dispenser 9\* is still closed, actuate locking bar 92 to open it. 2. Pour detergent into the dry detergent dispenser 9\* only (insert tablet flat, not on its edge). 3.

Dosage: see manufacturer's instructions on the packaging. Use graduated detergent dispenser. Usually 20 ml–25 ml are adequate for normal soiling. If using tablets, one tablet is adequate. Tip: If the utensils are only lightly soiled, slightly less than the indicated amount of detergent is usually adequate.

Suitable detergents and care products can be purchased online via our website or via customer service (see back page). Combination detergent Apart from conventional detergents (Solo), a number of products are offered with additional functions. These products contain not only the detergent but also rinse-aid and salt replacement substances (3in1) and, depending on the combination (4in1, 5in1, ...

), additional components such as glass protection or stainless steel cleaner. Combination detergents function only up to a specific degree of hardness (usually 21°dH).



[You're reading an excerpt. Click here to read official BOSCH](#)

[SMS88TI01E user guide](#)

<http://yourpdfguides.com/dref/5793362>

Over this limit salt and rinse-aid must be added. As soon as combined detergents are used, the rinse programme is adjusted automatically to ensure the best possible rinsing and drying result. 4. Close cover on the detergent dispenser. Cover “clicks” into position. The detergent dispenser opens automatically at the optimum time depending on the programme. The powder or liquid detergent is distributed in the appliance and is dissolved, the tablet falls into the tablet collecting tray where it dissolves in doses. 25 en Detergent Notes □ If you want to add more utensils after the programme has started, do not use the tablet collecting tray 1B as a handle for the upper basket.

The tablet could already be there and you will touch the partially dissolved tablet. □ Do not place small parts for washing in the tablet collecting tray 1B; this prevents the tablet from dissolving evenly. □ You will obtain optimum rinsing and drying results by using solo detergents and applying salt and rinse aid separately. □ If programmes are short, tablets may not have full cleaning effect due to different dissolving properties and there may even be undissolved detergent residue. It is recommended to use washing powder for these programmes. □ The dosing of a tablet is adequate for the “Intensive” programme (for some models). When using washing powder, you can apply some of this cleaning agent to the inside of the appliance’s door. □ □ □ □ Even if the rinse-aid and/or salt refill indicator is lit, the rinse programme will run correctly with combined detergents. If using detergents in a water-soluble protective cover: Take hold of the cover with dry hands only and put the detergent into an absolutely dry detergent dispenser only, otherwise the detergent may stick. If you switch from combined detergents to solo detergents, ensure that the water softening system and amount of rinse aid have been set to the correct value. Biological/eco detergents: Detergent products identified as “Bio” or “Eco” (to protect the environment) usually use lower quantities of active agents or completely dispense with certain substances. The cleaning effect of such products may occasionally be restricted. 26 Overview of programmes en / Overview of programmes semargorp f o w e i v revO The max. possible number of programmes is illustrated in this overview. The corresponding programmes and their arrangement can be found on the fascia.

Type of utensils Type of soiling programme Possible additional options Programme sequence pots and pans, non-sensitive utensils and cutlery mixed utensils and cutlery non-sensitive utensils and cutlery very adhesive burned-in or dried-on food remnants containing starch or protein 1 Auto 65° - 75° all Is optimised according to the soiling with the aid of sensors. Is optimised according to the soiling with the aid of sensors. Clean 60° Intermediate rinse Final rinse 72° Dry Pre Rinse Clean 50° Intermediate rinse Final rinse 63° Dry Eco drying The door opens automatically. Á/Û Auto 45° - 65° all ±/° Super 60° all mixed utensils and cutlery part dried, common household food remnants á/à Eco 50° all sensitive utensils, cutlery, slightly adhesive, temperature-sens fresh food remnants itive plastic and glasses É/è Auto 35° - 45° intensiveZone option VarioSpeedPlus Half load option extraDry Option Shine and Dry option Energy Save intensiveZone option VarioSpeedPlus Half load option extraDry Option Shine and Dry option Is optimised according to the soiling with the aid of sensors. sensitive utensils, cutlery, slightly adhesive, temperature-sens fresh food remnants itive plastic and glasses é/è Glass 40° Pre Rinse Clean 40° Intermediate rinse Final rinse 60° Dry 27 en Overview of programmes Type of utensils Type of soiling programme Possible additional options intensiveZone option Half load option HygienePlus extraDry Option Shine and Dry option Programme sequence mixed utensils and cutlery part dried, common household food remnants Û Night Pre Rinse Clean 50° Intermediate rinse Final rinse 63° Dry sensitive utensils, cutlery, slightly adhesive, temperature-sens fresh food remnants itive plastic and glasses all types of utensils ----- ñ/ð Extra Dry Shine and Dry Quick wash 45° option Clean 45° Intermediate rinse Final rinse 55° Pre Rinse cold rinsing, intermediate cleaning Pre Rinse ù/ø none Programme selection You can select a suitable programme according to the type of utensils and type of soiling.

Information for test institutes Test institutes receive the information for comparability tests (e.g. according to EN60436). These are the conditions for conducting the tests, however these are not the results or consumption values. Request by e-mail to: dishwasher@test-appliances.com The product number (E no.) and the production number (FD) are required which you can find on the rating plate 9: on the appliance door. 28 Additional functions en 0 Additional functions s no i t c nu fl ano i t i d A Ì intensiveZone \* e n oZe v i s n e t n i \* Depending on the features of your dishwasher, you can select different additional functions h. Á Save time ) su lPde pSo i raV( emi t evaS The “Save time” function can reduce the running time by approx. 20% to 66% depending on the selected rinse programme.

To obtain optimum cleaning and drying results at a reduced running time, water and energy consumption are increased. (VarioSpeedPlus) \* Perfect for a mixed load. You can wash very soiled pots and pans in the lower basket together with normally soiled utensils in the upper basket. The spray pressure in the lower basket is intensified, the rinsing temperature is increased slightly. ¿ extraDry \* y rDar t xe An increased temperature during the final rinse and an extended drying phase ensure that even plastic parts dry better. There is a slight increase in the energy consumption. § Half load \* dao l f l aH ß Energy Save \* evaS ygrenE If you have only a few items to wash (e.g. glasses, cups, plates), you can switch to “half load”. This will save water, energy and time. It is recommended to put a little less detergent in the detergent dispenser than for a full load. The “Energy Save” function can be used to reduce water and energy consumption. The running time is extended for optimum cleaning and drying results. µ hygienePlus (HygienePlus) \* ) su lPene i gyH( su lPene i gyh This function increases the temperatures and retains them for an extra long time to obtain a defined disinfection performance. Continuous use of this function increases the hygiene status.

This additional option is ideal for cleaning e.



[You're reading an excerpt. Click here to read official BOSCH SMS88TI01E user guide](http://yourpdfguides.com/dref/5793362)  
<http://yourpdfguides.com/dref/5793362>

g. chopping boards and baby bottles. 29 en Operating the appliance 1 Operating the appliance enca i l p e h t g n i t arepO AquaSensor \* rosneSauqA Programme data The programme data (consumption values) can be found in the summary of instructions. They refer to normal conditions and the water hardness set value °E 16 - 20 medium.

Different influencing factors such as water temperature or line pressure may result in deviations. Changing the settings The dishwasher has been preset with certain settings for your convenience. You can change these factory settings. Change the setting as follows: 1. Open the door. 2. Switch on ON/OFF switch (. 3. Press Info button { 8 for 3 seconds until the following text is indicated on the display window at the top @: Scroll with < > Set with - + Leave with Setup 3 sec. 4.

Keep pressing button >)\* until the required setting is indicated on the display window at the top @. 5. Make the setting with setting buttons + -X. 6. Press and hold the Info button { 8 for 3 seconds. The chosen setting has now been stored. Tip: If you change several settings, first make all changes in succession. Now press the Info button { 8 for 3 seconds. This saves all set values in the appliance. \* depending on the features of your dishwasher The Aqua sensor is an optical measuring device (light barrier) which measures the turbidity of the rinsing water.

The AquaSensor is used according to the programme. If the AquaSensor is active, "clean" rinsing water can be transferred to the next rinse bath and water consumption can be reduced by 3–6 litres. If the turbidity is greater, the water is drained and is replaced with fresh water. @@@@ You can adjust the sensitivity of the sensors in 3 stages. @@The energy and water consumption is adjusted accordingly.

@@@@@ After one minute: The appliance switches off after 1 minute. @@The running time may increase slightly. @@@@ When the door is closed or ajar, the interior light is off. You can switch the interior light on or off. @@You can control the volume of the signal.

@@@@@ You can switch the child-proof lock on or off. @@This ensures a particularly economical drying result. You can switch Eco drying on or off. @@ Eco drying is deactivated when – ExtraDry is switched on. – the Eco 50° programme has been selected in conjunction with one or more additional functions. – the electronic child-proof lock \* has been switched on. \* depending on the features of your dishwasher Changing start programme You can change the "Start programme" setting. Tone volume The end of the programme is indicated by a buzzer. You can also change this setting. Note: When Eco drying is switched on, the end of the programme is not indicated by an acoustic signal.

Greeting When you switch on the dishwasher, the brand logo appears. You can switch off the brand logo. 32 Operating the appliance en Factory setting You can reset all settings to the factory setting. Time preselection You can delay the start of the programme by up to 24 hours. Depending on the setting of the time display, the end of programme is indicated with "Finish in" (for example 3h 25m) or "Finish at" (for example 15:20 hours). Open the door. Switch on ON/OFF switch (. Selects programme 0. Press time preselection button ` Keep pressing the setting buttons + X until the displayed time corresponds with your requirements.

6. Press START button )" , timer programming is activated. 7. To delete the time preselection, press START button )" for approx. 3 seconds.

Time preselection was terminated. 8. Close the door. 1. 2.

3. 4. 5. Switching the appliance on 1. Turn on tap fully. 2. Open the door. 3. Switch on ON/OFF switch (. The Eco 50° programme has been preset for environmentally friendly operation whenever the appliance starts.

This programme remains selected if no other programme button 0 is pressed. 4. Press START button )" . 5. Close the door. Programme sequence starts. Note: For ecological reasons the Eco 50° programme is preset whenever the appliance starts. This conserves environmental resources and not least saves you money. The Eco 50° programme is a particularly environmentally friendly programme. According to EU regulation 1016/2010 it is the "Standard programme" which is the most efficient standard cleaning cycle for cleaning normally soiled utensils in terms of the combined energy and water consumption for cleaning these types of utensils.

Programme end \* The programme has ended when "Finished" is indicated on the display window at the top @ and on the front display \* ): \* The end of the programme is displayed on the floor – provided the TimeLight (optical display) is switched on and is visible. \* depending on the features of your dishwasher 33 en Operating the appliance Switching off the appliance Short time after the end of the programme: 1. Open the door. 2.

Switch off ON/OFF switch (. 3. Turn off tap (does not apply to appliances with Aqua-Stop). 4. Remove the utensils when they have cooled down.

About the Eco drying function: When Eco drying is activated in the Eco 50° programme, the door opens automatically when the programme ends. This ensures the best possible drying result. Low amounts of steam may occur. If you install the appliance under a worktop, fit the supplied steam protection film \* (follow the procedures in the installation instructions). The steam protection film protects sensitive fitted furniture and worktops from damage by water vapour. Before opening the appliance, leave it to cool down for a while in the remaining programmes when the programme ends. Terminating the programme (Reset) emargorp eh t g n i t an imreT 1. Open the door. 2. Press the START button )" and 3.

4. 5. 6. hold for 3 seconds The display window at the top @ and the front display \* ): show: "Program was terminated". Close the door. The programme sequence lasts approx. 1 min. The display window at the top @ shows: "Finished". Open the door. Switch off ON/OFF switch (.

Close the door. \* depending on the features of your dishwasher Changing the programme When the START button )" has been pressed, the programme cannot be changed. The only way a programme can be changed is by Cancel programme (Reset). Interrupting the programme Caution! Expansion (overpressure) may cause the appliance door to jump open and/or water to escape! If the door was opened on an appliance which has a hot water connection or is heated, always leave the door ajar for several minutes and then close. 1.

Open the door. 2. Switch off ON/OFF switch (. The LEDs go out. The programme is saved.

3. To continue the programme, switch on the ON/OFF switch ( again. 4. Close the door. 34 Cleaning and maintenance en 2 Cleaning and maintenance enane t n i am dna gn i nae lC A regular inspection and maintenance of your machine will help to prevent faults. This saves time and prevents problems.

Overall condition of the machine □ Check rinsing compartment for grease and limescale deposits.



[You're reading an excerpt. Click here to read official BOSCH](http://yourpdfguides.com/dref/5793362)

[SMS88TI01E user guide](http://yourpdfguides.com/dref/5793362)

<http://yourpdfguides.com/dref/5793362>

Never use a steam cleaner to clean your dishwasher. The manufacturer is not liable for any consequential damage. Regularly wipe the front of the appliance and fascia with a damp cloth; water and a little washing up liquid are adequate.

Do not use sponges with a rough surface or abrasive detergents, as these could scratch the surfaces. Stainless steel appliances: To prevent corrosion, avoid using sponge cloths or wash them out thoroughly several times before using for the first time. □ If you find such deposits: Fill detergent dispenser 9\* with detergent. Start the appliance without utensils in the programme with the highest rinsing temperature. Special salt and rinse aid Top up the salt and/or rinse aid as soon as the refill indicators on the fascia P and H are lit or there is a prompt on the front display \* ): . \* depending on the features of your dishwasher : Warning Health hazard due to detergents containing chlorine! Always use chlorine-free detergents. Clean the appliance with detergents/appliance cleaners which are particularly suitable for use with dishwashers. □ To ensure that the door seal always remains clean and hygienic, regularly clean it with a damp cloth and a little washing-up liquid. If the appliance is switched off for a prolonged period, leave the door ajar to prevent the formation of an unpleasant odour. □ 35 en Cleaning and maintenance Filters The filters 1Z keep large foreign objects in the rinsing water away from the pump.

These foreign objects may occasionally block the filters. The filter system consists of a coarse filter □ a flat fine filter □ a microfilter □ Spray arms Limescale and contaminants in the rinsing water may block nozzles and bearings on the spray arms 1: and 1J. 1. Check outlet nozzles on the spray 2. Unscrew the upper spray arm 1: 3.

Remove the lower spray arm 1J arms for blockages. (1) and remove downwards (2). 1. After each washing cycle check the filters for residue. 2.

Unscrew filter cylinder as illustrated and take out filter system. upwards. 4. Clean spray arms under running 5. Re-engage or screw on spray arms. water. 3. Remove any residue and clean 4. Re-install filter system in reverse filters under running water. sequence and ensure that the arrow marks are opposite each other after closing the filter system.

36 Fault, what to do? en 3 Fault, what to do? ?od o t t ahw , t l uaF Error message Some faults are indicated at the top of the display window @ and on the front display \* ): and possible remedies are offered (for example Filter system soiled (E22) -->Clean filters). \* depending on the features of your dishwasher

Experience has shown that you can rectify most faults which occur in daily operation yourself. This ensures that the appliance is quickly available to you again. In the following overview you can find possible causes of malfunctions and helpful information for rectifying them. Note: If the appliance stops during dishwashing or does not start for no obvious reason, first run the Abort programme function (Reset) ~ "Operating the appliance" on page 30. : Warning Improper repairs or use of non-original spare parts may cause considerable damage and put the user at considerable risk! Always have repairs carried out by technicians. If a component has to be replaced, always use original spare parts. 37 en Fault, what to do? Waste water pump Large food remnants or foreign objects which were not captured by the filters may block the waste water pump. The rinsing water will then be above the filter. 6.

Check impeller wheel and remove 7. Place pump cover in the original any foreign objects. position (2) and press down until it engages (3). : Warning Danger of cutting! Sharp and pointed objects or glass fragments may block the waste water pump. Always carefully remove foreign objects.

Clean the waste water pump as follows: 1. Disconnect the dishwasher from the power supply. 2. Take out top basket 12 and bottom basket 1j. 3.

Remove the filters 1Z. 4. Scoop out water, use a sponge if required. 5. Prise off the pump cover (as shown) using a spoon. Grip the pump cover by the crosspiece and lift diagonally inwards (1). Remove cover completely. 8. Install filters. 9.

Re-insert baskets. 38 Fault, what to do? en Fault table Fault "Check water supply" display lights up. Cause Supply hose kinked. Tap turned off. Tap jammed or calcified. Remedial action Install supply hose without kinks. Turn on the tap. Turn on the tap. Flow rate must be min. 10 l/min. when water supply is open. Filter in the water supply blocked. Switch off the appliance and pull out the mains plug. Turn off the tap. Unscrew water connection.

Clean filter in the supply hose. Screw water connection on again. Check for leaks. Reconnect power supply. Switch on the appliance.

Error code "":^ is lit. Error code "":f is lit. Intake opening (on right inside of Arrange utensils so that the intake appliance) covered by utensils. opening is not obstructed. Heating element calcified or soiled. Clean appliance with dishwasher cleaning agent or descaler. Operate the dishwasher with water softening system and check the setting.~ " Water softening system/special salt" on page 15 Clean filters. ~ "Filters" on page 36 Install hose without kinks, remove any residue. Check connection to siphon and open if required.

Lock cover correctly. ~ "Waste water pump" on page 38 Error code "":ff is lit. Error code "":f... is lit. Filters 1Z are soiled or blocked. Waste-water hose kinked or blocked. Siphon connection still sealed. Cover on the waste water pump loose. Error code "":f† is lit. Waste water pump blocked or Clean pump and lock cover correctly. cover on the waste water pump is ~ "Waste water pump" on page 38 not locked in position.

39 en Fault, what to do? Fault Error code "":f" is lit. A different error code is indicated on the digital display. ("":, to "":,) Cause Mains voltage too low. A technical fault has probably occurred. Remedial action Not an appliance fault, have the mains voltage and electrical installation checked.

Switch off the appliance with the ON/OFF switch (. After a short time restart the appliance. If the problem recurs, turn off the tap and pull out the mains plug. Call customer service and mention the error code. Close the door.

Ensure that no objects (utensil, fragrance dispenser) are protruding over the basket and preventing the door from closing. Refill rinse aid. Refill with special salt. Use different special salt. Activation/deactivation (see chapter "Water softening system/Special salt" ~ Page 15 or "Rinse aid" ~ Page 16). Check refill indicator, levels. Clean filters and area underneath. Wait until programme ends or reset. Display flashes. Door not closed properly.

Refill indicator for salt P No rinse aid. and/or rinse-aid H is lit. No salt. Sensor does not detect salt tablets. Refill indicator for salt P Refill indicator switched off.



[You're reading an excerpt. Click here to read official BOSCH SMS88TI01E user guide](http://yourpdfguides.com/dref/5793362)  
<http://yourpdfguides.com/dref/5793362>

and/or rinse-aid H is not lit. There is still enough special salt/rinse aid available. Water is left in the Filter system or area under the appliance at the end of the filters IZ is blocked. programme. Program has not ended yet.

40 Fault, what to do? en Fault Utensils not dry. Cause No or too little rinse aid in the dispenser. Programme selected without drying. Water collecting in depressions on the utensils and cutlery. Remedial action Refill rinse aid.

Select programme with drying. ~ "Overview of programmes" on page 27 Arrange utensils in a sloping position, arrange affected utensils as sloping as possible. The combined detergent used has a poor drying performance. ExtraDry to increase drying not activated. Utensils were removed too early or drying process had not ended yet.

The eco rinse aid used has a limited drying performance. Plastic utensils not dry. Cutlery not dry. Special properties of plastic. Cutlery not arranged properly in the cutlery basket. Cutlery not arranged properly in the cutlery drawer. Appliance interior wet after No appliance fault. rinse cycle. Use different combination detergent with better drying performance. Use of rinse aid also increases the drying performance.

Activate ExtraDry. ~ "Operating the appliance" on page 30 Wait until program ends or wait until 30 min after program ends before removing utensils. Use a proprietary rinse aid. Eco products may have limited effectiveness. Plastic has a lower heat storage capacity and therefore dries less well. Separate cutlery if possible, prevent contact points. Arrange cutlery properly and separate if possible. On account of the "Condensation drying" principle, water droplets are physically induced and required in the container. The humidity in the air condenses on the inner walls of the dishwasher, drains and is pumped out. 41 en Fault, what to do? Fault Food remnants on the utensils.

Cause Utensils placed too closely together, utensils basket overfilled. Spray arm rotation obstructed. Spray arm nozzles are blocked. Filters IZ dirty. Filters IZ inserted incorrectly and/or not engaged.

Rinse programme too weak. Utensils precleaned too intensely; sensors therefore decide on weak programme sequence. Stubborn soiling cannot be completely removed. Remedial action Arrange utensils with adequate clearance between them ensuring that the spray jets can reach the surface of the utensils. Prevent contact points.

Arrange utensils so that the spray arm can rotate without obstruction. Clean the spray arm nozzles. ~ "Cleaning and maintenance" on page 35 Clean filters. ~ "Cleaning and maintenance" on page 35 Insert and engage filters correctly. Select a more intensive rinse programme. Increase sensitivity of the sensors. ~ "Sensor setting" on page 30 Do not prerinse utensils. Remove only large food remnants. Increase sensitivity of the sensors. ~ "Sensor setting" on page 30 Recommended programme Eco 50° or Intensive.

Tall narrow receptacles in corner Do not place hollow receptacles too areas are not rinsed adequately. obliquely and do not place in the corner area. Top basket I2 on right and left Set top basket to same height using side not set to same height. levers. 42 Fault, what to do? en Fault Detergent residue. Cause Remedial action Detergent dispenser cover 9\* Utensils must not be placed above the blocked by utensils and therefore tablet collecting tray I2. These may does not open fully. block the lid of the detergent dispenser and prevent it from opening fully. ~ "Upper basket" on page 18 Do not place utensils or fragrance dispenser in the tablet collecting tray. Detergent dispenser cover 9\* blocked by the tablet.

Tablets used in the quick or short programme. Dissolving time of the detergent is not reached in the selected short programme. Washing effect and dissolving performance are reduced after a prolonged storage time or detergent is very lumpy. Tablet must be inserted flat and not upright. Dissolving time of tablets too long for a quick or short programme.

Use a detergent powder or select a more intensive programme. Change detergent. Water stains on plastic parts. Droplet formation on plastic surface is physically unavoidable. After drying, water stains are visible.

Use a more intensive programme (more water changes). Arrange utensils in a sloping position. Use rinse aid. If required, increase softening setting.

Washable or water-soluble Detergent substances are Change detergent brand. coatings in the container or deposited. These coatings cannot Clean appliance mechanically. on the door. usually be removed with chemicals (appliance cleaner, ..

..). If there is a "white coating" on the Increase softening setting and change container floor, the water detergent if required. softening system has been set marginally. Salt dispenser cover I2 not closed. Only for glasses: Initial glass corrosion – can only apparently be wiped off. Close salt dispenser cover correctly. See "Glass and utensil damage" ~ Page 18. 43 en Fault, what to do? Fault White, stubborn coatings; limescale on the utensils, container or door. Cause Remedial action Detergent substances are Change detergent brand.

deposited. These coatings cannot Clean appliance mechanically. usually be removed with chemicals (appliance cleaner, ...

). Hardness range incorrectly set or Set water softening system according to water hardness greater than 8.9 instructions for use or top up salt. mmol/l. 3inl detergent or bio/eco detergent not effective enough.

Underdosing of detergent. Too weak rinse programme selected. Set water softening system according to instructions for use or use separate detergents (proprietary detergent, salt, rinse aid). Increase detergent dosage or change detergent. Select a more intensive rinse programme. Select programme with higher washing temperature. Do not prerinse utensils. Remove only large food remnants. Increase sensitivity of the sensors. ~ "Sensor setting" on page 30 Recommended programme Eco 50° Tea or lipstick residue on the utensils.

Too low rinsing temperature. Too little or unsuitable detergent. Use suitable detergent at correct dosage. Utensils precleaned too intensely; sensors therefore decide on weak programme sequence. Stubborn soiling cannot be completely removed. Coloured (blue, yellow, brown), difficult to remove to non-removable coatings in the appliance or on stainless steel utensils. Film formation consisting of Can be partly removed with machine ingredients from vegetables (e.g. cleaner or by mechanical cleaning. cabbage, celery, potatoes, Coatings are harmless. noodles, ...) or the tap water (e.g.

manganese). Film formation caused by metallic Can be partly removed with machine components on silver or cleaner or by mechanical cleaning. aluminium utensils. Coloured (yellow, orange, brown), easily removable deposits inside the appliance (mainly in the floor area). Discolouration of the plastic parts inside the appliance.

Film formation consisting of ingredients from food remnants and substances from the tap water (limescale), "soapy".



[You're reading an excerpt. Click here to read official BOSCH](#)

[SMS88TI01E user guide](#)

<http://yourpdfguides.com/dref/5793362>

Check function of the water softening system (refill with salt) or, if using combined detergents (tablets), activate water softening system. Plastic parts inside the appliance Discolouration is normal and will not may become discoloured during impair the function of the dishwasher. the service life of the dishwasher. 44 Fault, what to do? en Fault Plastic parts discoloured. Cause Too low rinsing temperature. Utensils precleaned too intensely; sensors therefore decide on weak programme sequence. Stubborn soiling cannot be completely removed. Removable streaks on glasses, glasses with metallic appearance and cutlery. Too much rinse aid.

No rinse aid added or setting too low. Detergent residue in the final rinse programme section. Detergent dispenser cover blocked by utensils (cover does not open fully). Utensils precleaned too intensely; sensors therefore decide on weak programme sequence. Stubborn soiling cannot be completely removed. Initial or existing, irreversible clouding of glass. Glasses not dishwasher-proof, only suitable for dishwasher. Remedial action Select programme with higher washing temperature. Do not prerinse utensils. Remove only large food remnants.

Increase sensitivity of the sensors. ~ "Sensor setting" on page 30 Recommended programme Eco 50° Set rinse aid amount to lower setting. Add rinse aid and check dosage (recommended setting 4–5). Detergent dispenser cover must not be obstructed by utensils. Do not place utensils or fragrance dispenser in the tablet collecting tray.

Do not prerinse utensils. Remove only large food remnants. Increase sensitivity of the sensors. ~ "Sensor setting" on page 30 Recommended programme Eco 50° Use dishwasher-proof glasses. Avoid long steam phase (standing time after wash cycle ends).

Use wash cycle at lower temperature. Set water softening system according to the water hardness (if required one setting lower). Use detergent with glass protection component. Use rust-resistant cutlery. Rust spots on the cutlery. Cutlery not adequately rust-resistant. Knife blades are frequently more severely affected. Cutlery will also rust if rusting Do not wash rusting parts. parts are rinsed at the same time (pan handles, damaged utensil baskets, etc.).

Salt content in the rinsing water too high, as salt dispenser lock not fastened firmly or salt was spilled while being refilled. Fasten salt dispenser lock firmly or remove spilled salt. 45 en Fault, what to do? Fault Appliance does not start. Cause The mains fuse has tripped. Power cord not inserted. Remedial action Check mains fuse. Ensure that the power cord is plugged all the way into the back of the appliance and into the socket. Check that the socket functions. The appliance door has not been Close the door. shut properly.

Programme starts automatically. You did not wait until programme Perform reset. ended. Activate Eco drying. ~ "Operating the appliance" on page 30 Deactivate the child-proof lock.

~ "Operating the appliance" on page 30 Select Eco 50° programme. Deselect additional functions. Switch off ExtraDry. ~ "Operating the appliance" on page 30 Set the door correctly with the aid of the installation instructions. Clean door and door seal with a damp cloth and a little washing-up liquid.

Deactivate the child-proof lock. Close door with increased force. Check appliance installation: Door or attached parts must close without obstruction. Door does not open Eco drying deactivated. automatically at the end of the Eco 50° programme. The child-proof lock is activated. Eco 50° programme not selected. Additional functions selected. ExtraDry is switched on. Door is not set correctly.

Door and door seal dirty. The door is difficult to open. Door cannot be closed. Child-proof lock is activated. Door lock has been activated. Door cannot be closed due to installation. Cover on the detergent dispenser cannot be closed. Detergent residue in the detergent dispenser 9\* or in the tablet collecting tray 1B. Detergent dispenser or cover Remove detergent residue. guide blocked by sticky detergent residue.

Spray arms blocked by utensils, therefore detergent is not rinsed out. The detergent dispenser was damp when filled. Ensure that the spray arms can rotate freely. Pour detergent into the dry detergent dispenser only. 46 Fault, what to do? en Fault Cause Remedial action Close the door.

Check whether rear panel is being pressed in, e.g. by socket or by hose holder which has not been removed. Appliance stops in the Door not closed properly. programme or programme Do not place utensils or fragrance is interrupted.

dispenser in the tablet collecting tray. Top basket presses against the door and prevents door from being closed securely. Power and/or water supply interrupted. Filling valves making striking noises. Knocking or rattling noise. Restore power and/or water supply. Depends on domestic installation, No remedial action possible. as appliance is not defective. No effect on appliance function. Spray arm strikes the utensils, utensils not positioned correctly.

If there is a low load, the water jets strike the washing tank directly. Light utensils move during the wash cycle. Position utensils so that the spray arms do not strike the utensils. Load the appliance with more utensils or distribute the utensils more evenly in the dishwasher. Arrange light utensils securely. Immediately refill rinse aid dispenser with rinse aid. Remove rinse aid with a cloth. Unusual foam formation. Handwash liquid in the rinse aid dispenser. Rinse aid spilled. ----- 47 en Customer service 4 Customer service ec i v res remo t suC 5 Installation and connection no i t c en o c dna no i t a l a t s n l If you are unable to rectify the fault, please contact your customer service. We will always find an appropriate solution in order to avoid unnecessary visits by engineers. Contact information for your nearest customer service can be found on the back of these instructions for use or on the enclosed customer service list. When calling, please state the appliance number (E-Nr. = 1) and the production number (FD = 2) which can be found on the rating plate 9: on the appliance door.

The dishwasher must be connected correctly, otherwise it will not function properly. The specifications for the inlet and outlet as well as the electrical connected loads must correspond with the required criteria as specified in the following paragraphs or in the installation instructions. Install the appliance in the correct sequence: 1. Checking appliance on delivery 2. Installation 3.

Drainage connection 4. Drinking water connection 5. Electrical connection Contents of package If you have any complaints, contact the dealer from whom you purchased the appliance or our customer services. □ □ □ □ □ □ □ □ Trust the expertise of the manufacturer. Contact us for assistance. You can therefore be sure that the repair is carried out by trained service technicians who carry original spare parts for your domestic appliances. \* depending on the features of your dishwasher Dishwasher Instructions for use Installation instructions Quick reference guide \* Warranty \* Installation materials Steam guard plate \* Steam protection film \* Rubber apron \* Power cord \* depending on the features of your dishwasher Safety instructions Please follow the safety instructions under ~ "Installation" on page 5.



[You're reading an excerpt. Click here to read official BOSCH SMS88TI01E user guide](http://yourpdfguides.com/dref/5793362)  
<http://yourpdfguides.com/dref/5793362>