



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for BOSCH TAS 2002. You'll find the answers to all your questions on the BOSCH TAS 2002 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual BOSCH TAS 2002
User guide BOSCH TAS 2002
Operating instructions BOSCH TAS 2002
Instructions for use BOSCH TAS 2002
Instruction manual BOSCH TAS 2002



TASSIMO

TAS 20xx

- de Gebrauchsanleitung
- en Instruction manual
- fr Mode d'emploi
- es Instrucciones de uso
- pt Instruções de serviço
- it Istruzioni per l'uso
- sv Bruksanvisning
- da Brugsanvisning
- nb Bruksanvisning
- el Οδηγίες χρήσης



01_TAS 20_EU.indb 1

24.02.2012 14:53:36



[You're reading an excerpt. Click here to read official BOSCH TAS 2002 user guide](http://yourpdfguides.com/dref/4542444)

<http://yourpdfguides.com/dref/4542444>

Manual abstract:

Aromatic coffee, strong espresso, tasty caffè crema, creamy cappuccino or latte macchiato, or even a cup of tea or hot chocolate: they're all waiting for you at the push of a button. Your TASSIMO machine works exclusively with specially developed capsules known as TASSIMO T DISCs. When you insert the T DISC, the machine automatically reads the bar code printed on the label. This contains exact details of the amount of water needed, as well as the brewing time and temperature required to prepare the chosen beverage. T DISCs are specially designed for use with the TASSIMO brewing system and offer perfect enjoyment, cup after cup. To ensure long-term enjoyment, please only use the T DISCs specially developed for the TASSIMO machine. First use of your TASSIMO machine. 23 Maintenance and day to day care. Important: — Please read this instruction manual and the short instructions carefully and keep for future reference. Risk — This appliance is designed for preparation of small amounts of coffee for domestic use or for use in non-commercial, household-like environments, such as staff kitchens in shops, offices, agricultural and other small businesses or for use by guests at bed-and-breakfast establishments, small hotels and similar residential facilities.

□— Connect and operate the appliance only in accordance with the specifications on the rating label situated on the base of the machine. □— Do not use your TASSIMO machine if either the power cord or appliance is damaged. @@@@□— Keep children away from the appliance. @@@@□— To avoid potential hazards, repairs such as replacing a damaged cord should only be performed by our service personnel. □— Never immerse the appliance or power cord in water.

⚠ of scalding! Risk — Wait until the orange light lights up before opening the brewing unit. □— Never open the brewing unit during the brewing process. □— Please note that the beverages are very hot when dispensed. 2012 14:53:49 en 19 Your TASSIMO machine at a glance Before reading further, please open the folded diagram page at the start of the manual out to the left. @@@@□ Now replace the water tank and push it firmly down into place.

2012 14:53:50 20 □ Remove the Service T DISC from its compartment at the back of the appliance. □ Turn the on/off switch on (I). All display items will light up briefly and then a Standby stays lit. Open the brewing unit by lifting the lid. Place the Service T DISC on the T DISC holder with the barcode facing down. @ @ 3. Now close the brewing unit by pushing the lid down firmly until it audibly clicks into place. The cleaning process starts and dispenses water into the cup. 5. When the process is complete, empty the cup and put it back on the cup stand.

□ Open the brewing unit, remove the Service T DISC and store it in the compartment at the back of the machine. C om Your TASSIMO machine is now ready for use. When it is switched on, all 5 display items light up briefly. The stand-by light will then remain on until the appliance is in use. i Note: To save energy, the appliance should be switched off after each use. Start/stop button Once the T DISC of your choice is properly secured in your TASSIMO machine, you may start brewing it by pressing the start/ stop button. Press again to stop the brewing process early, in order to adjust the drink to your individual taste.

@@@@@ Never open the brewing unit during the brewing process. @@@@ Never open the brewing unit during the brewing process. @@ Remove the water tank, fill the water tank and replace it on your TASSIMO machine.

7e Descal Q Q Descal icon lights up (red) when your 7d TASSIMO machine needs to be descaled. Descal your appliance in accordance with the instructions provided under “Descaling”. Cup size By adjusting the height of the cup stand, different sized cups and glasses can be used depending on your choice of drink. Use the default position for normal cups. You can adjust the cup stand for smaller cups (e.

g. Espresso cups) by pulling the cup stand up and out and replacing it into the higher slot on the back splash. I; Note: For large cups or glasses, the cup stand can be removed completely. To avoid overflowing, select the appropriate cup size for each type of drink. The respective cup size is printed on the T DISC wrapper.

2012 14:53:52 en 23 □ Place a suitable cup on the stand accord How to use your TASSIMO machine ! Important: — For optimum results, fill the tank only with cool, fresh, noncarbonated water each day. do not use chemically softened water. Your TASSIMO machine is ready for use. When ready, the a Standby icon is lit. click ing to the type of drink required. Make sure the distance between the top of the cup and the brewing unit is small to avoid splattering. □ Open the brewing unit by lifting the lid. @@@@A Standby flashes while the machine reads the barcode. @@@@ 1. @ @ o Automatic icon will flash.

@@@@ 1 2a 2. @ @ o Automatic icon will flash. @ @ Your drink is now ready. N Manual icon lights up for 20 sec. @ @ o Automatic icon flashes. @@@@ Your drink is now ready. @@@@ The T DISC can then be removed. Now you can sit back and enjoy your hot drink. If you wish, you can prepare the next drink immediately. @@@@ □ Never open the brewing unit during the brewing process.

□ Please note that the beverages are very hot when dispensed. @ @ They should be stored in a cool, dry place. It is not necessary to store T DISCs in the refrigerator. Do not keep them in the freezer. @ @ The Best Before date is printed on the T DISC foil wrapper.

Otherwise use the T DISCs within six weeks. @ @ This is so the drink flavour is optimised. □ Always remove the used T DISC after the brewing process. @ @ When removing the T DISC, quickly flip it over so that the printed side is face up to avoid any dripping. 2012 14:53:54 en 25 Clean your TASSIMO machine regularly to ensure that it continues to produce the optimal quality drinks.

@ @ do not use scouring agents or steam cleaners. @ @ Risk – Switch off and unplug the appliance before cleaning. @ @ □ Wipe the outside of the appliance with a soft, damp cloth. @ @ @ All these parts can also be cleaned in the dishwasher. @ @ @ 9a 9b 9c ; ; Attention: – Piercing unit can be very hot immediately after brewing. □ Clean the back panel by hand only and do not place it in the dishwasher. ! Important: – After use, we recommend that the Service T DISC be stored in its compartment at the back of the appliance (10). 2012 14:53:55 26 en i; Note: After dispensing a milky drink or hot chocolate drink, we recommend that you first clean the piercing unit and then the brewing unit using the Service T DISC before making another drink. descaling Your TASSIMO machine has an automatic descaling programme. If Q Descal icon lights up while the appliance is on, the descaling programme must be run immediately.



[You're reading an excerpt. Click here to read official BOSCH TAS
2002 user guide
http://yourpdfguides.com/dref/4542444](http://yourpdfguides.com/dref/4542444)

If the descaling process is not run as instructed, the appliance may become damaged. ! Important: – If you have very hard water, notice an unusual amount of steam or if the beverage volume is not what it should be, descale the machine before the Descale icon lights up. Special descaling agents can be obtained from www.tassimo.com, the Bosch customer's stand-by mode. The float in the water tank is stuck. no T DISC inserted. The barcode could not be detected.

The barcode could not be O Automatic mode detected. skipped, appliance goes straight to N Manual mode.

The quality of the crema has deteriorated. Possible cause Piercing unit / T DISC holder is not properly inserted. The T DISC is not inserted properly.

Solution en Insert the T DISC holder and piercing unit properly. Re-insert the T DISC and make sure it is properly positioned.

The brewing unit is not properly Push the clamp down firmly closed. Until it audibly clicks into place. The piercing unit is either not inserted or not inserted properly. Water on the surface under the cup stand. water from condensation.

@@Check to ensure that the piercing unit is inserted properly. Condensation may occur and is not a fault. remove it by wiping with a cloth.

@@@611632, for contact details, see page 154). The float in the water tank is stuck. Clean the water tank and ensure that the float can move. service T DISC is damaged The Service T DISC must be aged or lost. Ways be used for cleaning and descaling processes. P "Fill tank" lights up even though there is sufficient water in the tank. P 7d and Q 7e are flashing simultaneously and it is not possible to prepare drinks.

Q "Descal" flashes even though you are using soft water. There is a fault on the machine. Turn the machine off using the on/off switch, wait approximately 5 minutes and turn the machine back on. If P 7d and Q 7e are still flashing, please contact the TASSIMO careline. 08 00 032 88 33 (UK only). Even soft water contains small amounts of dissolved lime. descale the appliance. Special descaling agents can be obtained from www.tassimo.com, the Bosch customer service department (article no.

310967, for contact details, see page 154) or from your retailer. 2012 14:54:06 fr 43 Kit Couleur Vous pouvez commander le support de tasse et l'habillage avant en différentes couleurs auprès du Service AprèsVente Bosch (contact, voir page 154) ou chez les revendeurs spécialisés. Se till att T DISCklaffen sitter säkert i spåret till höger. Se till att T DISCklaffen sitter säkert i spåret till höger. □– Sørg for, at personer (herund.



[You're reading an excerpt. Click here to read official BOSCH TAS](http://yourpdfguides.com/dref/4542444)

[2002 user guide](http://yourpdfguides.com/dref/4542444)

<http://yourpdfguides.com/dref/4542444>