



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for BOSCH TAS-2001-TASSIMO. You'll find the answers to all your questions on the BOSCH TAS-2001-TASSIMO in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual BOSCH TAS-2001-TASSIMO
User guide BOSCH TAS-2001-TASSIMO
Operating instructions BOSCH TAS-2001-TASSIMO
Instructions for use BOSCH TAS-2001-TASSIMO
Instruction manual BOSCH TAS-2001-TASSIMO

de 3

Stromschlüssel

– Dieses Gerät ist für die Verarbeitung hausüblicher Mengen im Haushalt oder in haushaltsähnlichen, nicht-gewerblichen Anwendungen bestimmt. Haushaltsähnliche Anwendungen umfassen z. B. die Verwendung in Mitarbeiterküchen von Läden, Büros, landwirtschaftlichen und anderen gewerblichen Betrieben, sowie die Nutzung durch Gäste von Pensionen, kleinen Hotels und ähnlichen Wohnrichtungen.

– Betreiben und schließen Sie das Gerät nur gemäß den Angaben auf dem Typenschild an.

– Benutzen Sie Ihr TASSIMO Gerät nur, wenn Netzkabel und Gerät keine Beschädigungen aufweisen.

– Verwenden Sie das Gerät nur in Innenräumen bei Raumtemperatur und bis zu 2000 m über Meereshöhe.

– Personen (auch Kinder) mit verminderten körperlichen Sinneswahrnehmungs- oder geistigen Fähigkeiten oder mit mangelnder Erfahrung und Wissen, das Gerät nicht bedienen lassen, außer sie werden beauftragt oder hatten eine Einweisung bezüglich des Gebrauchs des Gerätes durch eine Person, die für ihre Sicherheit verantwortlich ist.

– Kinder vom Gerät fernhalten.

– Kinder beaufsichtigen, um zu verhindern, dass sie mit dem Gerät spielen.

– Ziehen Sie im Fehlerfall sofort den Netzstecker.

– Reparaturen an Ihrem Gerät, wie z. B. eine beschädigte Zuleitung auswechseln, dürfen Sie nur durch unseren Kundendienst ausführen lassen um Gefährdungen zu vermeiden.

– Tauchen Sie das Gerät oder Netzkabel niemals in Wasser.

Ihr TASSIMO Gerät auf einen Blick

Bitte klappen Sie vor dem Weiterlesen die dazugehörige Bildseite am Anfang des Heftes nach links aus.

- 1 Blende
- 2 EIN/AUS-Schalter
- 3 Abnehmbarer Wassertank
 - a Wassertankdeckel
 - b Schwimmer
- 4 Tassenpodest
 - a Auffangbehälter
 - b Tropffilter
- 5 Höhenverstellung
- 6 Start/Stopp Taste
- 7 Anzeigeelemente
 - a Standby
 - b Automatik
 - c Manuell
 - d Wassertank füllen
 - e Entkalken
- 8 Bügelverschluss
- 9 Brühsystem
 - a T DISC Träger
 - b Stanzvorrichtung
 - c Getränkeauslauf
 - d Strichholz-Lesefenster
- 10 Aufbewahrungsfach für Service T DISC und Kurzanleitung Reinigung / Entkalken
- 11 Service T DISC (Erste Benutzung, Reinigung und Entkalken)
- 12 Kurzanleitung Reinigung / Entkalken

Hinweis:
Wir empfehlen, die Service T DISC und die Kurzanleitung immer im dafür vorgesehenen Fach auf der Geräterückseite aufzubewahren.

01/2013

01_TAS 12_RZ.indb 3 11.12.2012 09:43:47



[You're reading an excerpt. Click here to read official BOSCH TAS-2001-TASSIMO user guide](http://yourpdfguides.com/dref/5450906)
<http://yourpdfguides.com/dref/5450906>

Manual abstract:

Aromatic coffee, strong espresso, tasty caffè crema, creamy cappuccino or latte macchiato, or even a cup of tea or hot chocolate: they're all waiting for you at the push of a button. Your TASSIMO machine works exclusively with specially developed capsules known as TASSIMO T DISCs. 2012 09:43:52 en Thank you for choosing a TASSIMO machine. This contains exact details of the amount of water needed, as well as the brewing time and temperature required to prepare the chosen beverage. T DISCs are specially designed for use with the TASSIMO brewing system and offer perfect enjoyment, cup after cup. To ensure longterm enjoyment, please only use the T DISCs specially developed for the TASSIMO machine. 19 First use of your TASSIMO machine . 23 Maintenance and day to day care . Important: – Please read this user manual and the enclosed materials carefully and follow the instructions carefully. – Keep them for future reference.

□ Do not use T DISCs more than once. □ This appliance is designed for preparation of small amounts of coffee for domestic use or for use in noncommercial, householdlike environments, such as staff kitchens in shops, offices, agricultural and other small businesses or for use by guests at bedandbreak fast establishments, small hotels and similar residential facilities. □ Connect and operate the appliance only in accordance with the specifications on the rating label situated on the base of the machine. □ Do not use your TASSIMO machine if either the power cord or appliance is damaged. □ Use indoors at room temperature only and not above 2000m sea level.

@@ □ Keep children away from the appliance. @@ □ In the event of malfunction, unplug the appliance immediately. @@ □ Never immerse the appliance or power cord in water. Risk of scalding! @@ □ Never open the brewing unit during the brewing process. □ Please note that the beverages are very hot when dispensed.

2012 09:43:52 en 19 Your TASSIMO machine at a glance Before reading further, please open the folded diagram page at the start of the manual out to the left. 12. First use of your TASSIMO machine Before using your TASSIMO machine for the first time, please proceed as follows: □ Plug the power cord into the electrical socket. □ Remove and rinse the water tank thoroughly under running water, and fill it with cool fresh water up to the MAX mark. □ Now replace the water tank and push it firmly down into place. @@ □ Turn the on/off switch on (1). @@ The brewing unit by lifting the lid. 2. @@ Make sure that the lap of the T DISC is secured in the slot to the right. 3.

Now close the brewing unit by pushing the lid down firmly until it audibly clicks into place. The cleaning process starts and dispenses water into the cup. 5. When the process is complete, empty the cup and put it back on the cup stand. □ Open the brewing unit, remove the Service T DISC and store it in the compartment at the back of the machine. Your TASSIMO machine is now ready for use. When it is switched on, all 5 display items light up briefly. The standby light will then remain on until the appliance is in use. I Note: To save energy, the appliance should be switched off after each use. Start/stop button Once the T DISC of your choice is properly secured in your TASSIMO machine, you may start brewing it by pressing the start/ stop button.

Press again to stop the brewing process early, in order to adjust the drink to your individual taste. Display Items 7a 7a Standby a Standby icon lights up (orange) when the power switch is switched on. You can now open the brewing unit and remove the T DISC or insert a new one. @@@@ Never open the brewing unit during the brewing process. @@@@ Never open the brewing unit during the brewing process.

@@@@@ Use the default position for normal cups. You can adjust the cup stand for smaller cups (e. g. Espresso cups) by pulling the cup stand up and out and replacing it into the higher slot on the back splash. I Note: For large cups or glasses, the cup stand can be removed completely.

To avoid overflowing, select the appropriate cup size for each type of drink. The respective cup size is printed on the T DISC wrapper. 2012 09:43:54 en 23 a suitable cup on the stand according to the type of drink required. Make sure the distance between the top of the cup and the brewing unit is small to avoid splattering. □ Open the brewing unit by lifting the lid. □ Select a T DISC and insert it in the T DISC holder with the printed side down. Make sure that the lap of the T DISC is secured in the slot to the right. □ Close the brewing unit by pushing the lid down firmly until it clicks into place. A Standby lashes while the machine reads the barcode. @@@@@ 1.

@@ o Automatic icon will lash. @@@@ □ Place How to use your TASSIMO machine ! @@ do not use chemically softened water. Your TASSIMO machine is ready for use. When ready, the a Standby icon is lit. click 1 2a 2. @@ o Automatic icon will lash. @@ Your drink is now ready. N Manual icon lights up for 20 sec. @@ o Automatic icon lashes. @@@@ Your drink is now ready.

@@@@ The T DISC can then be removed. Now you can sit back and enjoy your hot drink. If you wish, you can prepare the next drink immediately. @@ Risk of scalding! @@ □ Never open the brewing unit during the brewing process. □ Please note that the beverages are very hot when dispensed.

@@ They should be stored in a cool, dry place. Do not store your T DISCs in the refrigerator or freezer. @@ Once outer foil packaging is removed, use T DISCs within 6 weeks. @@ This is so the drink flavour is optimised. □ Always remove the used T DISC after the brewing process.

@@@@@ If the appliance has been unused for a long time, always run the cleaning process with the Service T DISC several times to ensure that the drinks it produces are of its normal high quality (see "First use of your TASSIMO machine"). do not use scouring agents or steam cleaners. □ Clean Maintenance and day to day care ; Risk of electric shock! □ Switch off and unplug the appliance before cleaning. The barcode scanner regularly (9d) with a soft, damp cloth, so that the TASSIMO machine can scan the barcode on the T DISC properly. □ Wipe the outside of the appliance with a soft, damp cloth. □ Rinse out the water tank, the back splash and all parts of the cup stand by hand and with water only, and do not place them in the dishwasher. □ Remove the T DISC holder (9a), the piercing unit (9b) and the drink outlet (9c) and clean thoroughly. All these parts can also be cleaned in the dishwasher. When preparing a number of drinks one after another, the piercing unit may be manually cleaned quickly and easily under running water. □ We recommend that you clean the brewing unit regularly using the Service T DISC as described under "First use of your TASSIMO machine".

; Attention: – Piercing unit can be very hot immediately after brewing. @@ ! @@@@ descaling Your TASSIMO machine has an automatic descaling programme.



[You're reading an excerpt. Click here to read official BOSCH](#)

[TAS-2001-TASSIMO user guide](#)

<http://yourpdfguides.com/dref/5450906>

! Special descaling agents can be obtained from www.tassimo.com, the Bosch customer service department (article no. 310967, for contact details, see page 154) or from your retailer. Note: – Never interrupt the descaling programme. Do not drink the liquids. – Never use vinegar or vinegar-based products. Note: If you have hard water, increase the amount of the descaling agent.

Now replace the water tank and push it firmly down into place. Press 27 and hold the start/stop button for at least 5 seconds to start the descaling programme. The descaling solution is pumped through the appliance at intervals; the unit is inserted properly. Condensation may occur and is not a fault. Remove it by wiping with a cloth.

Look for the Service T DISC in the storage compartment at the back of the appliance. The Service T DISC can be obtained from the Bosch customer service department (article no. 611632, for contact details, see page 154). The Service T DISC must always be used for cleaning and descaling processes.

"Fill tank" lights up even though there is sufficient water in the tank. The float in the water tank is stuck. Clean the water tank and ensure that the float can move. P 7d and Q 7e are flashing simultaneously and it is not possible to prepare drinks. There is a fault on the machine. The Service T DISC must always be used for cleaning and descaling processes. Even soft water contains small amounts of dissolved lime. Descale the appliance. Special descaling agents can be obtained from www.tassimo.com.

though you are using soft water. Sørg for, at personer (herunder børn) med begrænset fysisk sanselse eller åndelige evner eller manglende erfaring og viden ikke betjener apparatet, undtaget de er under opsyn eller har modtaget instruktioner i brugen af maskinen fra en person, som er ansvarlig for deres sikkerhed. Du har dog inden for 20 sekunder mulighed for at forlænge brygningen ved at holde Start/Stoptasten nede og dermed mindske din driks styrke. Bemærk: Du bør vælge en kop af passende størrelse for hver type drik, for at undgå, at drikken løber over. Bosch kan der for ikke påtå seg noen leveringsgaranti for TASSIMO T DISC. 2012 09:44:40 152 en Guarantee The guarantee conditions for this appliance are as defined by our representative in the country in which it is sold. Details regarding these conditions can be obtained from the dealer from whom the appliance was purchased. The bill of sale or receipt must be produced when making any claim under the terms of this guarantee. Grand Union House Old Wolverton Road Wolverton Milton Keynes MK12 5PT To arrange an engineer visit, to order spare parts and accessories or for product advice please visit www.tassimo.com. A call setup fee of up to 6 pence may apply.



[You're reading an excerpt. Click here to read official BOSCH TAS-2001-TASSIMO user guide](http://www.tassimo.com)
<http://yourpdfguides.com/dref/5450906>