

Manual abstract:

Solution Turn the temperature control to the desired position. Check that the plug is inserted into the mains socket correctly. Turn the temperature control to a lower setting. Turn the temperature control to a higher setting. calc The iron does not work or is not heating up. Connection problems. The clothes tend to stick. Temperature control (I) setting is too high. Temperature control (I) setting is too low. Steam regulator (A) is set too high in conjunction with a low temperature.

Turn the steam regulator to a lower setting. Wait 5 seconds between each press of the shot of steam button. Mix distilled water with tap water as directed in the „Filling the water tank“ section, and never add any other products to the water tank. Turn the steam regulator to “1” or “2” position. Fill the tank. Remove the steam regulator (A) and clean it. If this does not help contact an Authorised Technical Service Centre. Add water to the water tank. Water comes out of the soleplate together with steam. You have pressed the shot of steam button (L) repeatedly without waiting for 5 seconds between each press. Tap or part distilled water has not been used (see “Filling the water tank“ section) or other products such as fragrant water have been added to the tank. Steam regulator (A) in “0” or “calc” position. Iron is not steaming. No water in tank. Scale obstruction of internal components. No water in the tank. TDA 26.. sensixx B1 Spray does not work. Water comes out from the soleplate before plugging the iron in.

Deposits come out through the holes in the soleplate. The iron begins to smoke when switched on. Obstructed mechanism. Contact an Authorised Technical Service Centre. The steam regulator (A) is not properly closed. Place the steam regulator in the “0” position. Traces of lime scale are Carry out a cleaning cycle “(see coming out of the steam “Multiple de-scaling system” chamber. @@@@This iron has a lightweight design and is built to perform.

@@Please visit www.bosch-home.

co.uk for more product information or to register your product, just follow the link to the Online guarantee registration. Before using the Iron for the first time

Please carry out the following steps: 1. Remove the protective cover from the soleplate before using the iron. @@@@4.

Hold the iron horizontally and repeatedly press the shot of steam button (L). Any residue should come out of the soleplate (G). It may smoke and smell – this is normal and will cease after a short while. 5. If necessary, carefully clean the soleplate down with a dry, folded cloth.

Cleaning and Maintenance ! Attention! Risk of burns! For general cleaning, follow the information below: Problem Dirty/lightly marked iron body or soleplate Mark develops on soleplate during use Solution Clean the body of iron or soleplate with a damp cloth then dry it.. Set the iron to its maximum temperature setting. Rub the iron a few times over with a dry cotton cloth folded several times. While the iron is cold, iron a linen cloth soaked in white vinegar. Then dampen a cloth with water and wipe the soleplate clean and dry thoroughly. GUARANTEE TERMS The terms of the guarantee for this appliance are in accordance with that stated by our representative for the country in which it is sold. Details of those conditions can be obtained from the retailer from whom the appliance was purchased. The SALES RECEIPT must be presented when making any claims against the terms of this guarantee.

@@@@@•This appliance must be connected to an earthed socket.

@@@@@•Do not allow the power cable to come into contact with the soleplate when it is hot. •In order to avoid that, under unfavourable mains conditions, phenomena like transient voltage drops or lighting fluctuations can happen, it is recommended that the iron is connected to a power supply system with a maximum impedance of 0.27Ω . If necessary, the user can ask the public power supply company for the system impedance at the interface point. •This appliance is not intended to be used by persons (including children) with reduced physical, sensory or mental capacities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety. •Keep the appliance out of children’s reach. •Children should be supervised to ensure that they do not play with the appliance. @@@@•The appliance must be used and placed on a stable surface. @@@@@@•Never immerse the iron in water or any other fluid.

@@@@@Filling the water tank Set the steam regulator (A) to the “0” position (no steam) by lining it up with the pointer (B) on the iron and unplug the iron from the mains! 1.

*Place the iron at an angle of 45° with the point facing upwards. 2. Fill the water tank (E) via the water tank inlet (C) but never above the “max” mark (F) using the beaker * (N). 2. If you are unsure what type of material the garment is made from, start ironing on the lowest temperature setting and increase accordingly.*

If the garment is made from mixed fabrics, set the temperature for the most delicate material. 3. For silk, woollen or synthetic materials iron the reverse side of the fabric to prevent shiny patches. Avoid using the spray function to prevent stains. 4.

Sort your garments based on their care labels, always starting with those that have to be ironed at the lowest temperature. @@@@@Gently move the iron from side to side to restart it. Use only clean water from the tap and do not mix anything with it. @@@@This appliance has been designed to use normal tap water. @@If the tap water in your district is very hard, mix tap water with distilled water 1:2. You can inquire about the water hardness with your local water supplier. 4. Ironing with steam The steam regulator (A) is used to adjust the amount of steam produced when ironing. 1. Make sure that there is water in the tank (E).

2. Adjust the temperature control (I) and then set the steam regulator (A) according to the table below by lining it up with the steam regulator pointer (B). Steam will automatically be produced. 7. Ironing without steam This function enables the iron to be used for dry ironing. 1. Set the steam regulator (A) to the “0” position. 2. Select an appropriate temperature for the type of material being ironed. 8.

Spray This can be used to remove stubborn wrinkles. 1. Do not use the spray function with silk as staining may occur. 2. Make sure that there is water in the tank (E).

@@9. @@2. Set the steam regulator (A) to the “0” position. 3. Hold the iron upside down over a sink and shake it gently until all the water has come out from the water tank inlet (C).

4. Set the iron aside in a vertical position to cool down. 5. Coil the power cable (J) loosely around the hee appliance is first plugged in, this function will be inactive for the first 2 minutes to allow it to reach the set temperature.



[You're reading an excerpt. Click here to read official BOSCH TDA2633GB user guide](http://yourpdfguides.com/dref/4541944)
<http://yourpdfguides.com/dref/4541944>

@@@To switch the iron back on, move it gently from side to side. The light will stop flashing. @@@• Regulate the steam according to the selected ironing temperature. • Only use steam if necessary. If possible, use the spray function instead. • Try to Iron the fabrics while they are still damp and reduce the steam setting.

Steam will be generated from the fabrics rather than the iron. If you tumble dry your fabrics before ironing them, set the tumble drier to the 'iron dry' programme. • If the fabrics are damp enough, turn off the steam regulator completely. • Stand the iron upright during pauses. Resting it horizontally with the steam regulator on generates wasted steam. .



[You're reading an excerpt. Click here to read official BOSCH](#)

[TDA2633GB user guide](#)

<http://yourpdfguides.com/dref/4541944>