

Manual abstract:

Solution Turn the temperature control to the desired position Check that the plug is inserted into the mains socket correctly Move the iron gently from side to side to re-start it m a x Iron does not work or is not heating up Iron is not steaming There is no water in the tank (E). Fill the water tank The steam regulator (C) is in the Set the steam regulator to the position relevant position Temperature control (H) setting is too low. Set the temperature control within the steam area (between the “••” and “max”) or turn the steam regulator (C) to Turn the steam regulator to a lower setting. Wait 5 seconds between each press of the jet of steam button Steam regulator (C) is set too high in conjunction with a low temperature. You have pressed the shot of Water is steam button (A) repeatedly dripping from without waiting for 5 seconds the holes in the between each press soleplate Water has been left in the tank when the sole late was cold, p with the steam regulator (C) set at or Distilled water has not been used (see “Filling the water tank” section) or other products such as fragrant water have been added to the tank Spray does not work. The iron begins to smoke when switched on. No water in the tank. Obstructed mechanism. Always empty the tank after ironing and set the steam regulator to after ironing and when filling the tank Mix distilled water with tap water as directed in the “Filling the water tank” section and never add any other products to the water tank Add water to the water tank. Contact an Authorised Technical Service Centre.

TDA 76.. sensixx B7 During first use: Certain This is completely normal and components on the appliance will stop after a short while. have been lightly greased at the factory and may produce a little smoke when initially heated. Customer Service Great Britain Bosch Customer Service Grand Union House Old Wolverton Road Milton Keynes MK12 5PT UK +44 (0)844 892 8923 IRL +353 (0)1450 2655 www.

bosch-home.co.uk 008 TDA76..GB/11/10 Deposits come Traces of lime scale are coming Carry out a cleaning cycle (see out through out of the steam chamber Self Cleaning section) the holes in the soleplate Flashing lamp on top of handle () Auto-shut off has been activated.*

*Move the iron gently fromside to side to re-start it. The lamp will then flash once before it re-heats Operating instructions * Model dependent You can download this manual from the local homepages of Bosch Thank you for buying the TDA76 steam iron from Bosch. @@@@4. When the iron has reached the correct temperature, the pilot light (J) goes out. Set the steam regulator (C) to the maximum position. 5. Hold the iron horizontally and repeatedly press the shot of steam button (A). Any residue should come out of the soleplate (F). @@@@Before throwing a used appliance away, you should make it noticeably inoperable e.g.*

cut off the mains lead and be certain to dispose of it in accordance with current laws and regulations. Your retailer, town council or local council can give you detailed information about these. This appliance is labelled in accordance with European Directive 2002/96/EG concerning used electrical and electronic appliances (waste electrical and electronic equipment - WEEE). The guideline determines the framework for the return and recycling of used appliances as applicable throughout the EU. Tips to help you save energy Steam production consumes the most energy. To help minimise the energy used, follow the advice below: • Start by ironing the fabrics that require the lowest ironing temperature. @@• Only use steam if necessary. If possible, use the spray function instead.

@@@Steam will be generated from the fabrics rather than the iron. @@@@• Stand the iron upright during pauses.

@@@@• This appliance must be connected to an earthed socket. @@• The iron should not be used if it has been dropped, if there are visible signs of damage or if it is leaking water. It must be checked by an authorized Technical Service Centre before it can be used again. • Do not allow the power cable to come into contact with the soleplate when it is hot. • In order to avoid that, under unfavourable mains conditions, phenomena like transient voltage drops or lighting fluctuations can happen, it is recommended that the iron is connected to a power supply system with a maximum impedance of 0.

27Ω . If necessary, the user can ask the public power supply company for the system impedance at the interface point. • This appliance is not intended to be used by persons (including children) with reduced physical, sensory or mental capacities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety. • Keep the appliance out of children’s reach. @@@@•

The appliance must be used and placed on a stable surface.

@@@@@• Never immerse the iron in water or any other fluid. @@@@Risk of burns ! @@@Set the iron to its maximum temperature setting.

@@@While the iron is cold, iron a linen cloth soaked in white vinegar. @@@@Carefully read through the operating instructions for the appliance and safeguard them for future reference. Using Your Iron 1. Your iron M.Auto shut off indicator lamp A. Shot of steam B. Spray button . 3.*

Setting the temperature The temperature control (H) adjusts the temperature of the soleplate (F). 1. Check the temperature instructions shown on the care label of the garment you are ironing and set the temperature control (H) to the corresponding position by lining it up with the pointer (G) on the iron: Fabric Synthetics Silk - Wool Cotton - Linen F. Soleplate E. Water tank 4. Ironing with steam The steam regulator (C) is used to adjust the amount of steam produced when ironing. 1. Make sure that there is water in the tank (E). 2. Adjust the temperature setting and then set the steam regulator according to the table below.

Steam will automatically be produced: Temperature Setting Temperature Setting ••••• Note: At a temperature setting of “•”, the soleplate is not hot enough to produce steam so the steam regulator should be set to the position to avoid water dripping from the soleplate (F). 5. @@Power cable K. Water tank cover J. Pilot light m ax C.

Steam regulator m xa I. Max. Water H. Temperature control G. Pointer N.

*“Clean” button * Model dependent D. Spray outlet unplug the iron from the mains! Use only clean water from the tap without mixing anything with it.*

@@@@@This appliance has been designed to use normal tap water. @@@@If the garment is made from mixed fabrics, set the temperature for the most delicate material. 3. For silk, woollen or synthetic materials iron the reverse side of the fabric to prevent shiny patches. Avoid using the spray function to prevent stains. 4. Sort your garments based on their care labels, always starting with clothes that have to be ironed at the lowest temperature.



[You're reading an excerpt. Click here to read official BOSCH](#)

[TDA7640GB user guide](#)

<http://yourpdfguides.com/dref/4545816>

The pilot lamp (J) will stay lit while the iron is heating up and go out once the selected temperature has been reached. Wait a few seconds after the lamp goes out before you start ironing. Once the iron is ready, you can continue to iron even if the pilot lamp comes on again. 6. If your iron has auto shut-off and the pilot light (M) is flashing, the auto shut-off has activated. Gently move the iron side to side to restart it. 7. @@1. Set the steam regulator (C) to the position. 2. Select an appropriate temperature for the type of . @@4. Press the shot of steam button (A) on the handle at intervals of 5 seconds, however, after 4 jets of steam, wait for 10 seconds to allow for continued steam production. n mi Additional Features (Model Dependent) Auto shut-off Some irons in this range are equipped with an auto-shut off system. The "secure" auto shut-off function switches off the iron automatically when it is not being used, thus helping to prevent accidents and saving energy.

@@@@@To switch the iron back on, move it gently from side to side. The light will stop flashing. @@Use of the protector also does away with the need for a cloth to prevent shine on dark materials. It is advisable to first iron a small section on the inside of the garment to see if it is suitable. To attach the fabric protection soleplate cover to the iron, place the tip of the iron into the end of the fabric protector and press the rear of the protector upward until you hear a click.

To release the fabric protector, pull down on the clip at the rear and remove the iron. The protective cover can be purchased from After-sales or the Bosch e Shop. Accessory code (After-sales) 464851 Name of accessory: Protect cover soleplate (Bosch e Shop) TDZ1510 .



[You're reading an excerpt. Click here to read official BOSCH](http://yourpdfguides.com/dref/4545816)

[TDA7640GB user guide](http://yourpdfguides.com/dref/4545816)

<http://yourpdfguides.com/dref/4545816>