



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for BOSCH TDS2021GB. You'll find the answers to all your questions on the BOSCH TDS2021GB in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual BOSCH TDS2021GB  
User guide BOSCH TDS2021GB  
Operating instructions BOSCH TDS2021GB  
Instructions for use BOSCH TDS2021GB  
Instruction manual BOSCH TDS2021GB



*sensixx* B20L  
Operating instructions



[You're reading an excerpt. Click here to read official BOSCH TDS2021GB user guide](http://yourpdfguides.com/dref/4545821)  
<http://yourpdfguides.com/dref/4545821>



1. After ironing, pull out the plug and allow the appliance to cool down before cleaning.

2. Wipe the housing, handle and the socket. • This is completely normal and will stop after a short while. • During later use: the soleplate may be soiled. • variable steam control (10\*).

• used for a long time. • Use tap water mixed 50% with distilled or demineralised water. • Clean the sole plate with a damp cloth. • Never add products to the boiler water. • Set the main power button (12) to the "I" position and/or fill the water tank.

• Increase the steam flow by turning the steam control (10\*). • Select a suitable temperature for the material being ironed and clean the sole plate with a damp cloth. • Clean the soleplate regularly with a damp cloth. • This is normal. • If the sound will not stop, do not use the steam generator and contact an authorised technical service centre. Dirt comes out • There is a build-up of scale or through the sole plate, minerals in the steam tank. • Chemical products or additives have been used. The iron does not produce any steam. • The boiler is not switched on or the water tank is empty.

• The steam regulator is set to the minimum position. The ironed garment • The selected temperature is too high and has damaged the sticks to the soleplate. garment. The soleplate turns brown. The appliance makes a pumping sound. • This is a regular consequence of usage. • Water is being pumped into the steam tank. • Water drops stop coming out of the soleplate after using the "Ultimate steam" function for some time. Ensure that the steam generator is positioned to the side of the hand you are using to iron, to reduce contact with the hose as much as possible. Tighten up boiler drainage plug with a coin. Waterspots appear May be caused by steam on the garment during condensation on the ironing board.

ironing. Water spots appear Water spots are caused by steam on the garment during condensation in the hose when use of the "Ultimate cooling down after use. steam" function The hose gets hot during use. This is normal. • Contact an authorized technical service center on the pad.

click. • Your local town council can give you information about how to dispose of obsolete appliances. This appliance is labelled in accordance with European Directive 2002/96/EG concerning used electrical and electronic appliances (waste electrical and electronic equipment - WEEE). The guideline determines the framework for the return and recycling of used appliances as applicable throughout the EU. Guarantee conditions The terms of the guarantee for this appliance are in accordance with that stated by our representative for the country in which it is sold.

The details of these conditions can be obtained from the retailer from whom the appliance was purchased. The purchase receipt must be presented when making any claims against the terms of the.



[You're reading an excerpt. Click here to read official BOSCH](#)

[TDS2021GB user guide](#)

<http://yourpdfguides.com/dref/4545821>