



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for BOSCH WAA28168GB. You'll find the answers to all your questions on the BOSCH WAA28168GB in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

## User manual BOSCH WAA28168GB User guide BOSCH WAA28168GB Operating instructions BOSCH WAA28168GB Instructions for use BOSCH WAA28168GB Instruction manual BOSCH WAA28168GB

The image shows a multi-column excerpt from the BOSCH WAA28168GB user manual. The columns are color-coded and contain the following sections:

- Your washing machine:** Includes a 'Contents' table of contents and an 'Environmental protection' section.
- Intended use:** Lists safety warnings and instructions for use.
- Preparation:** Contains instructions for 'Checking the machine', 'Connecting the mains plug', and 'Turning the tap on'. It also includes a 'Setting and adjusting programmes' section with a diagram of the control panel.
- Washing:** Features a central illustration of the washing machine with numbered steps (1, 2, 3) and arrows indicating the process flow.
- Removing the washing:** Provides instructions for safely removing laundry from the machine.
- Individual settings:** Details how to adjust various functions like temperature and spin speed.
- Important information:** Contains critical safety and usage notes.



[You're reading an excerpt. Click here to read official BOSCH WAA28168GB user guide](http://yourpdfguides.com/dref/3656367)  
<http://yourpdfguides.com/dref/3656367>

**Manual abstract:**

@@@This directive provides the framework for the EU-wide collection and reuse of used appliances. Intended use for use in the household only, for machine-washable fabrics and hand-washable wool in detergent solution, to be operated with cold drinking water and commercially available detergents and care products which are suitable for use in washing machines. . Preparation Correct installation according to the separate Installation instructions. Before washing for the first time Wash once without any laundry page 9. Washing Removing the washing Open the washing machine door and remove the washing.

Remove any foreign objects - risk of rusting. Leave the washing machine door and detergent drawer open so that any residual water can evaporate.

Individual settings Additional functions Express Wash and overview of programmes, see page 7. Reduce spin speed (values depending on model).

Reduced wash time - only 2 rinse cycles.Suited for slightly soiled washing. Recommended load: up to a maximum of 3 kg. Important information Protecting the washing and the machine Empty pockets. Look out for metal items (paperclips, etc.

). Wash delicates in a laundry bag (tights, curtains, underwired bras). Fasten zips, do up any buttons. Brush sand out of pockets and collars. Remove curtain fittings or place in the laundry bag.

Wash new items of clothing separately. Do not pre-wash. If required, pretreat stains. Select programme Cottons 60°C Intensive Stains. Load less washing. Select programme Cottons 60°C + Prewash. Washing must not be treated with fabric softener Sorting and loading laundry Follow the manufacturer's care information. According to the information on the care labels. According to type, colour, soiling and temperature. Do not exceed the maximum load page 7.

Observe the important information page 6. Insert large and small items of laundry. Close the washing machine door. @@Detergent drawer with compartments I, II, Drum Control panel Washing machine door Checking the machine Never use a damaged machine. Inform the after-sales service. Start For starting the programme. Do not leave children unattended near the washing machine. @@ Keep pets away from the washing machine. Turning the tap off Not required for AquaStop models Installation Instructions, page 7. Hinweise Connecting the mains plug Make sure your hands are dry.

Take hold of the plug only. Washing with varying degrees of soiling light Add detergent and care products Measure accordingly: Amount of laundry, soiling, water hardness (ask your water supply company) and manufacturer's instructions. Pour liquid detergent into the appropriate dispenser and place in the drum.

Switching off Turn the programme selector to Off. heavy Turning the tap on Compartment II: Detergent for the main wash, water softener, bleach, stain remover Compartment : Fabric softener, starch Compartment I: Detergent for pre-wash Starching Starching is possible in all wash programmes if liquid starch is used.

Pour the starch in accordance with the manufacturer's instructions into fabric softener compartment (rinse first if necessary). Dilute thick fabric softener and fabric conditioner with water. This prevents blockages. Dyeing/bleaching Dye should only be used in normal household quantities. Salt may damage stainless steel.

Always follow the dye manufacturer's instructions! Do not use the washing machine for bleaching clothes! Contents Page Intended use .....1 Programmes .....

1 Setting and adjusting the programme .....

.....

.....

.....

.....

...3 Washing ..

.....

..3/4 After washing ....4 Individual settings ....

.....

.....

.....

.....

.....

.....

.....

.....

.....

....5 Important information .

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....6 Overview of programmes ....

.....

.....

.....  
.....  
.....  
.....  
.....

7 Safety instructions .....

.....  
.....  
.....  
.....  
.....

..8 Consumption values ...

.....  
.....  
.....  
.....  
.....

8 Before washing for the first time/Care .....

.....  
.....  
.....

..9 Information to indicator lights ...

.....  
.....  
.....  
.....  
.....

9 Maintenance .. 10 What to do if...

@@@@@ Individual settings, 1 End of programme when ... ..

. @@ Select Start. Programmes at lower temperatures: Select Spin or Drain. Select Start. Changing the programme, if ... ..

@@ Select Start. The new programme starts from the beginning. Environmental protection/Conservation tips Always fill the washing machine with a maximum amount of laundry for the relevant programme. Wash normally soiled washing without a pre-wash. @@@@ If the laundry is then dried in the tumble dryer, select the spin speed according to the instructions of the dryer manufacturer. Programme selector for switching the machine on and off and for selecting the programme. Can be turned in either direction. Washing 1 2 3 4 5 6 Robert Bosch Hausgeräte GmbH Carl-Wery-Str. 34 81739 München / Germany Safety instructions Read the instruction manual and installation instructions and all other information enclosed with the washing machine and act accordingly. Retain the documents for subsequent use.

Risk of electric shock Danger to life Never pull the cable to disconnect the mains plug. Never insert/disconnect the mains plug with damp hands. For worn-out appliances: Disconnect the mains plug. Sever the mains cable and discard along with the plug. Destroy the lock on the washing machine door. This will prevent children from locking themselves in and risking their lives. Keep packaging, film and packaging parts out of the reach of children. Keep detergents and care products out of the reach of children. Items of laundry pretreated with cleaning agents containing solvents, e.g. stain remover/cleaning solvent may cause an explosion after being loaded into the washing machine. Rinse items of laundry thoroughly by hand beforehand.

@@@ Be careful when draining hot detergent solution. Do not climb onto the washing machine. Do not lean on the open washing machine door. Do not reach into the drum if it is still rotating. @@ Turn on the tap. Add the following to compartment II: approx. @@@@ Allow the detergent solution to cool down. @@ Detergent not dispensed.

*Washing machine door cannot be opened. Programme does not start. Detergent solution is not drained. Water not visible in the drum. Unsatisfactory spin result. Laundry wet/too damp. Water is leaking out. Attach/replace the drainage hose correctly. Tighten the screw connection of the supply hose. Start not selected? Tap not turned on? Filter blocked? Clean the filter page 10.*

*Supply hose kinked or trapped? Safety function active. Wait approx. 2 minutes. Start selected? Washing machine door closed? Clean the detergent solution pump page 10. Clean the waste pipe and/or drainage hose.*

*Not a fault - water below the visible area. @@Distribute small and large items of laundry evenly inside the drum. Selected speed too low? page 5. Not a fault - unbalanced load detection system adjusts the imbalance. Not a fault - the action of the care product is not affected.*

*@@@curNo spin between rinse cycles tains) 2 kg Particularly gentle wash programme to prevent shrinkage of Hand or machine-washable fabrics made of wool laundry.*



**[You're reading an excerpt. Click here to read official BOSCH](#)**

**[WAA28168GB user guide](#)**

**<http://yourpdfguides.com/dref/3656367>**

Longer programme breaks (fabrics rest in the detergent Wool cold, 30 °C or containing wool solution) Additional programmes Rinse , Spin , Drain Programmes without prewash - add detergent to compartment II, programmes with prewash - distribute the detergent between compartments I and II. Refer to the table of consumption values on page 8 and notes on page 6. Care Risk of electric shock.Disconnect the mains plug. Risk of explosion. @@1. Remove the service flap for detergent solution pump. 2. Carefully unscrew the pump cover (residual water).

3. @@4. Replace the pump cover and screw it tightly. 5. Place the service flap back. To prevent unused detergent from flowing straight into the drain during the next wash: Pour 1 litre of water into compartment II and start the Drain programme. Additional functions; information Machine housing, control panel Wipe with a soft, damp cloth. @@Remove detergent and cleaning agent residue immediately. Do not clean with a jet of water. WAA28168GB Danger of suffocation Risk of poisoning Rering" during the Transportation safety devices removed? spin cycle.

Remove the transportation safety devices Installation instructions. Indicator lamps do not Power cut? function during Fuses triggered? Reset/change the fuses. operation. If the fault occurs repeatedly, call the after-sales service. Programme sequence Not a fault - unbalanced load detection system adjusts longer than usual.

imbalance by repeatedly distributing the laundry. Not a fault - foam detection system active - adds an additional rinse cycle. Detergent residues on Occasionally, phosphate-free detergents contain water-insoluble the laundry. residues. Select Rinse or brush the laundry after washing.

If you cannot correct a fault yourself or a repair is required: Turn the programme selector to Off and remove the mains plug from the socket. @@Residual water in the compartment for care products. Odour formation in the washing machine. Foam escaping from the detergent drawer. Washing machine Type of laundry Instruction manual en 30, 40, 60, 90 °C 60 °C 60 °C 30, 40, 60 °C °C Observe the safety instructions on page 8. Read these instructions and the separate installation instructions before operating the washing machine. 7 8 9 10 11 @@@@A call set-up fee of up to 6 pence may apply. @@@@@10 What to do if..

@@@@ Wash normally soiled washing without a pre-wash. @@@@@ Remove any foreign objects - risk of rusting. @@According to the information on the care labels. According to type, colour, soiling and temperature. Do not exceed the maximum load page 7. Observe the important information page 6. Insert large and small items of laundry. Close the washing machine door. @@Detergent drawer with compartments I, II, Drum Control panel Washing machine door Turning the tap off Not required for AquaStop models Installation Instructions, page 7. Hinweise Add detergent and care products Measure accordingly: Amount of laundry, soiling, water hardness (ask your water supply company) and manufacturer's instructions. ur liquid detergentn remover/cleaning solvent may cause an explosion after being loaded into the washing machine. Rinse items of laundry thoroughly by hand beforehand. @@Be careful when draining hot detergent solution. Do not climb onto the washing machine. Do not lean on the open washing machine door.

Do not reach into the drum if it is still rotating. @@@@Turn on the tap. Add the following to compartment II: approx. @@@Allow the detergent solution to cool down. @@ Risk of explosion.

@@1. Remove the service flap for detergent solution pump. 2. Carefully unscrew the pump cover (residual water). 3. @@4. Replace the pump cover and screw it tightly. 5. Place the service flap back. To prevent unused detergent from flowing straight into the drain during the next wash: Pour 1 litre of water into compartment II and start the Drain programme.

Machine housing, control panel Wipe with a soft, damp cloth. @@Remove detergent and cleaning agent residue immediately. @@1. @@2. Clean the drainage hose and siphon connecting piece. 3. @@if it contains detergent or fabric softener residues. 1. Pull out, press insert down, remove drawer completely. 2.

To remove the insert: press the insert upwards from below with your finger. 3. Clean the detergent dispenser tray and insert with water and a brush and dry it. 4. Attach the insert and engage (connect the cylinder to the guide pin).

5. Push in the detergent drawer. Leave the detergent drawer open so that any residual water can evaporate. Filter in the water supply Risk of electric shock Do not immerse the HydroSafe safety device in water (contains an electric valve). Reduce the water pressure in the supply hose: Turn off the tap.

Select any programme (except Spin/Drain). Select Start. Let the programme run for approximately 40 seconds. Turn the programme selector to Off. Disconnect the mains plug. Drum Leave the washing machine door open so that the drum can dry out. Rust stains - use chlorine-free cleaning agent, not steel wool. 1. 2. 3.

4. Descaling Ensure there is no laundry in the machine Descal the appliance according to the descaler manufacturer's instructions. This should not be necessary if the correct dosage of detergent is used. 5. Clean the filter: Disconnect the hose from the tap. Clean the filter using a small brush. and/or for Standard and Aqua-Secure models: Remove the hose on the rear of the appliance, Remove the filter with pliers and clean. 6. Connect the hose and check the leak tightness of the connection points. Information to indicator lights Indicator lights for status displays flash: Wash and Rinse Close the washing machine door properly; laundry may be caught.

Wash and Spin Open the tap completely. Supply hose kinked or trapped. Clean the filter page 10, Water pressure too low. @@@@ No water supply. Detergent not dispensed.

Washing machine door cannot be opened. Programme does not start. Detergent solution is not drained. Water not visible in the drum. Unsatisfactory spin result.

Laundry wet/too damp. Attach/replace the drainage hose correctly. Tighten the screw connection of the supply hose. Start not selected? Tap not turned on? Filter blocked? Clean the filter page 10. Supply hose kinked or trapped? Safety function active. Wait approx. 2 minutes. Start selected? Washing machine door closed? Clean the detergent solution pump page 10. Clean the waste pipe and/or drainage hose. Not a fault - water below the visible area.

@@Distribute small and large items of laundry evenly inside the drum. Selected speed too low? page 5. Not a fault - unbalanced load detection system adjusts the imbalance. Not a fault - the action of the care product is not affected. Clean the insert if necessary > page 9.



[You're reading an excerpt. Click here to read official BOSCH WAA28168GB user guide](http://yourpdfguides.com/dref/3656367)  
<http://yourpdfguides.com/dref/3656367>

Run programme Cottons 90 °C without laundry. Use standard detergent. Too much detergent used? If foam is escaping from the detergent drawer: Mix 1 tablespoon of fabric softener with ½ litre of water and pour into compartment II (not with outdoor or down fabrics). Reduce the detergent dosage for the next wash cycle. Intense noise formation, Are the appliance feet fixed? vibrations and Secure the appliance feet Installation instructions.

"wandering" during the Transportation safety devices removed? spin cycle. Remove the transportation safety devices Installation instructions. Indicator lamps do not Power cut? function during Fuses triggered? Reset/change the fuses. operation. If the fault occurs repeatedly, call the after-sales service. Programme sequence Not a fault - unbalanced load detection system adjusts longer than usual. imbalance by repeatedly distributing the laundry. Not a fault - foam detection system active - adds an additional rinse cycle. Detergent residues on Occasionally, phosphate-free detergents contain water-insoluble the laundry. residues.

Select Rinse or brush the laundry after washing. If you cannot correct a fault yourself or a repair is required: Turn the programme selector to Off and remove the mains plug from the socket. @@Residual water in the compartment for care products. Odour formation in the washing machine. Foam escaping from the detergent drawer. Washing machine Instruction manual en Observe the safety instructions on page 8. Read these instructions and the separate installation instructions before operating the washing machine. 11 .



[You're reading an excerpt. Click here to read official BOSCH](#)

[WAA28168GB user guide](#)

<http://yourpdfguides.com/dref/3656367>