



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for BOSCH WAQ24461GB. You'll find the answers to all your questions on the BOSCH WAQ24461GB in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual BOSCH WAQ24461GB User guide BOSCH WAQ24461GB Operating instructions BOSCH WAQ24461GB Instructions for use BOSCH WAQ24461GB Instruction manual BOSCH WAQ24461GB

<p>Safety instructions</p> <ul style="list-style-type: none"> The washing machine is heavy - take care when lifting. Caution: frozen hoses may rip/burst. Do not install the washing machine in areas exposed to frost or outdoors. The washing machine could be damaged. Do not lift the appliance by protruding components (e.g. the washing machine door, the cover, the front panel or the outer door in case of decco models). In addition to the instructions provided in this document, special regulations from the relevant water and electric utility companies may apply. If in doubt, have a technician connect the appliance. Lay hoses and cables in such a way that there is no risk of tripping. <p>Installation surface</p> <ul style="list-style-type: none"> The machine must be stable so that it does not move around. The installation surface must be firm and level. Soft floor/floor coverings are not suitable. <p>Installation on a pedestal</p> <ul style="list-style-type: none"> The feet of the washing machine must be secured with holding brackets.* * order no. WWA2200, W10716, CZ110600, Z7080X0 <p>Installation on a wood joist floor</p> <ul style="list-style-type: none"> If possible, place the washing machine in a corner. Screw a water-resistant wooden board (min. 30 mm thick) to the floor. The feet of the washing machine must be secured with holding brackets.* * order no. see above <p>Installing the appliance</p> <ul style="list-style-type: none"> Install the appliance before connecting it to the power supply. Do not remove the cover of the appliance! <p>Installation in a kitchenette (underneath the worktop or fitted in a cabinet)</p> <ul style="list-style-type: none"> Recess width of 60 cm required. Only install the washing machine underneath a continuous worktop that is securely connected to adjacent cabinets. 	<p>Scope of delivery <i>(depending on package)</i></p> <p>Also required, depending on the connection:</p> <ul style="list-style-type: none"> 11 hose clamps Ø 24-40 mm (exclusive dealers) to connect to a siphon → page 4; water connection. <p>Useful tools</p> <ul style="list-style-type: none"> Wrenches WAF 13; for loosening transport braces → page 3 and WAF 17; for aligning appliance feet → page 3. <p>Hose and cable lengths <i>(depending on model)</i></p> <p>Left-hand connection or Right-hand connection</p> <p>Available from specialist dealers/the after-sales service:</p> <ul style="list-style-type: none"> Extension for Aqua-Stop or cold water inlet hose (approx. 2.50 m), order no. WWA22300, W101030, CZ113500, Z7070X0 Longer inlet hose (approx. 2.20 m) for standard model. 	<p>Removing the transport braces</p> <ul style="list-style-type: none"> Before using the appliance for the first time, make sure that you completely remove transport braces and keep them for subsequent transportation. If you need to transport the appliance at a later date, always re-affix the transport braces to prevent damage to the machine. → page 6. Store the screw and sleeve together. <ol style="list-style-type: none"> Take the hoses out of the holders. Remove all 4 screws completely. Remove all 4 transport braces completely and take the mains cable out of the holders (depending on model). Affix the covers. <p>Water connection <i>(depending on model)</i></p> <p>Risk of electric shock: Do not immerse the Aqua-Stop safety device in water (contains an electric valve). To prevent leaks or water damage, observe the instructions in this section.</p> <p>Caution: only operate the washing machine using cold drinking water (in case of models designed for hot water, maximum temperature 60 °C).</p> <ul style="list-style-type: none"> Do not connect to the mixer tap of an unpressurised hot-water boiler. Do not use a used inlet hose. Only use the inlet hose supplied or one which was purchased from an authorised specialist dealer. If in doubt, have a technician connect the appliance. 	<p>Water connection <i>(depending on model)</i></p> <p>Water inlet</p> <p>Caution: do not bend, squash, modify or cut through (otherwise its strength is no longer guaranteed).</p> <p>Optimum water pressure in the supply network: 200-1,000 kPa (2-10 bar)</p> <ul style="list-style-type: none"> When the tap is on, the water flow is at least 10 l/min (l = 2.64 gal; 1 min; with 1 bar consumption parameters cannot be assured). If the water pressure is higher than this, a pressure reducing valve must be installed. <p>Connection to the tap: (Connection to the machine: not necessary with Aqua-Stop, fixed installation; necessary with Aqua-Secure, Standard)</p> <p>Aqua-Stop, Aqua-Secure Standard Aqua-Secure, Standard</p> <ol style="list-style-type: none"> Connect the water inlet hose (hoses) to the tap (taps) 3/4" - 26,4 mm and to the solenoid valve. Open the water tap (taps) carefully, checking the leak-tightness of the connection points. <p>Caution: the screw connector is under mains water pressure.</p> <p>Connections in case of hot water models:</p> <ul style="list-style-type: none"> COLD - Cold water HOT - Hot water max. 60 °C (red) If no hot water connection is present, only connect the cold water inlet hose and cover the hot water connection on the appliance so that it is kept free of dirt. <p>Water outlet</p> <p>Caution: do not bend or pull lengthways.</p> <p>Height difference between the installation surface and the drain: min. 60 cm - max. 100 cm</p> <p>Outlet in a sink:</p> <p>Caution: secure the drain hose from slipping out. Caution: the plug must not block drainage from the sink. During running, check whether the water is draining away quickly enough. The end of the drain hose must not be immersed in the water pumped out. This risks water being sucked back into the washing machine.</p> <p>Drainage into a siphon:</p> <p>Caution: the connection point must be secured with a hose clamp, Ø 24-40 mm (exclusive dealers).</p>
--	--	--	--



[You're reading an excerpt. Click here to read official BOSCH WAQ24461GB user guide](http://yourpdfguides.com/dref/4543276)
<http://yourpdfguides.com/dref/4543276>

Manual abstract:

– Caution: frozen hoses may rip/burst. – The washing machine could be damaged. Do not lift the appliance by protruding components (e.g. – If in doubt, have a technician connect the appliance. – Lay hoses and cables in such a way that there is no risk of tripping. Scope of delivery depending on model Aqua Stop Aqua Secure & Standard Hot water Moisture inside the drum is due to final testing. Removing the transport braces – Before using the appliance for the first time, make sure that you completely remove transport braces and keep them for subsequent transportation. – If you need to transport the appliance at a later date, always re-affix the transport braces to prevent damage to the machine. page 6.

– Take the hoses out of the holders. Connection to the machine: no necessary with AquaStop, fixed installation; Installation surface – The machine must be stable so that it does not move around. – The installation surface must be firm and level. – Soft floors/floor coverings are not suitable. – Remove all 4 screws completely.

max. 90° 3. – max. – * order no. – Screw a water-resistant wooden board (min.

30 mm thick) to the floor. – The feet of the washing machine must be secured with holding brackets*. * order no. see above Also required, depending on the connection: – 1 hose clamp Ø 24-40 mm (exclusive dealers) to connect to a siphon page 4; water connection. Useful tools – Spirit level for installation. – Wrenches WAF 13: for loosening transport braces page 3 and page 5. WAF 17: for aligning appliance feet 1. Connect the water inlet hose (hoses) to the tap (taps) 3/4" = 26,4 mm and to the solenoid valves. Caution: only tighten the screw connections by hand. 2.

Open the water tap (taps) carefully, checking the leak tightness of the connection points. Caution: the screw connection is under mains water pressure. Installing the appliance – Install the appliance before connecting it to the power supply. – Do not remove the cover of the appliance! Hose and cable lengths depending on model Left-hand connection ~ 100 cm ~ 145 cm 4. Affix the covers. Connection in case of hot water models: COLD – Cold water HOT – Hot water max. – Do not use a used inlet hose. Only use the inlet hose supplied or one which was purchased from an authorised specialist dealer. – If in doubt, have a technician connect the appliance. ~ 90 cm ~ 135 cm min.

60 cm Caution: do not bend or pull lengthways. Height difference between the installation surface and the drain: min. 60 cm - max. 100 cm Outlet in a sink: Caution: secure the drain hose from slipping out. Caution: the plug must not block drainage from the sink.

During pumping, check whether the water is draining away quickly enough. The end of the drain hose must not be immersed in the water pumped out. This risks water being sucked back into the washing machine. Available from specialist dealers/the after-sales service: – Extension for Aqua-Stop or cold-water inlet hose (approx. 2.

50 m), order no. WMZ2380, WZ10130, CZ11350, Z7070X0 – Longer inlet hose (approx. 2.20 m) for standard model. Drainage into a siphon: Caution: the connection point must be secured with a hose clamp, Ø 24-40 mm (exclusive dealers). 1 2 3 4 Alignment Intense noise formation, vibrations and “wandering” may be the result of incorrect alignment. Transportation, e.g. when moving home After-sales service If you cannot rectify the fault yourself (Operating instructions: What to do if.

. page 11), please contact our after-sales service. We will always find a suitable solution and will avoid a visit from a service technician wherever possible. The contact details for all countries can be found in the enclosed after-sales service directory. Please give the after-sales service the product number (E-Nr.) and the production number (FD) of the appliance. – Before transporting the washing machine: 1. Turn off the tap. 2. 3.

4. Disconnect the washing machine from the power supply. 5. – Change the height by turning the appliance feet. Caution: all four appliance feet must be firmly on the ground.

The washing machine must not wobble. – Preparing and installing transport braces: 1. – Please contact us. – 10 mm 3. Tighten the lock nut against the housing.

In doing so, hold the foot tight and do not adjust its height. 2. Affix all transport braces. In doing so, turn the bend on the hose holders inwards. Clamp the mains cable in the holders. Tighten the screws. 2. 3. 4. – for several weeks' holiday.

– Replacement mains cables are available from the after-sales service. Do not use multiple plugs/couplings or extension cables. – Do not plug in or unplug the mains plug with wet hands.

.

.

. 1 Installation surface. . .

.

.

.

. . 1 Installing the appliance

.

. . . 1 Scope of delivery. . .

.

.

. 2 Hose and cable lengths . .

.

.

. 2 Removing the transport braces .

.

. . . . 3 Water connection . .

.

.

.....3/4 Alignment ..

.....

.....

.....

..... 5 Electrical connection .

.....

.....

.....

.. 5 Transportation, e.g. when moving home

.. 6 Technical specifications. . .

.....

.....

... 6 After-sales service

.....

.....

..... 7 Aqua-Stop warranty . .

.....

.....

.....

.. @@Also observe the separate Instruction manual. @@– Caution: frozen hoses may rip/burst. @@– The washing machine could be damaged. Do not lift the appliance by protruding components (e.g. @@@@– If in doubt, have a technician connect the appliance. @@– The installation surface must be firm and level. – Soft floors/floor coverings are not suitable.

Covers Elbow for fixing the drainage hose in place Adapter 1/2"-3/4" (depending on model) Installation on a pedestal – The feet of the washing machine muse appliance. Caution: do not bend or pull lengthways. Height difference between the installation surface and the drain: min. 60 cm - max. 100 cm Outlet in a sink: Caution: secure the drain hose from slipping out. Caution: the plug must not block drainage from the sink. During pumping, check whether the water is draining away quickly enough. The end of the drain hose must not be immersed in the water pumped out. This risks water being sucked back into the washing machine. Drainage into a siphon: Caution: the connection point must be secured with a hose clamp, Ø 24-40 mm (exclusive dealers).

3 4 Alignment Intense noise formation, vibrations and "wandering" may be the result of incorrect alignment. Transportation, e.g. when moving home 1.

Before transporting the washing machine: 1.

Turn off the tap. 2. @3. @4. Disconnect the washing machine from the power supply.

5. @@@@Change the height by turning the appliance feet. Caution: all four appliance feet must be firmly on the ground. The washing machine must not wobble. @@Preparing and installing transport braces: 1.



[You're reading an excerpt. Click here to read official BOSCH](http://yourpdfguides.com/dref/4543276)

[WAQ24461GB user guide](http://yourpdfguides.com/dref/4543276)

<http://yourpdfguides.com/dref/4543276>

Remove all covers and store them. max. 10 mm 3. Tighten the lock nut against the housing. In doing so, hold the foot tight and do not adjust its height.

2. Affix all transport braces. In doing so, turn the bend on the hose holders inwards. Clamp the mains cable in the holders. @@@@ Replacement mains cables are available from the after-sales service. Do not use multiple plugs/couplings or extension cables. @@@ Do not plug in or unplug the mains plug with wet hands. @@page 11), please contact our after-sales service. We will always find a suitable solution and will avoid a visit from a service technician wherever possible. The contact details for all countries can be found in the enclosed after-sales service directory.

Please give the after-sales service the product number (E-Nr.) and the production number (FD) of the appliance. You will find this information on the inside of the washing machine door, on the opened service flap or at the rear of the appliance (depending on the model). Washing machine Product number Production number Rely on the professionalism of the manufacturer. Please contact us.

This will ensure that the repair is carried out by trained service technicians who arrive equipped with genuine spare parts for your appliance. Aqua-Stop warranty only for appliances with Aqua-Stop @@@@2. @@3. @@@@4. @@@@ for several weeks' holiday.



[You're reading an excerpt. Click here to read official BOSCH](#)

[WAQ24461GB user guide](#)

<http://yourpdfguides.com/dref/4543276>