



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for BOSCH WAQ28461GB. You'll find the answers to all your questions on the BOSCH WAQ28461GB in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual BOSCH WAQ28461GB User guide BOSCH WAQ28461GB Operating instructions BOSCH WAQ28461GB Instructions for use BOSCH WAQ28461GB Instruction manual BOSCH WAQ28461GB

The image shows a multi-page excerpt from the BOSCH WAQ28461GB user manual. The pages are arranged in a grid-like fashion, showing different sections of the manual. Key sections visible include:

- Your washing machine:** Contains information about the machine's features, safety instructions, and environmental data.
- Preparation:** Details the steps for sorting and loading laundry, including instructions on how to use detergent and water.
- Washing:** Provides instructions on how to start a wash cycle, including setting the temperature and selecting a program.
- Removing the washing:** Explains how to safely remove laundry from the machine, including instructions on how to handle wet clothes.
- Individual settings:** Describes how to adjust various settings such as temperature, spin speed, and energy saving modes.
- Important information:** Contains critical safety warnings and instructions regarding the use of the machine.



You're reading an excerpt. [Click here to read official BOSCH WAQ28461GB user guide](http://yourpdfguides.com/dref/4545302)
<http://yourpdfguides.com/dref/4545302>

Manual abstract:

Preparation Correct installation according to the separate installations actions. Before the first wash, run a wash cycle with no laundry in the machine Page 9. Washing Removing the washing Open the washing machine door and remove the washing. If (without final spin) is active: turn the programme selector to Drain or select the spin speed. Choose Start/Reload. Individual settings Option buttons You can change the spin speed and the temperature before the selected programme starts and while it is running. The effects depend on the programme progress. Individual settings Signal 1. @@Sort laundry according to the label's indications.

And according to type, colour, soiling and temperature. Page 7. Do not exceed the maximum load Observe important information! Page 6 Wash laundry of different sizes in the same wash programme. Close the door. @@@@Risk of rusting.

– Leave the washing machine door and detergent door open so that any residual water can evaporate. (Temperature °C) You can change the displayed washing temperature. The maximum selectable temperature depends on the current programme. – Follow the safety instructions on page 8! – Do not leave children unattended near the washing machine. @@– Keep pets away from the washing machine.

@@Handle the plug only! Turn the tap off Not required for Aqua-Stop models Refer to Installation instructions. (Ready in) When you select the programme, the relevant programme duration is displayed. You can delay the end of the programme before it begins. The ready in-time can be set in increments of one hour up to a maximum of 24 hours. Start/Reload. @@Choose 2. Setting the volume for... Set to + 1 step, release Add detergent and care products Measure detergent according: amount of laundry, soiling, water hardness (ask your water supply company) and manufacturer's instructions.

For models without insert for liquid detergent: Pour liquid detergent into the appropriate dispenser and place in the drum. (spin speed in rpm/ (without final spin)) Turning on the tap Switching off Turn the programme selector to Off. You can change the displayed spin speed. The maximum selectable spin speed depends on the model and which programme is currently selected. Additional functions SpeedPerfect EcoPerfect Overview of programmes, page 7 For washing in a shorter time with a washing outcome comparable to that of the standard programme. Maximum load Overview of programmes, page 7.

@@Special spin sequence with subsequent fluffing. @@@@5 seconds. @@@@Note: – The symbol is lit: Childlock active. – The symbol flashes: Childlock active and then the programme selector is altered.

To prevent the programme from stopping, move the programme selector back to the original programme, the symbol is lit again. Press Start/Reload if you want to add additional items of laundry after the programme has started. The machine checks whether reloading is possible. + are lit: reloading is possible. flashes: wait until + are lit.

+ symbols are lit. Note: do not open the door until both the : it is not possible to reload. Note: for safety reasons, the washing machine door remains locked when the water level and/or temperature is high, or during spinning. To continue the programme, press the Start/Reload button. Start/Reload flashes.

Press any button to switch on the * if necessary, select the function several times direct setting the volume* 1 step setting the volume* set to Insert for liquid detergent (depending on model) page 6 Compartment II: detergent for the main wash, water softener, bleach, stain remover Compartment Programmes Detailed overview of programmes page 7. @@Cottons + Prewash Easy-Care + Prewash Mixed Load Delicate/Silk Wool Rinse / Spin hard-wearing fabrics hard-wearing fabrics, prewash synthetic fabrics synthetic fabrics, prewash Different types of laundry Delicate washable fabrics Hand/machine washable wool

Laundry washed by hand, Aqua Plus button activated; if only using the spin cycle, deactivate the button Drain rinsing water with Short programme Dark laundry Lingerie programme microfibre fabrics hard-wearing fabrics Status displays (without final spin) Laundry washed by hand with a reduced spin speed :

Fabric softener, bleach Compartment I: Detergent for prewash Important information Protecting the laundry and the machine – When determining the dosage of all washing powders, additives and cleaning agents, you must follow the manufacturer's instructions.. – Empty all pockets – Check for metal items (paper-clips, etc.). – Wash delicates in a laundry bag (tights, curtains, underwired bras). – Fasten zips, do up any buttons. – Brush sand out of pockets and collars. – Remove curtain fittings or place in the laundry bag. Dilute viscous fabric softener and fabric conditioner with water.

This prevents blockages. Reduced Ironing Aqua Plus Contents Page Intended use1 Programmes ..

.....

.1 Setting and adjusting the programme

.....

.....

.....

.....

.....3 Washing .

.....

3/4 After washing

.4 Individual settings

.....

.....

.....

.....

.....

.....

.....

.....

.....

5/6 Important information

.....

.....

.....
.....
.....
.....
.....
.....

. @@10 What to do if ... @@11 Setting** and adjusting programmes Additional functions Display panel / option buttons Programme selector Start / Reload
**If the symbol flashes in the display panel, the childproof lock is active Deactivate childproof lock, page 5.
Additional functions and option Individual settings, buttons page 5. 1 End of programme when
.. Start/Reload flashes and - - appears on the display panel. Note: If display panel lighting is switched off, press any button Energy saving mode, page 5.
Childproof lock in the display panel Laundry with varying degrees of soiling Wash new items of clothing separately. Do not prewash. If required, choose the
additional function SpeedPerfect. Pre-treat any stains as necessary. intense wash Load less laundry. Choose a programme with a prewash.

Soaking Load laundry of the same colour. Pour soaking agent/detergent into compartment II in accordance with the manufacturer's instructions. Turn the 30
°C and press Start/Reload. After approx. 10 minutes, press Start/ programme selector to Cottons Reload to pause the programme. Once the required soaking
time has elapsed, press Start/Reload again to continue the programme, or select a different programme. Starch Laundry should not be treated with fabric
softener. light Starching is possible in all wash programmes if liquid starch is used. Pour the starch in accordance with the manufacturer's instructions into
fabric softener compartment (rinse first if necessary). Interrupting the programme Press Start/Reload 2 Service door 3 Protection of the
environment/Conservation tips – Always fill the washing machine with a maximum amount of laundry for the relevant programme.
– Wash normally soiled laundry without a pre-wash. 90 °C, choose the programme – Instead of Cottons 60 °C with the additional function EcoPerfect .
Cottons @@@@ – If the laundry is then dried in the tumble dryer, select spin speed according to instructions of dryer manufacturer.



[You're reading an excerpt. Click here to read official BOSCH
WAQ28461GB user guide
http://yourpdfguides.com/dref/4545302](#)

@@@ – Keep pets away from the washing machine. @@@@ @@@@ @@@@ 10 What to do if ...

@@@ – Wash normally soiled laundry without a pre-wash. @@@@ – If the laundry is then dried in the tumble dryer, select spin speed according to instructions of dryer manufacturer. Drain Gentle Spin Super Quick 15' Dark Wash Super delicate Sportswear Allergy+ - 90 °C 1 - 24 h - 1400* Status displays - (temp. °C) (Ready in) (rpm) Select the temperature (End of programme after ..

. =c (without final spin) Laundry washed by hand with a reduced spin speed Select the spin speed (* depend laundry soaks in the last rinsin Wash, rinse, spin, programme Childproof lock page 5 Programme sequence displays - Lingery programme microfibre fabrics hard-wearing fabrics Open the washing machine do 1 2 Before the first wash, run a wash cycle with no laundry in the machine Page 9. Washing Removing the washing Open the washing machine door and remove the washing. If (without final spin) is active: turn the programme selector to Drain or select the spin speed. Choose Start/Reload. Sorting and loading laundry Detergent drawer with compartments I, II, Drum Control panel Door Follow the manufacturer's care information! Sort laundry according to the label's indications. And according to type, colour, soiling and temperature. Page 7. Do not exceed the maximum load Observe important information! Page 6 Wash laundry of different sizes in the same wash programme. Close the door.

– Remove any foreign objects. Risk of rusting. – Leave the washing machine door and detergent door open so that any residual water can evaporate. Turn the tap off Not required for Aqua-Stop models Refer to Installation instructions. Add detergent and care products Measure detergent according: amount of laundry, soiling, water hardness (ask your water supply company) and manufacturer's instructions. For models without insert for liquid detergent: Pour liquid detergent into the appropriate dispenser and place in the drum. Switching off Turn the programme selector to Off. Dilute viscous fabric softener and fabric conditioner with water. This prevents blockages. Setting** and adjusting programmes Start / Reload **If the symbol flashes in the display panel, the childproof lock is active Deactivate childproof lock, page 5.

Additional functions and option Individual settings, buttons page 5. 1 End of programme when

.. Start/Reload flashes and - - appears on the display panel. Note: If display panel lighting is switched off, press any button Energy saving mode, page 5. me selector Interrupting the programme Press Start/Reload 2 Service door 3 All buttons are sensitive and need only to be touched lightly.

Press and hold the (Ready in) option button for an automatic run through all setting options. Programmes at high temperatures: – Cool washing: Select Rinse /Spin . – Press Start/Reload. Programmes at lower temperatures: – Select Rinse /Spin (deactivate Aqua Plus Drain . – Press Start/Reload. button) or cold) Programme selector for switching the machine on and off and for selecting the programme. Can be turned in either direction. Changing the programme if ...

... you have selected the wrong programme by mistake: – Reselect the programme. – Press Start/Reload. The new programme starts from the beginning. nding on the model) or (without final spin, ng water, display panel - - -) duration or end (-0-) pages 4, 5 s: Washing Reloading laundry if ... page 5 oor, reload laundry .

.. Press Start/Reload; both the symbols + are displayed on is lit, the washing machine door cannot be opened. the display panel. If Press Start/Reload. 3 4 Individual settings Option buttons You can change the spin speed and the temperature before the selected programme starts and while it is running. The effects depend on the programme progress. Individual settings Signal 1. Activating the mode for setting the signal volume 1 step, the press and display panel hold lights up Button signals Information signals (Temperature °C) You can change the displayed washing temperature. The maximum selectable temperature depends on the current programme.

(Ready in) When you select the programme, the relevant programme duration is displayed. You can delay the end of the programme before it begins. The ready in-time can be set in increments of one hour up to a maximum of 24 hours. @@ Choose Start/Reload. 2. @@@@ Maximum load Overview of programmes, page 7. @@ Special spin sequence with subsequent fluffing. @@@@ @@@@ @@@@ 5 seconds. @@@@ Note: – The symbol is lit: Childlock active. – The symbol flashes: Childlock active and then the programme selector is altered.

To prevent the programme from stopping, move the programme selector back to the original programme, the symbol is lit again. Press Start/Reload if you want to add additional items of laundry after the programme has started. The machine checks whether reloading is possible. + are lit: reloading is possible. flashes: wait until + are lit. Note: do not open the door until both the + symbols are lit. : it is not possible to reload. Note: for safety reasons, the washing machine door remains locked when the water level and/or temperature is high, or during spinning. To continue the programme, press the Start/Reload button.

Start/Reload flashes.

Press any button to switch on the * if necessary, select the function several times direct setting the volume* 1 step setting the volume* set to Important information Protecting the laundry and the machine – When determining the dosage of all washing powders, additives and cleaning agents, you must follow the manufacturer's instructions.. – Empty all pockets – Check for metal items (paper-clips, etc.). – Wash delicates in a laundry bag (tights, curtains, underwired bras).

– Fasten zips, do up any buttons. – Brush sand out of pockets and collars. – Remove curtain fittings or place in the laundry bag. Childproof lock in the display panel Laundry with varying degrees of soiling Wash new items of clothing separately. Do not prewash.

If required, choose the additional function SpeedPerfect. Pre-treat any stains as necessary. intense wash Load less laundry. Choose a programme with a prewash. Soaking Load laundry of the same colour. Pour soaking agent/detergent into compartment II in accordance with the manufacturer's instructions. Turn the 30 °C and press Start/Reload. After approx. 10 minutes, press Start/ programme selector to Cottons Reload to pause the programme. Once the required soaking time has elapsed, press Start/Reload again to continue the programme, or select a different programme.

Starch Laundry should not be treated with fabric softener. light Starching is possible in all wash programmes if liquid starch is used. Pour the starch in accordance with the manufacturer's instructions into fabric softener compartment (rinse first if necessary). Reloading + in the display panel Dyeing / Bleaching Dye should only be used in normal household quantities.



[You're reading an excerpt. Click here to read official BOSCH](http://yourpdfguides.com/dref/4545302)

[WAQ28461GB user guide](http://yourpdfguides.com/dref/4545302)

<http://yourpdfguides.com/dref/4545302>

Salt may damage stainless steel. Always follow the dye manufacturer's instructions. Do not use the washing machine for bleaching clothes. Insert for liquid detergent depending on model Position the insert for dispensing liquid detergent: – Remove the detergent drawer completely page 9 – Slide the insert forwards and click into place. Do not use the insert (slide upwards): for gel detergents and washing powder, for programmes with + Prewash and end time option. Energy saving mode The display panel lighting goes out after a few minutes, lighting.

Start/Reload To start the programme or to subsequently load additional laundry, and to activate/deactivate the childproof lock. 5 6 SpeedPerfect *, EcoPerfect , Reduced Ironing , Aqua Plus ; for particularly sensitive skin; longer wash programme at selected temperature, higher water level, additional rinse cycle for delicate fabrics, e.g., silk, satin, synthetic fibres or SpeedPerfect , EcoPerfect , Reduced Ironing , Aqua Plus blended fabrics (e.g. curtains) no spin between rinse cycles particularly delicate wash programme to avoid shrinkage of laundry; - 40 °C hand/machine washable wool longer programme breaks (fabrics rest in the detergent solution) 2 kg synthetic cotton, linen, synthetic fibres or blended fab- Short programme of approx. 15 minutes, - 40 °C rics suitable for lightly soiled laundry Robert Bosch Hausgeräte GmbH Carl Wery Str. 34 81739 Munich / Germany Safety instructions – Carefully read the instruction manual and the information enclosed, and act accordingly. – Keep the machine's documentation for future reference. Risk of electric shock! Danger to life! – Never pull the cable to disconnect the mains plug! – Never insert/disconnect the mains plug with damp hands. For worn-out appliances: – Disconnect the mains plug. – Sever the mains cable and discard along with the plug. – Destroy the lock on the washing machine door. This will prevent children from locking themselves in and risking their lives. – Keep packaging, film and packaging parts out of the reach of children. – Keep detergents and care products out of the reach of children. – Items of laundry pretreated with cleaning agents containing solvents, e.g. stain remover/cleaning solvent may lead to an explosion after being loaded into the washing machine. Rinse items of laundry thoroughly by hand beforehand.

-----The washing machine door may become very hot. Be careful when draining hot detergent solution. Do not climb onto the washing machine. Do not lean on the open washing machine door. Do not reach into the drum if it is still rotating. Be careful when opening the detergent drawer while the machine is in operation. ; , Aqua Plus , Aqua Plus ; ; , Aqua Plus , Reduced Ironing , Aqua Plus , Reduced Ironing , Aqua Plus - 40 °C 1 kg lingery SpeedPerfect , EcoPerfect , Reduced Ironing Super delicate + Additional programmes Rinse / Spin , Drain , Gentle Spin * reduced load with additional function SpeedPerfect . For programmes without prewash, add detergent to compartment II. For prewash programmes, distribute the detergent between compartments I and II. , Reduced Ironing SpeedPerfect , EcoPerfect , Reduced Ironing different types of laundry can be washed together Refer to the table of consumption values on page 8, and advice and warnings on page 6.

SpeedPerfect , EcoPerfect , Reduced Ironing reduced rinse and final spin cycle Additional functions; Information , Aqua Plus WAQ28461GB /... Danger of suffocation! Risk of poisoning! Risk of explosion! *, EcoPerfect , EcoPerfect SpeedPerfect SpeedPerfect SpeedPerfect , EcoPerfect Risk of injury! easy-care cotton, linen, synthetic or blended fabrics hard-wearing fabrics, cottons or linen that can be washed at 90°C 9000737235 9201 / 9000737235 Consumption values Programme Cottons 30 °C* Cottons 40 °C* Cottons 60 °C* Cottons 90 °C Easy-Care 40 °C* Mixed Load 40 °C Delicate/Silk 30 °C Wool 30 °C*

Load 8 kg 8 kg 8 kg 8 kg 3.5 kg 3.

5 kg 2 kg 2 kg 2 kg depending on model Water*** 68 l 68 l 68 l 80 l 55 l 47 l 34 l 39 l Programme duration*** 145 min 155 min 165 min 155 min 103 min 60 min 41 min 40 min dark cotton and dark synthetic fabrics Electricity*** 0.40 kWh 1.05 kWh 1.15 kWh 2.30 kWh 0.

64 kWh 0.54 kWh 0.19 kWh 0.17 kWh colour fast cottons or linen - 40 °C 3.5 kg cotton or synthetic fabrics Overview of programmes Type of laundry max. 8 kg/ 4 kg* microfibre fabrics - 60 °C - 40 °C - 90 °C - 60 °C - 40 °C - 40 °C * Programme setting for testing in accordance with valid standard EN60456. Note on comparative tests: For testing the test programmes, wash the specified load using the maximum spin speed. Programme Cottons 40/60 °C Additional function EcoPerfect ** Load 8/4 kg Annual energy consumption 179 kWh Annual water consumption 8700 l °C Super Quick 15' Delicate/Silk Mixed Load Programmes Easy-Care + Prewash Sportswear Dark Wash Cottons + Prewash ** Programme setting for testing and energy labelling in accordance with EU directive 2010/30/EU with cold water (15 °C). *** The values deviate from the indicated values depending on water pressure, hardness, and inlet temperature, ambient temperature, type, amount and soiling of the laundry, detergent used, fluctuations in the power supply and selected additional functions. Allergy+ Wool 7 8 Care and cleaning Before the first wash – Risk of electric shock! Disconnect the mains plug.

– Risk of explosion! Do not use solvents. Maintenance Detergent solution pump Turn the programme selector to Off and disconnect the mains plug. 1. Using a screwdriver or the insert for liquid detergent (depending on model), open and remove the service flap. – Risk of burning! Allow the detergent solution to cool. – Turn off the tap. Do not put laundry in the machine! Turn on the tap. Put into compartment II: – approx. 2 litres of water – detergent (measure according to the manufacturer's instructions for lightly soiled laundry and water hardness) Turn the programme selector to Easy-Care 60 °C and press Start/Reload. At the end of the programme, turn the programme selector to Off.

Machine housing, control panel – Remove detergent and cleaning agent residue. – Wipe with a soft, damp cloth. – Do not wash the machine with a jet of water! Cleaning the detergent drawer ...

... if it contains detergent or fabric softener residues. 2.

Remove the folding gutter and place a large enough container underneath. 3. For models with a drainage hose: Remove the drainage hose from the retainer and pull it from the housing. Remove the sealing cap, allow the detergent solution to flow out into the container. Replace the sealing cap and place the drainage hose in the retainer. 3* For models without a drainage hose: Carefully unscrew the pump cover 180° or until the detergent solution begins to flow out on the folding gutter.



[You're reading an excerpt. Click here to read official BOSCH WAQ28461GB user guide](http://yourpdfguides.com/dref/4545302)
<http://yourpdfguides.com/dref/4545302>

When the container is full, close the pump cover and empty the container. Repeat the above steps until all the detergent solution has completely drained out.

1. 2.

3. 4. 5. 6. Pull out, press insert down and remove drawer completely. To remove the insert: press upwards from below with your finger. For models with insert for liquid detergent: Slide the insert upwards and remove it from the back. Clean the detergent dispenser tray and inserts with water and a brush and dry them.

Attach the insert and engage (connect the cylinder to the guide pin). Push in the detergent drawer.

Leave the detergent drawer open so that any residual water can evaporate. Drum Leave the washing machine door open so that the drum can dry out. For rust stains, use chlorine-free cleaning agent, not steel wool. Descaling Ensure there is no laundry in the machine! This will not be necessary if the correct dosage of detergent is used. @@@@ Carefully unscrew the pump cover (there may be residual water).

5. @@6. Replace the pump cover and screw it tightly. 7. @@8.

Place the service flap back on and close. To prevent unused detergent from flowing straight into the drain during the next wash: Pour 2 litres of water into compartment II and then start the Drain programme. Drainage hose at the siphon Turn the programme selector to Off and disconnect the mains plug. 1.

Loosen the hose clamp, carefully remove the drainage hose (residual water). 2. Clean the drainage hose and siphon connecting piece. 3. Reattach the drainage hose and secure the connection with the hose clamp. Emergency release e.

g. in the event of a power cut The programme continues to run when the power has been restored. However, if the laundry has to be removed, the washing machine door can be opened as follows: Risk of scalding! The detergent solution and laundry may be hot. Let it cool. Do not reach into the drum if it is still rotating. Do not open the washing machine door if water can be seen through the glass. 1. Turn the programme selector to Off and disconnect the mains plug.

2. Drain the detergent solution page 10.

3. Pull the emergency release downwards with a tool and release. @@@@ Reduce the water pressure in the supply hose: Turn off the tap. Select any programme (except Rinse / Spin // Drain). Choose Start/Reload.

Let the programme run for approximately 40 seconds. Turn the programme selector to Off. Disconnect the mains plug. @@@@ – Detergent solution pump blocked; Clean the detergent solution pump page 10. – Drainage hose / waste pipe blocked; Clean the drainage hose at the siphon page 10.

– Heavy foam build-up page 11, status indicator flashes. Water in the base tub, appliance leaking. Call customer services! – Open the (hot water) tap fully. – Inlet hose kinked/trapped. – Water pressure too low. Clean the filter page 10. – Hot water hose not connected; appliance will operate using cold water only.

Ignore information, only for first wash cycle. Childproof lock activated: to deactivate page 5. 1.

2. 3. 4. 5. Disconnect the hose from the tap. Clean the filter using a small brush. and/or for Standard and Aqua-Secure models: Remove the hose on the rear of the appliance. Remove the filter with pliers and clean. 6. Connect the hose and check for leaks.

9 10 What to do if... Water is leaking out No water supply. Detergent not dispensed.

----- Attach/replace the drainage hose correctly. Tighten the screw connection of the supply hose. Start/Reload not selected? Tap not turned on? Filter blocked? Clean the filter page 10. Supply hose kinked or trapped? Safety function active. Programme stopped? page 4.

(without final spin) selected? page 3, 4. Can be opened by emergency release only? page 9. Door locked after the washing machine is switched off: Switch on the washing machine and wait for 5 seconds. Start/Reload or (Ready in) time selected? Washing machine door closed? Childproof lock active? Deactivate page 5. (without final spin) selected? page 3, 4. Clean the detergent solution pump page 10. Clean the waste pipe and/or drainage hose. Not a fault. Water remains inside below the visible area. The appliance door will not open.

The selected programme does – not start. – Detergent solution is not – drained. – No water can be seen in the – drum. Spin result not satisfactory. – Not a fault. Spin control system has stopped the spin cycle. Uneven distribution of Laundry wet/too damp. laundry. Distribute large and small items of laundry evenly in the drum. selected? page 5.

– Reduced Ironing – Selected speed too low? page 5. Programme duration changes – Not a fault. The program time can vary according to the distribution of laundry, with suddenly during operation. it therefore being possible for the display panel to show adjustments in the duration. Spin cycle performed several – Not a fault.

The balance control system has detected an imbalance and is times. attempting to redress this by repeating the spin. @@compartment for care products. – Clean the compartment if necessary page 9. @@Use standard detergent.

machine. Status display flashing. – Too much detergent used? @@@@ – Reduce the detergent dosage for the next wash cycle. Intense noise formation, – Are the appliance feet fixed? vibrations and "wandering" Secure the appliance feet Installation instructions. during the spin cycle. – Transportation safety devices removed? Remove transportation safety devices Installation instructions. Display panel/indicator lamps – Energy-saving mode page 5. remain turned off while the – Power cut? machine is working. – Fuses triggered? Reset/change the fuse. – If the fault occurs repeatedly, call customer services.

Programme sequence longer – Not a fault. @@distributing the laundry. @@@@laundry. – Select Rinse / Spin or brush out the laundry after washing. If you cannot correct a fault yourself or if a repair is necessary: – Turn the programme selector to Off and remove the mains plug from the socket. – Turn off the water supply and call customer services Installation instructions. Washing machine en Instruction manual 11 .



[You're reading an excerpt. Click here to read official BOSCH](http://yourpdfguides.com/dref/4545302)

[WAQ28461GB user guide](http://yourpdfguides.com/dref/4545302)

<http://yourpdfguides.com/dref/4545302>