




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for BOSCH WOL1650EU. You'll find the answers to all your questions on the BOSCH WOL1650EU in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual BOSCH WOL1650EU
User guide BOSCH WOL1650EU
Operating instructions BOSCH WOL1650EU
Instructions for use BOSCH WOL1650EU
Instruction manual BOSCH WOL1650EU

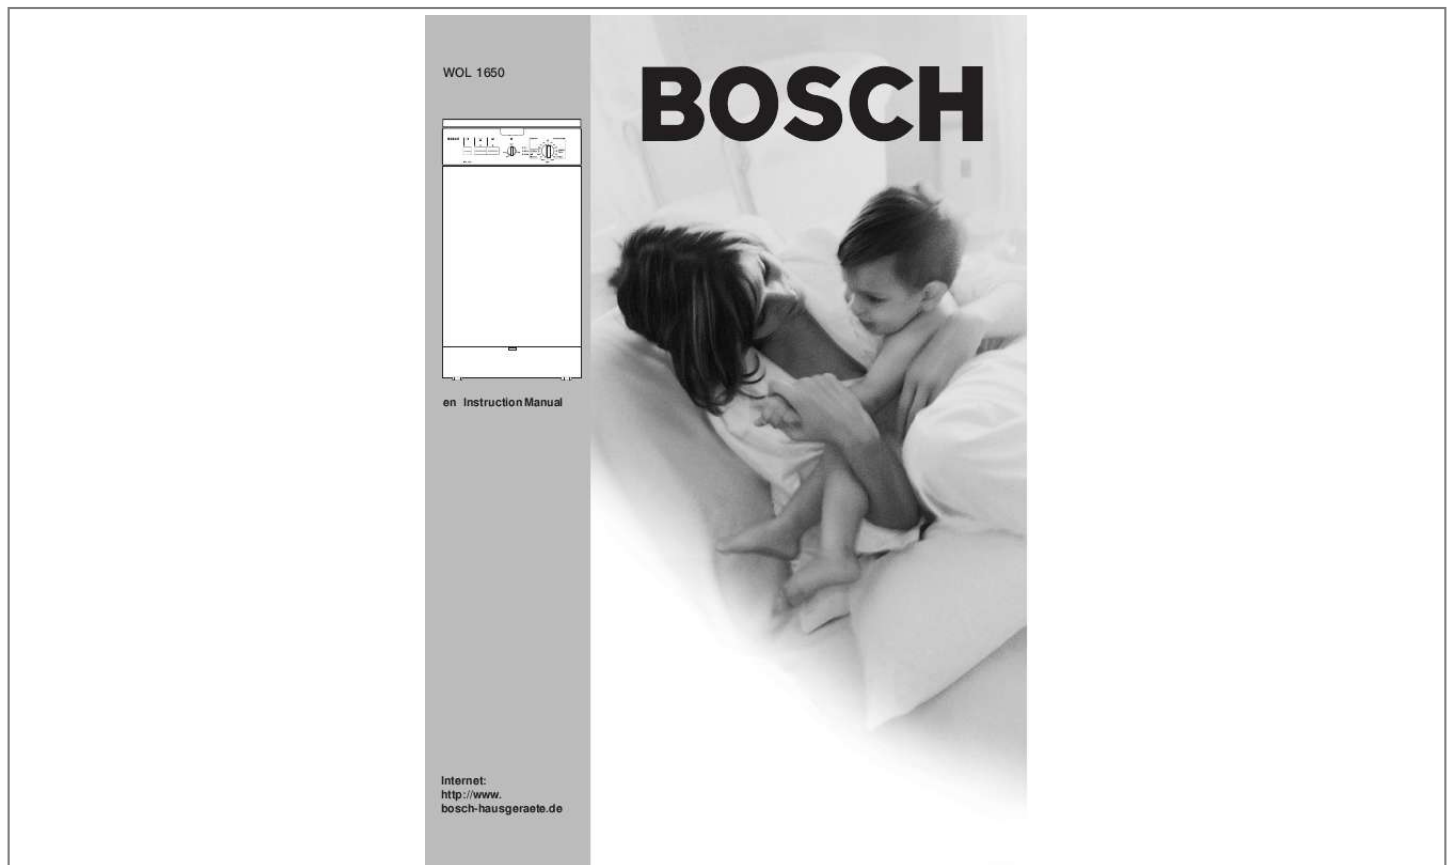

[You're reading an excerpt. Click here to read official BOSCH WOL1650EU user guide](http://yourpdfguides.com/dref/3655916)
<http://yourpdfguides.com/dref/3655916>

Manual abstract:

@@.....
.....
.....
.. *Environmental Protection / Conservation Issues*

.....
.....
.....
..... *General Safety Instructions* ...

.....
.....
.....
..... *Mobility*

.....
.....
.....
..... *Your New Washing Machine* .

.....
.....
.....
..... *Before Using Your Washing Machine For the First Time*

.....
.....
.....
..... *Appliance lid and drum lid* .

.....
.....
.....
..... *Preparing, Sorting and Loading the Laundry* ..

.. *Laundry Detergents and Additives*

.... *Selecting Programmes* .
.....
.....

..... *Washing*

.....
.....
.....
.....

..... *When the Programme has Ended* ..

.....
.....
.....
..... *Special Applications*

.....
.....
.....
..... *Cleaning and Care* .

.....
.....
.....
..... *Troubleshooting Minor Faults* .

.....
.....
.....
..... *Customer Service*

.....
.....
.....
..... *Consumption Rates*

@@@@@If you have any queries - especially concerning installation and connection of the washing machine - our customer service will be happy to advise you. Further information and a selection of our products can be found on our Internet page: <http://www.bosch-hausgeraete.de> Please read and observe these operating and installation instructions and all other information enclosed with the washing machine. These operating and installation instructions

describe various models.

Differences are indicated in the appropriate places. Keep all documentation in a safe place for subsequent use or for the next owner of the appliance. 3 Disposal Information Disposing of the packaging The shipping package has protected your new appliance on its way to your home. All packaging materials are environment friendly and recyclable. Please contribute to a better environment by disposing of packaging materials in an environmentally conscious manner. Please ask your dealer or local authority about best means of disposal. d Danger of suffocation! Keep children away from shipping carton and packaging components. Danger of suffocation from folding cartons and plastic film. Disposing of your old appliance Old appliances are not worthless rubbish! Environment conscious recycling can reclaim valuable raw materials. d Danger of fatal injury! On out of service appliances, unplug mains plug.

Cut off power cord and discard with mains plug. Destroy the lock on the appliance lid. This will prevent children from locking themselves in and suffocating. 4 Environmental Protection / Conservation Issues Through the economical use of energy, water and detergents, your appliance is kind to the environment as well as your household budget. The consumption rates of this appliance can be found on Page 39. Please observe the following in order to wash your laundry in an economical and environmentally friendly manner: - Do not exceed the maximum load specifications: Cottons + Linens 4.5 kg Easy care 2.0 kg Delicates and Woollens 2.0 kg For small amounts of laundry, the automatic water level control system reduces the consumption of both water and energy. - Where possible, use the 60 °C Intensive/Stains" programme instead of the 90 °C Cottons + Linens" programme.

The extended washing duration means that a cleaning result comparable to that of the 90 °C programme is achieved using considerably less energy. - Avoid using the Prewash programme when washing lightly to normally soiled laundry. - Add detergent according to the degree of soiling, amount of laundry and water hardness, and observe the detergent manufacturer's instructions. 5 General Safety Instructions Your washing machine is intended: - For domestic use only. - For washing machine washable fabrics in washing lye.

- For operation using cold tap water and conventional laundry detergents and additives that are suitable for use in washing machines. @@Keep domestic pets away from the washing machine. Do not grip the mains plug with wet hands. Never pull out the mains plug by tugging the cable. Caution when draining hot water.

@@@Caution The appliance is designed to be moved within the room in which it is situated only and should not be moved on its rollers over greater distances. When moving the appliance, do not run over the water connections (inlet and outlet) or the electrical connection (mains cable)! The drainage hose can be fastened in the hose compartment on the rear of the appliance. The mains cable can be wound up and the mains plug inserted in the park position on the rear of the appliance (see installation instructions). Swivel the lever under the front of the appliance from right to left. The appliance is now standing on its rollers. 7 q Grip the recesses on the left and right sides of the appliance and roll the appliance into the desired location. q Put back the lever (swivel the lever to the right). The appliance is situated firmly on its feet again. q Check that the appliance is situated vertically and has all 4 feet firmly on the floor. Otherwise, the appliance may generate loud noises and/or move during a spin cycle.

8 Your New Washing Machine Filling laundry detergent and/or additive dispensers Chamber I: Detergent for prewash or starch. Chamber II: Detergent for main wash, softener, bleach, stain remover or soaking agent. 2 Chamber: Additives, e.g. fabric softener or former Drain washing solution if necessary 9 Control panel 1. Select a programme Switches on / off the washing machine. Can be turned in both directions. The programme selector cannot be turned when the programme is in progress. The programme sequence is controlled electronically. 2.

Control lights illuminate End" when programme is finished. Active" when 3" is pressed. Ready" when programme is selected. Flashing control lights = operating fault. 3.

Set the spin speed (if desired) Variable; must click into place at C". 4. @@D": Shortened programme duration. It is also possible to combine the additional functions at any time. @@To cancel the additional function: Press the button again.

5. @@Your appliance was tested before leaving the factory. @@q Do not load any laundry. q Turn on the water tap. q Pour approx. @@@@q Set the programme selector to 90 °C Cottons + Linens". The Ready" control light comes on. q Press the 3" button. The Active" control light comes on. @@The lid springs open.

q Open the lid. @@q Grip the recesses in the drum and rotate the drum in the direction of the arrow until the drum lid is situated at the top. q Press on the rear half of the lid until the hook is released in the slot. q In this position grip the front half of the lid and open the rear half of the lid. q Open the front half of the lid. 12 Closing the drum lid q Close the front half of the lid. q In this position grip the front half of the lid, close the rear half of the lid, ensuring that the hook of the front half of the lid engages with the slot in the rear half of the lid. q Release the two halves of the lid. q The two halves of the drum lid are correctly closed if they do not open when the front half of the lid is pressed down.



[You're reading an excerpt. Click here to read official BOSCH](http://yourpdfguides.com/dref/3655916)

[WOL1650EU user guide](http://yourpdfguides.com/dref/3655916)

<http://yourpdfguides.com/dref/3655916>

Closing the appliance lid q Close the lid and press until it locks into position.

13 Preparing, Sorting and Loading the Laundry Preparing the laundry Caution Loose debris (e.g. coins, paper clips, needles, nails) can damage items of clothing as well as parts of the washing machine (e.g. drum).

q Empty all pockets on items of clothing. q Brush out any sand from pockets and cuffs. q Close zip fasteners and button up bed covers. q Remove curtain runners or tie them up in a net / bag. q The following items must be washed inside a net / pillow case: - Extremely delicate items, e.g. fine tights, net curtains. - Small items, e.g. small socks or handkerchiefs. - Underwired bras (the wire may come loose during washing and cause damage). q When washing trousers, knitwear and woven fabrics, e.g. shirts, T shirts or sweatshirts, always turn these items inside out. 14 Sorting the laundry According to colour and degree of dirt Caution Items of clothing can become discoloured.

Never wash new multi coloured items together with other items. White items may become grey. Always wash white and coloured items separately. Degrees of dirt Slight dirt No recognizable dirt or staining. Laundry may have some body odour. - Light summer clothing and sportswear that has only been worn for a few hours. - T shirts, shirts and blouses that have been worn for up to one day. - Bed linen and guest towels that have been used for one day. Normal dirt

Visible dirt and/or some light staining recognizable. - T shirts, shirts and blouses that are very sweaty or have been worn several times.

- Underwear that has been worn for one day. - Tea towels, hand towels and bed linen that have been used for up to one week. - Net curtains (without nicotine staining) that have not been washed for up to ½ year. 15 Intensive dirt Dirt and/or staining recognizable. - Kitchen hand towels that have been used for up to one week.

- Fabric napkins. - Bibs. - Children's outer clothing or football shirts and shorts with grass and soil stains. - Working clothes such as overalls or baker's and butcher's coats. Typical stains - Skin fat, cooking oils / fat, sauces, mineral oil, wax (containing fat / oil).

- Tea, coffee, red wine, fruit, vegetables (bleachable). - Blood, egg, milk, starch (containing protein / carbohydrate). - Soot, soil, sand (pigments), red sand on tennis clothes. @@First, dab soapy water onto the stain. Do not rub. @@@@Therefore, these items must first be rinsed thoroughly by hand. ly dirty laundry. Recommended load amount: Up to a maximum of 3 kg. @@Start the "Drain" or "Spin" programme. The washing can also be removed dripping wet.

Set the programme selector to "Off" and wait approx. @@@@The "Active" control light comes on, and the programme starts. @@q Turn the programme selector to the desired programme. The "Ready" control light comes on. q Press the "3" button. @@q Turn the programme selector to "Drain" or "Spin". The "Ready" control light comes on. For "Spin", select the desired spin speed (but not "C"). q Press the "3" button. @@@@q Press the "3" button. @@@@In this latter case, select the "Drain" or "Spin" programme. q Unload the laundry. Caution Remove any debris (e.g. @@@@q Turn the programme selector to 30 °C Cottons + Linens".

The "Ready" control light comes on. q Press the "3" button. The "Active" control light comes on, and the programme starts. q After approx. 10 minutes, turn the programme selector to "Off".

The laundry is left to lie in the water. q Select a programme after the desired soaking period. Do not add any additional detergent. @@q Load the laundry. q Dispense the correct amount of starch for approx. 15 litres / 3.3 gal. of water. @@q technician. @@q Disconnect the washing machine from the mains.

q Turn off the water tap. @@@@Wait 2 minutes. Select "Cottons+Linens 60 °C + Prewash". Dry detergent dispensers before filling with detergent. Use the dispensing aid for liquid detergent. Insert for liquid detergent pressed down. @@@@ill i Cause Fuse tripped. pp Action Switch on/replace fuse. @@If the washing is to be removed, proceed as described under "Cleaning the pump"; see Page 31. Close the lid ("clicks" shut).

Plug loose or not plugged in. Programme does not start. "Ready" indicator light flashes. Programme does not start. "Ready", "Active" and "End" indicator lights flash.

Programme does not start. Water does not flow in or detergent is not dispensed. "Active" indicator lights flashes. Water is not completely py drained. did "End" indicator light flashes.

Water runs out from under the appliance. @@Tap not turned on. Inlet hose bent or pinched. Filters in water inlet blocked. Foreign objects blocking the pump. High fluff garments were washed. Drainage hose bent. Drainage pipe or drainage hose blocked. Screw fitting of inlet hose leaking. Drainage hose leaking.

Press the "3" button. Turn on the tap. Clean the filters; see Page 32. Clean the pump; see Page 31. Clean the drainage pipe and/or drainage hose, see Page 31. Tighten the screw fitting. @@@@Switch on the appliance again. @@Noises may be generated during the running in phase of the drive motor. Not a fault. Noises generated when the pump starts up or draws air are normal.

Programme not ended or "C" selected. When the water has been drained and the programme has ended, the appliance lid can be opened after approx. 2 minutes. Remove the transit bolts; see installation instructions. Secure the appliance feet.

Swivel the lever from left to right. Vibrations during wash and spin cycles Transit bolts not removed Appliance feet not secured. Appliance standing on rollers. Repeated spinning Not a fault. Unbalanced load detection system attempts to remove an imbalance by repeatedly spinning the washing.

Not a fault. Unbalanced load detection system attempts to remove an imbalance by repeatedly distributing the washing. Foam detection function has implemented an additional rinse cycle to dissolve the foam. Wash large and small items of washing together to reduce the imbalance. Programme runs for longer than usual. Adjust detergent dosing for the next wash cycle. Select suitable programme. @@if Soiling is greater than assumed. @@@@This is because consultation provided by our technicians, even within the warranty period, will lead to costs being incurred by yourself. Your nearest Customer Service centre can be found in the index supplied.

When calling the Customer Service, please specify the product number (E Nr.) and production number (FD Nr.) of your appliance. This information can be found on the rating plate on the edge of the maintenance panel and in the box marked in bold outline on the identification plate located on the rear of the appliance. E Nr. FD Identification plate Product number Production number Please note the two numbers in the space provided above.



[You're reading an excerpt. Click here to read official BOSCH](#)

[WOL1650EU user guide](#)

<http://yourpdfguides.com/dref/3655916>

In specifying the product number and production number of your appliance, you help us in our attempt to prevent unnecessary travelling and the associated extra costs.

*38 Consumption Rates Normal programme (without additional functions) (with additional functions) 40 °C Cottons + Linens 60 °C Cottons + Linens 60 °C Cottons + Linens Intensive/Stains 90 °C Cottons + Linens (the hot washing solution is mixed with approx. 7 litres of cold water before being drained) 40 °C Easy care 30 °C Delicates 30 °C Woollens * Load 4.5 kg * 4.*

*5 kg * 4.5 kg 4.5 kg Consumption rates ** Electricity 0.5 kWh 0.85 kWh 0.85 kWh 1.7 kWh Water 49 l 49 l 49 l 56 l Duration 115 min. 115 min. 135 min. 120 min.*

*2.0 kg * 2.0 kg 2.0 kg * 0.4 0.3 0.2 kWh kWh kWh 48 l 55 l 35 l 75 min. 45 min. 55 min. Calculated from test programmes pursuant to EN 60456 ** The consumption rates may deviate from the stated values depending on water pressure and hardness, room temperature, type and amount of laundry, detergents used, fluctuations in the mains voltage and selected additional functions.*

39 ROBERT BOSCH HAUSGERÄTE GMBH 0902 en 5550 007 273 .



[You're reading an excerpt. Click here to read official BOSCH WOL1650EU user guide](#)
<http://yourpdfguides.com/dref/3655916>