



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for BOSCH WTE84105GB. You'll find the answers to all your questions on the BOSCH WTE84105GB in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual BOSCH WTE84105GB User guide BOSCH WTE84105GB Operating instructions BOSCH WTE84105GB Instructions for use BOSCH WTE84105GB Instruction manual BOSCH WTE84105GB

Your new dryer

Intended use

Preparing for use

Drying

Emptying condensation

Information on laundry ...

Care and cleaning

Contents

Additional functions	Priority panel	Programme selector
Low heat	Start	Start
High heat	Pause	Pause
...



[You're reading an excerpt. Click here to read official BOSCH WTE84105GB user guide](http://yourpdfguides.com/dref/4544754)
<http://yourpdfguides.com/dref/4544754>

Manual abstract:

Drying Inspecting the dryer Connecting the mains plug Condensation container Drum interior light (depending on model) Control panel Emptying condensation Empty container after each drying operation! 1. Pull out condensation container keeping it horizontal. 2. Pour out condensation. 3. Always push container in fully until it clicks into place. If Container flashes in the display panel What to do if..., Page 10.

Information on laundry ... Labelling of fabrics Follow the manufacturer's care information. Drying at normal temperature.

Drying at low temperature also select Low Heat . Do not machine dry. Observe safety instructions without fail Page 11! @@rubber-coated fabrics). @@- Do not use harsh cleaning agents and solvents. - Remove detergent and cleaning agent residue immediately.

Clean the air cooler 5 - 6 times a year or if Clean flashes after cleaning the fluff filter. Do not leave children unsupervised near the dryer. Keep pets away from the dryer. Make sure your hands are dry. Hold the plug only. Cleaning the fluff filter Clean the fluff filter after each drying operation. 1. Open the door, remove fluff from door/door area. 2. Pull out and fold open the fluff filter.

3. Remove the fluff (by wiping the filter with your hand). @@4. Close and reinsert the fluff filter. Air cooler - Allow the dryer to cool. @@Unlock the maintenance door. 2. Open the maintenance door fully. Sorting and loading laundry Remove all items from pockets. Check for cigarette lighters.

The drum must be empty prior to loading. See programme overview on page 7. they may crease Drying tips - To ensure a consistent result, sort the laundry by fabric type and drying programme. - Always dry very small items (e.g.

baby socks) together with large items of laundry (e.g. hand towel). - Close zips, hooks and eyelets, and button up covers. Tie fabric belts, apron strings, etc. together - Do not over-dry easy-care laundry risk of creasing! Allow laundry to finish drying in the air. - Do not dry woollens in the dryer, only use to freshen them up Page 7, Woollens finish Programme (depending on model). - Do not iron laundry immediately after drying, fold items up and leave for a while the remaining moisture will then be distributed evenly. - Machine-knitted fabrics (e.g. T-shirts or jerseys) often shrink the first time they are dried do not use the Extra Dry programme. - Starched laundry is not always suitable for dryers starch leaves behind a coating that adversely affects the drying operation. - Use the correct dosage of fabric softener as per the manufacturer's instructions when washing the laundry to be dried. - Use the timer programme for small loads this improves the drying result. Switching off the dryer Turn the programme selector to Off.

Do not leave laundry in the dryer. Selecting and adjusting the programme Contents Page Preparation

.

.

. . . 2 Setting the programmes

. 2 Drying

.

.

.

3/4 Information on laundry

. . . . 5 Care and cleaning .

.

.

. 6 Programme overview

.

. . 7 Installation . . .

.

. 8 Frost protection/transport

.

. . . 8 Technical data

.

. . . 9 Optional accessories . .

.

. 9 What to do if.

.. / After-sales service 10 Safety instructions

.

.

. . . 11 Select the drying programme @@Turn both locking levers towards each another. 4.

@@Clean with warm water only. Do not use any hard or sharp-edged objects. 5. Clean the air cooler thoroughly, Allow to drip dry. 6. Clean the seals. 7. Reinsert the air cooler, with the handle facing down. 8. Turn back both locking levers.

9. @@@@- Make sure the room is well ventilated during drying. - Do not obstruct or seal up the air inlet. - Keep the air cooler clean page 6 "Care and cleaning". Moisture sensors The dryer is fitted with stainless steel moisture sensors.

The sensors measure the level of moisture in the laundry. After a long period of operation, a fine layer of limescale may form on the sensors. 1. Open the door and clean the moisture sensors with a damp sponge which has a rough surface. Do not use steel wool or abrasive materials.

Service displays Programme end as soon as the light comes on Interrupt programme removing or adding laundry. The drying cycle can be interrupted for a brief period so that laundry may be added or removed. The programme selected must then be resumed and completed. Never switch the dryer off before the

drying process has ended. Drum and door may be hot! 1. 2. 3. 4. Open door, the drying process is interrupted. Load or remove laundry and close door.

If required, select a new programme and additional functions. Press the Start/Stop button. Container Clean Low Heat Empty the condensation container. @@for polyacrylics, polyamide, elastane or acetate. Drying 1 2 3 4 5 6 max. 1.5 kg For fabrics with membrane coating, water-repellent fabrics, functional clothing, fleece fabrics (dry jackets/trousers with removable internal lining separately). For laundry made of synthetic fibres, cotton or blended fabrics (for example) that needs to be dried quickly. The values may max. 2 kg differ from the those specified depending on the type of fabric, mixture of laundry to be dried, residual moisture in the fabric and loading capacity.

max. 3 kg For pre-dried, multi-layered, sensitive fabrics made of acrylic fibres, or separate small items of laundry. Also for subsequent drying. WTE84105GB

Installation ----- Delivery specification: dryer, instructions for installation and use. Check dryer for transport damage.

The dryer is very heavy. Do not attempt to lift it on your own. Be careful to avoid sharp edges. Do not lift the dryer by any of the protruding parts (e.g. the door) as they may break off. Do not set up in a room that is susceptible to frost. Freezing water may cause damage. – If in doubt, have the appliance connected by an expert. Take all accessory parts out of the drum. The drum must be empty. Technical data Dimensions (DxWxH) Weight Max.

@@@A call set-up fee of up to 6 pence may apply.) – IE 01450 2655 When contacting the after-sales service, please quote the appliance's product number (E no.) and production number (FD) (see the inside of the door).

Set the programme selector to Off and remove the appliance plug from the socket. The Start/Stop indicator Mains plug plugged in? lamp does not light up.

Programme selected? Empty the condensation container. @@flashing. @@indicator lights are flashing. Dryer does not start. Start/Stop button selected?

Door closed? Programme set? Ambient temperature greater than 5 °C? Water is running out. Align dryer horizontally. Clean air cooler seal. The door opens by itself.

@@The dryer must NEVER... @@In rooms inside the house. To dry fabrics.

Be used for other purposes than those described above. Be modified in terms of its technology or attributes. @@Do not leave children unsupervised near the dryer. Keep pets away from the dryer.



[You're reading an excerpt. Click here to read official BOSCH](#)

[WTE84105GB user guide](#)

<http://yourpdfguides.com/dref/4544754>

Remove all objects from pockets.

@@Do not lean or sit on the door risk of tipping. Secure loose cables tripping hazard. Do not operate the dryer if there is a risk of frost. @@The cable cross-section must be sufficient. @@Do not use multiple plugs/couplings and/or extension cables. Do not hold the appliance plug with wet hands risk of electric shock. Never pull the appliance plug out of the socket by its cable. risk of electric shock. Do not damage the mains lead Only load the drum with laundry.

Check the contents before you switch the dryer on.

@@@Dust (e.g. @@Do not put laundry containing foamed material/rubber in the dryer elastic material may be destroyed and the dryer may be damaged due to possible deformation of the foamed material. Switch off the dryer once the programme h to Off. Optional accessories (order from the after-sales service using the order number) WTZ 1110 Connection fittings for condensation outlet The condensation is conveyed directly via a hose. Washer-dryer stack connection set WTZ 11310 The dryer can be placed on top of a suitable washing machine with the same width and depth to save space. This connection set must always be used to secure the dryer to the washing machine. With pull-out worktop: WTZ 11300. Platform WMZ 20450 For better loading and unloading.

The basket contained in the drawer can be used to carry the laundry.

Installation underneath the worktop WTZ 10290 Risk of electric shock! @@Empty condensation container Page 4. Check water outlet (if featured). airing.

Ambient temperature higher than 35 °C Air inlet may be blocked keep unobstructed. Was an unsuitable programme selected? Page 7.

Has the dryer been installed with sufficient space on all sides? Ensure that air can circulate. Clean the Fine layer of scale on the moisture sensors page 6. moisture sensors Laundry damp. Use the next drying programme up or use the timer Page 7. programme as a supplement Warm laundry feels damper than it really is! @@has increased significantly.

Air inlet blocked? keep unobstructed. Ensure that the air cooler has been inserted. Mains failure. Remove laundry from the dryer immediately and spread out.

This allows the heat to dissipate. One or more indicator lights for Clean filter and air cooler Page 4/6. programme status are Check installation conditions

Page 8. flashing. Switch off, leave to cool down, switch on again, restart programme. The interior light is not working Pull out hing machine the higher the

spin speed the shorter the drying time will be (consumes less energy), also spin easy-care laundry.

@@– Make sure the room is well ventilated during drying. – Do not obstruct or seal up the air inlet. – Keep the air cooler clean page 6 "Care and cleaning".

Moisture sensors The dryer is fitted with stainless steel moisture sensors. The sensors measure the level of moisture in the laundry. After a long period of operation, a fine layer of limescale may form on the sensors. 1. Open the door and clean the moisture sensors with a damp sponge which has a rough surface.

Do not use steel wool or abrasive materials. 5 6 max.

1.5 kg For fabrics with membrane coating, water-repellent fabrics, functional clothing, fleece fabrics (dry jackets/trousers with removable internal lining separately). For laundry made of synthetic fibres, cotton or blended fabrics (for example) that needs to be dried quickly. The values may max. 2 kg differ from the those specified depending on the type of fabric, mixture of laundry to be dried, residual moisture in the fabric and loading capacity.

max. 3 kg For pre-dried, multi-layered, sensitive fabrics made of acrylic fibres, or separate small items of laundry. Also for subsequent drying. WTE84105GB

Installation – – – – – Delivery specification: dryer, instructions for installation and use. Check dryer for transport damage.

The dryer is very heavy. Do not attempt to lift it on your own. Be careful to avoid sharp edges. Do not lift the dryer by any of the protruding parts (e.g. the door) as they may break off. Do not set up in a room that is susceptible to frost. Freezing water may cause damage. – If in doubt, have the appliance

connected by an expert. Robert Bosch Hausgeräte GmbH Carl-Wery-Str.

34 81739 München/Germany max. 3.5 kg For non-iron laundry made of synthetic fibres and blended fabric, cotton. *516920* For whites and coloureds/cotton or linen. 1110 / 9000516920 also see Page 5 Programme overview After drying: laundry is to be ... ironed lightly ironed dry not ironed

passed through a mangle max. 7 kg Sportswear SuperQuick 40' Iron Dry Cupboard Dry Extra Dry Easy-Care Iron Dry Cupboard Dry Extra Dry Timed Programmes Cottons Warm 20 min. Tea towels/ towels Terry towels Table linen Bed linen Socks Underwear Towelling dressing gowns Anoraks Work

clothing Sportswear Skirts/dresses Trousers Shirts T-shirt 1.

Setting up the dryer – The appliance plug must always be accessible. – Ensure that the appliance is installed on a clean, level and solid surface. – Keep the cooling grille at the front of the dryer unobstructed. – Keep the area around the dryer clean. – Make the dryer level using the threaded feet and a spirit level.

@@@@@– Connect to an AC earthed socket. If in doubt have the socket checked by an expert. @@@. 2. 3. 4.

5. Empty the condensation container page 4. Select any programme using the programme selector. @@Wait 5 min., and then empty the condensation container again. @@@@ call set-up fee of up to 6 pence may apply.) – IE 01450 2655 When contacting the after-sales service, please quote the appliance's product number (E no.) and production number (FD) (see the inside of the door). Set the programme selector to Off and remove the appliance plug from the socket. The Start/Stop indicator Mains plug plugged in? lamp does not light up.

Programme selected? The Container and Start/ Empty the condensation container. Stop indicator lights are If featured, check hose for condensation outlet. flashing. @@indicator lights are flashing. Dryer does not start. Start/Stop button selected? Door closed? Programme set? Ambient temperature greater than

5 °C? Water is running out. Align dryer horizontally. Clean air cooler seal. The door opens by itself. Push the door closed until you hear it engage.

see appliance rating plate You can find the rating plate on the back of the dryer. These are guide values determined under standard Consumption rates conditions. Fluctuations up to 10% are possible. Spin speed in rpm Drying time Energy (residual moisture) in min. ** consumption in kWh** Cottons 7 kg 13

A 13 A Cupboard Dry* 1400 (approx.

50 %) 89 3.36 1000 (approx. 60 %) 104 3.92 800 (approx. 70 %) 120 4.

48 Iron Dry* 1400 (approx. 50 %) 69 2.42 1000 (approx. 60 %) 82 3.06 800 (approx. 70 %) 94 3.70 Easy-Care 3.5 kg Cupboard Dry* 800 (approx. 40 %) 42 1.35 600 (approx.

50 %) 51 1.65 *Test program according to DIN EN 61121. **The values may differ from the those specified depending on the type of fabric, mixture of laundry to be dried, residual moisture in the fabric and loading capacity.



[You're reading an excerpt. Click here to read official BOSCH](http://yourpdfguides.com/dref/4544754)

[WTE84105GB user guide](http://yourpdfguides.com/dref/4544754)

<http://yourpdfguides.com/dref/4544754>

Drum interior light (depending on model) (bulb E14, 25 W) The drum is illuminated after the door is opened or closed, and also after the programme is Page 10. started. It goes out automatically. Replacing the bulb Optional accessories (order from the after-sales service using the order number) WTZ 1110 Connection fittings for condensation outlet The condensation is conveyed directly via a hose. Washer-dryer stack connection set WTZ 11310 The dryer can be placed on top of a suitable washing machine with the same width and depth to save space. This connection set must always be used to secure the dryer to the washing machine. With pull-out worktop: WTZ 11300.

Platform WMZ 20450 For better loading and unloading. The basket contained in the drawer can be used to carry the laundry. Installation underneath the worktop WTZ 10290 Risk of electric shock! @@Empty condensation container Page 4. Check water outlet (if featured). airing.

Ambient temperature higher than 35 °C keep unobstructed. Air inlet may be blocked Was an unsuitable programme selected? Page 7. Has the dryer been installed with sufficient space on all sides? Ensure that air can circulate. @@Laundry damp. @@Warm laundry feels damper than it really is! @@has increased significantly.

Air inlet blocked? keep unobstructed. Ensure that the air cooler has been inserted. Mains failure. Remove laundry from the dryer immediately and spread out. This allows the heat to dissipate. One or more indicator lights for Clean filter and air cooler Page 4/6. programme status are Check installation conditions Page 8. flashing. Switch off, leave to cool down, switch on again, restart programme. The interior light is not working Pull out the appliance plug, remove the cover cap in the (depending on model).

interior above the door (use Torx 20 screw driver) and replace the bulb. Close the cover cap. Never operate the dryer without a cover cap. The required degree of dryness was not achieved or the drying time was too long. 9 10 Safety instructions Emergency ONLY use the dryer... The dryer must NEVER... @@In rooms inside the house. To dry fabrics. Be used for other purposes than those described above. Be modified in terms of its technology or attributes. @@Do not leave children unsupervised near the dryer.

Keep pets away from the dryer. Remove all objects from pockets. @@Do not lean or sit on the door risk of tipping. Secure loose cables tripping hazard. Do not operate the dryer if there is a risk of frost.

@@The cable cross-section must be sufficient. @@Do not use multiple plugs/couplings and/or extension cables. Do not hold the appliance plug with wet hands risk of electric shock. Never pull the appliance plug out of the socket by its cable. Do not damage the mains lead risk of electric shock. Only load the drum with laundry. Check the contents before you switch the dryer on. @@@@Dust (e.g. @@Do not put laundry containing foamed material/rubber in the dryer elastic material may be destroyed and the dryer may be damaged due to possible deformation of the foamed material.

Switch off the dryer once the programme has ended. Condensation is not drinking water and may be contaminated with fluff. Do not use the dryer if it is defective or if you suspect it is. Repairs must only be carried out by the after-sales service. Do not use the dryer if the mains cable is defective. To avoid danger, only have the defective mains cable replaced by the after-sales service. Always pull the mains plug out of the socket before changing the bulb for the risk of electric shock. interior light Only use genuine spare parts and accessories for safety reasons. Dryer: pull out the appliance plug, then cut off the mains cable from the appliance. Dispose of at municipal waste disposal facility.

Packaging: do not leave children alone with packing parts risk of suffocation. All materials are environmentally sound and can be reused. Dispose of in an environmentally-responsible manner. en Tumble dryer Installation Mains connection Operation Instructions for installation and use Defect Observe the safety instructions on page 11. Read these instructions before operating the dryer.

11 .



[You're reading an excerpt. Click here to read official BOSCH WTE84105GB user guide](http://yourpdfguides.com/dref/4544754)
<http://yourpdfguides.com/dref/4544754>