



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for BOSCH WVTI2840GB. You'll find the answers to all your questions on the BOSCH WVTI2840GB in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual BOSCH WVTI2840GB**  
**User guide BOSCH WVTI2840GB**  
**Operating instructions BOSCH WVTI2840GB**  
**Instructions for use BOSCH WVTI2840GB**  
**Instruction manual BOSCH WVTI2840GB**



Wash & Dry



en Instruction Manual and  
Installation Instructions



Household Appliances

**BOSCH**



[You're reading an excerpt. Click here to read official BOSCH WVTI2840GB user guide](http://yourpdfguides.com/dref/3549869)  
<http://yourpdfguides.com/dref/3549869>

**Manual abstract:**

..... Disposal of packaging . . . . .  
.....  
..... Disposing of your old appliance . . . . .

..... Protection of the environment / Hints and tips . . General safety instructions . .  
.....  
.....  
..... Before starting operation . . . . .

.....  
... Using your washer dryer correctly . . .  
.....  
... When washing and drying please note . . . . . Looking after your washer dryer .

.....  
Your New washer dryer . . . . .  
.....  
.....

. Control panel . . . . .  
.....  
.....

..... Description of the washer dryer . . .  
.....  
.. Operation and special features . . . . .  
.....

.... Preparing and sorting the laundry . . . . .

..... Preparing the washing . . . . .  
.....  
.....

..... Sorting the laundry for washing . . . . .

..... Sorting the laundry for drying . . . . .  
.....  
.....

.. Detergents and cleaning products . . . . .

.... Dosing detergent . . . . .  
.....  
.....

..... Filling detergent/ cleaning product . . . . .

..... First wash . . . . .  
.....  
.....

..... Programmes and functions . . . . .  
.....  
.....

..... Programme selector . . . . .

.....  
.....

.. Start M button . . . . .  
.....

.....  
.....

... Reduced Time I button . . . . .  
.....  
.....

*Delay Timer W button . . . . .*

*. . . . .*

*. . . . .*

*Drying Y button . . . . .*

*. . . . .*

*. . . . Delicate drying J button .*

*. . . . .*

*. . . . .*

*. Spin B button . . . . .*

*. . . . .*

*. . . . .*

*. . . . . Washing and drying . . .*

*. . . . .*

*. . . . .*

*. . . . .*

*Wash only . . . . .*

*. . . . .*

*. . . . .*

*. . . . Dry only .*

*. . . . .*

*. . . . .*

*. . . . .*

*. . . . .*

*Wash+dry . . . . .*

*. . . . .*

*. . . . .*

*. . . . @@.*

*. . . . .*

*. . . . .*

*.. Cleaning and servicing the washer dryer . . .*

*. . . . Housing and fascia .*

*. . . . .*

*. . . . .*

*. Drum . . . . .*

*. . . . .*

*. . . . .*

*. . . . .*

*. . . . Detergent drawer .*

*. . . . .*

*. . . . .*

*. . . . . Detergent pump . . .*

*. . . . .*

*. . . . .*

*. . . . .*

*. Filter in the water inlet hose . . . . .*

*. . . . .*

*. Descaling the washer dryer . . . . .*

*. . . . .*

*. What to do if . . . . .*

*. . . . .*

*. . . . .*

*. . . . .*

*.. Customer service . . . . .*

*. . . . .*

.....	Consumption data ..
.....	.....
.....	.....
.. @@.....	.....
.....	.....
.....	.....
.....	Safety information ..
.....	.....
.....	.....
.....	Standard accessories .....
.....	.....
.....	Dimensions .....
.....	.....
.....	.....
.....	Transport protection devices ..
.....	.....
.....	.....
..	Installation area .....
.....	.....
.....	.....
..	Levelling ...
.....	.....
.....	.....
...	Hose and cable lengths ..
.....	.....
.....	Water connection .....
.....	.....
.....	.....
.....	Transporting the washer dryer .
.....	.....
..	Electrical connection ...
.....	.....
.....	.....
..	Appendix Index .....
.....	.....
.....	.....
.....	.....

..... @@This new washer dryer is the outcome of years of research. The leading edge design and the quality of the production processes used to manufacture this product ensure it will give you many years of excellent service. Its concept satisfies all current and future washing and drying requirements. Its low water, power and detergent consumption help protect the environment and reduce running costs to a minimum. Water and power consumption has been reduced in all programmes. These results were achieved by means of a special washing system valid for all programmes and all fabrics. The drum is fitted with three external vanes that keep the water constantly circulating, thereby offering intensive and uniform washing whilst consuming less water. This ensures your laundry is washed and treated with utmost care.

The new washing system is so effective that normally dirty laundry can even be cleaned without a pre wash cycle. Pre washing is only recommended for very dirty laundry. Each washer dryer which leaves our factory is checked carefully to ensure that it functions properly and is in perfect condition. If you have any questions - especially with respect to installing and connecting your washer dryer - please do not hesitate to contact our customer service department.

Further information and a selection of our products can be found on our Internet page: <http://www.bosch-appliances.co.uk>

Please read these operating and installation instructions and all other information enclosed with the washer dryer and act accordingly. Retain all documentation for subsequent use or for the next owner of the appliance. Information concerning waste disposal Disposal of packaging Your new washer dryer was delivered to you in protective packaging. All utilised materials are ecologically harmless and recyclable. Please help by disposing of packaging in an environmentally friendly manner. Please ask your dealer or inquire at your local authority about current means of disposal.

*d Risk of choking! Do not let children play with packaging and associated parts. Risk of choking on plastic film and collapsible cardboard boxes.*

*Old appliances are not worthless rubbish! Valuable raw materials can be reclaimed by recycling old appliances. d Danger of death! Unplug mains plug on redundant appliances. Cut off mains cable and discard with mains plug. Destroy the lock on the door. This will prevent children from locking themselves in the appliance and suffocating. This appliance is labelled in accordance with European Directive 2002/96/EC concerning used electrical and electronic appliances (waste electrical and electronic equipment WEEE). Disposing of your old appliance WEEE ó The guideline determines the framework for the return and recycling of used appliances as applicable throughout the EU. 5 Protection of the environment / Hints and tips Your washer dryer uses water, energy and detergent efficiently, thereby protecting the environment and reducing your household costs. See page 47 for consumption values of your appliance. Using your washer dryer in an efficient and environmentally friendly manner: - Use the maximum recommended capacities.*

*Do not exceed the maximum load. - Do not use prewash for lightly to normally soiled washing. - Dose detergent, load amount of laundry and adjust water hardness according to the degree of soiling. Comply with dosing recommendation and manufacturer's instructions. - Choose the highest spin speed compatible with the type of laundry.*

*The higher the speed the lower the drying time and, consequently, the lower the power consumption. 6 General safety instructions This washer dryer meets the relevant safety requirements. - Install the washer dryer in accordance with the installation instructions, page 48. - Remove and keep the transport protection devices. - Do not connect the washer dryer if it has visible damage.*

*If in doubt consult customer service or dealer. - Read the enclosed documents carefully. They contain important information for installation, use, and safety of the appliance. This washer dryer is intended for: - use in the household only - washing machine washable textiles in water and drying this textiles - operation with commercially available detergents and cleaning products which are suitable for use in washing machines. Do not use the washer dryer if: - the laundry has been treated with a solvent or has been colour treated (e.g. stain remover, petroleum ether). - the laundry contains dust, e.g. coal dust or flour - the laundry contains foam/rubber - the laundry contains traces of hairspray, nail varnish remover or similar substances.*

*Before starting operation Using your washer dryer correctly 7 When washing and drying please note - Remove all objects from pockets, especially lighters.*



[You're reading an excerpt. Click here to read official BOSCH](http://yourpdfguides.com/dref/3549869)

[WVTI2840GB user guide](http://yourpdfguides.com/dref/3549869)

<http://yourpdfguides.com/dref/3549869>

- Do not leave children unsupervised with the appliance. - Keep pets away from the appliance. - Do not insert/pull out the mains plug with wet hands. - Do not pull out the mains plug by tugging the cable. - Caution when draining hot water. Looking after your washer dryer - Do not climb onto the washer dryer. - Do not lean on the open washer dryer door. - Do not install the washer dryer in a room where there is a risk of freezing. - Transit bolts must be in position for transport.

8 Your New washer dryer Filling laundry detergent and/or additive dispensers Dispenser 1: Detergent for prewash or pre soaking agent. Dispenser 2: Detergent for main wash Dispenser 2: Additives, e.g. fabric softener or starch. Service flap Open the door. .. and close it. 9 Control panel Display panel Indicates the settings which have been selected (e.g. spin speed, time delay) as well as programme progress and the programme state. Option lights Delay timer, Time to end, Spin speed determine the display's content. Normal drying selected Delicate drying selected Start M button For starting and pausing the cycles. Door button For opening the door. Buttons Reduced Time I (in addition to the programme if required): Shortened programme duration Delay Timer W (in addition to the programme if required): Selects the start time (delays the start of the programme). Drying Y: Selects the drying mode and the drying time Spin B: Selects the spin speed or rinse hold". Delicate drying J: Set low or normal heat. The indicator lights of the buttons come on, if the options are active. Programme selector For switching the washer dryer on and off and for selecting the programme. Can be rotated in either direction.

The programme selector does not rotate while the programme is running. The programme sequence is electronically controlled. 10 Description of the washer dryer Operation and special features Your washer dryer allows the following programmes to be set: - wash only - dry only - wash+dry The complete wash+dry programme shifts automatically from the wash cycle to the dry cycle without further intervention. Drying works on the principle of condensation. The condensation produced during the drying cycle runs via the drain hose to the catchment basin. The tap must be left open and the drain hose properly connected during drying cycles. The door The washer dryer is fitted with a safety device which prevents the door from being opened while the machine is in operation. Make sure that there is no water in the detergent container and that the drum is not moving. Opening the door at the end of a programme q Wait until End appears in the display. q Press the Door button on the front panel.

11 The signal The acoustic signal indicates: - pressing a button - the start of a programme - the end of a programme - operating errors and faults. q Press the Reduced Time I and Delay Timer W buttons simultaneously to activate or deactivate the signal. The display shows j or i. i The volume of the signal cannot be changed. Programme status Press the Spin B button to show the programme status in the display.

The programme status appears after the selected spin speed. If the washer dryer is in the washing cycle, the  $\hat{E}\hat{E}$  symbol appears in the Q (wash) display. If the washer dryer is in the drying cycle, the  $\hat{E}\hat{E}$  symbol appears in the Y (drying) display. q Press the Door h button on the front panel. 12 Preparing and sorting the laundry Preparing the washing Warning Loose debris (e.g. coins, paper clips, needles, nails) can damage items of clothing as well as parts of the washer dryer (e.g. drum). q Empty all pockets on items of clothing. q Brush sand out of pockets and cuffs/turn ups. q Close zips, fasten pillow cases/cushion covers. q Remove curtain runners or tie up in a net/bag. q Wash in a net/cushion cover: - delicates, e.g.

tights, curtains, - small laundry items, e.g. socks or handkerchiefs, - underwired bras (underwire may become detached during washing and cause damage). q Trousers, knitwear and knitted textiles, e.g. jere washer dryer may cause creasing. q It is not necessary to iron the laundry immediately after drying. We recommend that before ironing items are folded or rolled up so that residual moisture can spread evenly through the laundry. Practical tips 18 Detergents and cleaning products Dosing detergent d Risk of poisoning! Keep detergents and cleaning products out of the reach of children. Dose detergent according to q the water hardness.

You can find out the water hardness from your water utility company. q the specifications of the detergent manufacturer. q the amount of laundry. q the degree of soiling. i The correct dosage reduces the impact on the environment and produces a good washing result. i The detergent quantities indicated on the packets refer to full machine loads. With less laundry or if the laundry is only lightly soiled, reduce the quantity of detergent. i For the wool programme, only use ph neutral detergents for woollens. Water hardness Hardness level Soft Moderately hard Hard Very hard French degree fH Up to 15° 15° - 25° 25° - 40° Over 40° German degree dH Up to 8° 8° - 14° 14° - 22° Over 22° 19 Dosing powder detergent Normal dirty washing q Choose a programme without prewash. q Pour the total quantity of detergent indicated on the packs into dispenser 2 of the detergent drawer. Very dirty washing q Choose a programme with prewash. q Add ¼ of the recommended quantity of detergent into dispenser 1 of the detergent drawer and ¾ of the detergent into dispenser 2. Dosing liquid detergent i Use liquid detergents only for the main washing cycle, without prewash. q Pour the recommended dose into the batcher supplied with the liquid detergent and place it in side the drum or q Pour the liquid detergent into dispenser 2 of the detergent drawer after fitting the relative red insert A. i The scale on the red insert will help you to use the right quantity of liquid detergent. i When dispenser 2 is used for powder detergent, the red insert A must be removed. Liquid detergents and start time delay Start time delay, page 28. With time delay selection use a dosage container for liquid detergents, e.g. a ball, otherwise the liquid detergent will run slowly out of the soap dispenser and congeal.

Take dosage container out of the drum at the end of the programme. 20 Filling detergent/ cleaning product Dispenser 1 Detergent for prewash. Dispenser 2 Detergent for main wash. Machine accessories include a red insert A that can be placed inside dispenser 2 to allow liquid detergent to be used. Dispenser 2 (3) Pour liquid additives such as starch and fabric softener. The additives are automatically introduced into the tub during final rinsing. i The level of the liquids must not exceed the maximum limit, otherwise the trays will be emptied too soon. i Before pouring thick additives into the tray, dilute them with a little water to prevent them from obstructing the trap.

Take dosage container out of the drum at the end of the programme. 20 Filling detergent/ cleaning product Dispenser 1 Detergent for prewash. Dispenser 2 Detergent for main wash. Machine accessories include a red insert A that can be placed inside dispenser 2 to allow liquid detergent to be used. Dispenser 2 (3) Pour liquid additives such as starch and fabric softener. The additives are automatically introduced into the tub during final rinsing. i The level of the liquids must not exceed the maximum limit, otherwise the trays will be emptied too soon. i Before pouring thick additives into the tray, dilute them with a little water to prevent them from obstructing the trap.



[You're reading an excerpt. Click here to read official BOSCH](http://yourpdfguides.com/dref/3549869)

[WVTI2840GB user guide](http://yourpdfguides.com/dref/3549869)

<http://yourpdfguides.com/dref/3549869>

Dispenser 4 is used for bleach. *i* If there is a cover marked, this means that bleach cannot be used with this model of machine.

*q* Pull out the detergent drawer. *q* Pour in detergent and/or cleaning product. *q* Close the detergent drawer. Scale removers Scale removers can be introduced into dispenser 1 and 2 according to the manufacturer's indications. First, add the detergent and then the scale remover.

21 First wash The washer dryer was tested before leaving the factory. To remove any residual test water, wash the first time without any laundry. *q* Check that the transport protection devices have been removed from the back of the washer dryer, page 50. *q* Do not load any laundry. *q* Close the door. *q* Open the water tap. *q* Pull out the detergent drawer all the way. *q* Put half a measuring cup of normal detergent into dispenser 2. *i* Do not use any special detergents for woollens or delicates (foam formation). *q* Close the detergent drawer. *q* Set the programme selector to the required programme, e.g. *y* Cottons 60 °C. *q* Press the Start M button. *q* When the programme has ended, set the programme selector to the Off m position.

*q* Open the door. *i* Leave the door ajar in order to allow the inside of the washer dryer to dry. 22 Programmes and functions Programme selector Washing programmes The programmes are set using the programme selector which can be turned in both directions. The programme selector must not be set to intermediate positions between the indicated programmes. Cottons *y* 30, 40, 60, 90 °C Intensive washing programme for resistant cotton, coloured or hemp fabrics. Maximum load: 5.0 kg Cottons with prewash 60 °C For heavily soiled laundry with stains and for work wear/overalls. Put 1/4 cup of the detergent in chamber 1. Maximum load: 5.0 kg Mix/Quick 30 °C Time optimised programme for lightly soiled cotton textiles and easy care textiles. Different types of washing can be washed together. Even suitable for washing new textiles before they are worn for the first time. *i* Wash white and coloured items separately. Do not wash new coloured washing with other washing. Short washing time. Maximum load: 2.5 kg Reduced spin speed Easy Care A 30, 40, 60 °C for delicate artificial synthetic fibres, blends or linen fabrics. They prevent the formation of creases that are difficult to remove during ironing. Maximum load: 2.5 kg Reduced spin speed 23 Delicates 30 °C For delicate, washable textiles, e.g. silk, satin, synthetic materials or blended fabrics (e.g. curtains). Delicates cycle at 30 °C for hand and machine washable silk. *i* We do not recommend washing these textiles with other rougher textiles. Maximum load: 2.0 kg Reduced spin speed Woollens cold, 30 °C Delicates cycle only for garments marked "pure wool" washable, treated, shrink proof. We do not recommend washing these textiles with other rougher textiles. Other types of wool should be hand washed or dry cleaned.

Maximum load: 1.0 kg Reduced spin speed Drying programmes Normal drying for resistant fabrics white and coloured cottons and linens Load: 1.5 to 2.5 kg Delicate drying for delicate fabrics Easy care (drip dry) laundry, such as synthetics and fabric blends, as well as cotton with drip dry finish, e.g. viscose rayon, cuprammonium rayon, modacrylic fibre and polyester Load: 1.5 to 2.5 kg *i* To spin warm laundry is more effective than cold one. Therefore there is a special spin cycle integrated in the drying programme. The spin option is only possible for drying times ranging from 1 h 00 min to 2 h 00 min.

6 24 Special programmes Freshen up/Rinse+Spin For an additional rinse cycle turn the programme selector to Rinse+Spin K + V. Select the required spin speed. If the laundry is to be removed dripping wet, set the spin speed to 000 prior to starting this programme. For use fabric softener or starch fill the additives in dispenser 2 (3) before starting the programme. Softening *q* Fill the softener agent in dispenser 2 (3). *q* Set programme selector to Rinse+Spin K + V. *q* Press the Start M button. Starching For cotton and linen items. Do not use fabric conditioner before starching. *q* Dissolve starching agent in water.

Follow the manufacturer's instructions on the package. *q* Fill the starch in dispenser 2 (3). *q* Set programme selector to Rinse+Spin K + V. *q* Press the Start M button. If the laundry is to be dried in the washer dryer subsequent to the starching cycle, add approx. 30 to 50 % more starch, and select the Drain+Spin b + B programme with the maximum spin speed to attain the highest degree of water extraction. Fluff removal (after the drying programme) When drying particularly fluffy items such as new terry towels, the Freshen up/Rinse+Spin programme should be carried out to ensure that any deposits left by the fabric are removed and are not deposited on the clothes in the next wash. 25 Soaking Only put items of the same colour into the drum. Put detergent for soaking in chamber 1. Follow the manufacturer's instructions on the package.

*i* If the soaking suds are to be retained for the main wash programme, a detergent suitable for drum type washers must be used. (Risk of excessive foam formation!) Set programme selector to Easy Care A 30 or 40. Press the Start M button. After approx. 15 minutes, set the programme selector to Off m and allow laundry to soak in suds as long as desired. *i* After one minute the loading door is unlocked. Suds may exit when opening! To end the soaking programme: - Pump away softening agent. Select spin speed suitable for your fabric. To avoid heavy foaming choose a wash programme with prewash after the spin cycle but do not put any detergent into compartment 1. - If the laundry is to be washed in the soaking water: Set the programme selector to the desired programme and start it without adding further detergent.

26 Dyeing Your washer dryer offers only limited possibilities for dyeing. Please use only environmentally friendly dyeing agents. Follow the manufacturer's instructions on application and suitability for washing machines. Therefore, after each dyeing, run a 90 °C wash programme without laundry. Put 1 2 a measuring cup of normal detergent in chamber 2.

*d* Laundry which is washed in the washer dryer after a dyeing programme may discolour as dye deposits may be left in the machine. Bleaching Only use this washer dryer for bleaching, if there is no cover on dispenser 4 marked Pumping To pump out rinsing water after rinse hold" (spin speed set to 000), page 31. *q* Turn the programme selector to Drain+Spin b + B. *q* Press Start M button. or to pump out and spin with the setting spin speed.

*q* Turn the programme selector to Drain+Spin b + B. *q* Press the Spin B button to select the required spin speed, page 31. *q* Press Start M button. . 27 Start M button Pausing the programme Press this button to start the selected programme. The Start M LED is constantly on from the start of the programme until the end. Press the Start M button while the programme is running, and keep it pressed until STOP appears in the display (approx.



**[You're reading an excerpt. Click here to read official BOSCH WVTI2840GB user guide](http://yourpdfguides.com/dref/3549869)**  
<http://yourpdfguides.com/dref/3549869>



3 seconds). While the programme is paused the Start M LED flashes, with STOP and --- alternating in the display. To resume the programme, press the Start M button again.

**Stopping the programme** Press the Start M button while the programme is running, and keep it pressed (approx. 8 seconds) until 0000 appears in the display.

This button reduces the overall duration of the programme cycle (washing, rinsing, spinning). This function is suitable for washing smaller loads or lightly soiled items in a shorter time. Not suitable for programmes with pre wash. Not possible with wool and delicates washing programmes. Reduced Time I button

**Delay Timer W button** You can set a delay period, in hours, before the programme is to start. Press the Delay Timer W button repeatedly until the required number of hours is displayed. The default value is 0 hours, 0 minutes. Each time the button is pressed the delay is increased by 1 hour, up to 12 hours, and by 2 hours for the subsequent 12 hours, up to 24 hours.

**Reset Delay time** Press the Delay button for approx. 3 sec.. After setting the start time, press the Start M button. The delayed start time countdown begins. The Delay Timer W LED lights up while the start time is selected and remains on until the programme starts. The Delay Timer W LED monitor flashes. Once the set delay period has passed, the selected programme begins. 28 Changing the start time setting Cancelling the start time Press the Delay Timer W button repeatedly until the required time is displayed. Press the Delay Timer W button repeatedly until 0:00 appears in the display.

The Delay Timer W LED goes out. When the button is pressed again, the upward time count begins again from 0:00. Opening the door The door can be opened during the delayed start time countdown, e.g. to add additional items for washing. i Note the maximum load quantity. Do not overload the washer dryer. 29 Drying Y button Reset Drying time Press the button the required drying time, maximum 2:00 hours, is shown in the display. Press the button repeatedly to reduce the drying time. Press the Drying button for approx.

3 sec.. The Normal drying LED lights. Intensive drying programme, for cotton and coloured garments. The Delicate drying LED lights. Delicate drying programme, for synthetic and delicate garments. Guide values for drying times and temperatures Garments may shrink or crease if dried for too long. @@i

Warm items feel damper than cold ones. @@q Press the button repeatedly to select the required spin speed. @@@@To drain the water, page 27.

@@@The indicator LED lights up while the spin speed is being selected. @@@@Risk of explosion! @@@@q Place the laundry loosely and unfolded in the drum. Mix large and small items. @@@q Close the door by pressing it shut until it engages audibly. q Measure and fill detergent for wash only or wash+dry programmes.

@Cottons y 60 °C. This switches the washer dryer on. @q Select the required spin speed, page 31. q Select additional functions for individual programmes, e.g.

short wash or a delayed start time. q The drying time must be set to 0:00. q Press the Start M button. The LED monitor lights up. The remaining time appears in the display. @q Press the Start M button for approx. 3 seconds. The display alternates between STOP and ---. The Start M LED flashes. @@8 seconds).

q Turn the programme selector, but do not set to m Off. The display alternates between STOP and ---. Starting a new programme: Press the Start M button. i The display of the new remaining time may take a while to appear. @@i The maximum permitted load for drying is 2.5 kg. i For hand washed items select a separate spin cycle. Setting a drying programme The washer dryer is switched off. q Set the programme selector to Drying Y. This switches the washer dryer on.

q Press the Drying Y button repeatedly until the required drying time is set, page 30. q Press the Delicate drying J button to set low heat if desired, page 30. q Press the Start M button. The LED monitor lights up. The remaining time appears in the display.

**Pausing the drying programme** i The drying programme can be paused at any time during the cycle. q Press the Start M button for approx. 3 sec. The display alternates between STOP and ---. The Start M LED flashes.

**Continuing the programme:** Press the Start M button again. Opening the door d Risk of burning! Depending on the drying programme, the washing can be very hot. q Press the Door button on the front panel. i The door can be opened after approx. 3 minutes. Press the Start M button during the programme cycle and keep pressed until 0000 appears in the display (approx. 8 seconds). Stopping the drying programme 34 Changing the drying programme q Press the Start M button for approx. 3 seconds. The display alternates between STOP and ---.

**The Time to end LED flashes.** q Press the Drying Y button repeatedly until the required drying time is set. q Press the Delicate Drying J button to set low heat if desired, page 30. Starting a new programme: Press Start M button. Wash+dry Complete washing and drying programmes for intensive and delicates washing programmes, page 30. i Note the maximum permitted load for drying. Do not overload the washer dryer. Setting the complete washing+drying programme q Select the washing programme. q Press the Drying Y button repeatedly until the required time is set, page 30. q Press the Delicate Drying J button to set low heat if desired, page 30.

q Select the required spin speed, page 31. Drying Y LED monitor lights up. The display alternates between the remaining time and the selected spin speed. q Press the Start M button. One of the display LEDs (Normal drying or Delicate drying) lights up.

The remaining time is displayed during washing and drying. 35 Pausing the programme i The washing+drying can be paused at any time during the cycle. q Press the Start M button for approx. 3 sec. The display alternates between STOP and ---.

**The Start M LED flashes.** Continuing the programme: Press the Start M button again. Cancelling the programme Press the Start M button during the programme cycle and keep pressed until 0000 appears in the display (approx. 8 seconds). q Turn the programme selector Select the new programme, but do not set to Off m. The display alternates between STOP and ---. The Start M LED flashes. q Press the Drying Y button repeatedly until the required time is set, page 30. q Press the Delicate Drying J button if desired, page 30. Starting the new programme: Press the Start M button.

**Changing the washing programme** 36 End of programme The washing and drying programmes finish automatically. End appears in the display, and the Time to end LED lights up. q Turn the programme selector to Off m. q Remove the washing from the drum. q Leave the door open to allow the inside of the washer dryer to dry out. q Turn off the tap. Rinse hold At the start of the wash cycle, the spin speed was set to 000. The washing is held in the last rinse water. At the end of the washing programme the display alternates between STOP and 0000 (spin speed 0).



[You're reading an excerpt. Click here to read official BOSCH WVTI2840GB user guide](http://yourpdfguides.com/dref/3549869)  
<http://yourpdfguides.com/dref/3549869>



The B LED lights up.

q Set the programme selector to Drain+Spin b+B. q Press the Start M button. The water is drained away; The washer dryer does not spin. The programme has ended when End appears in the display. q Remove the dripping wet washing.

or q Set the programme selector to Drain+Spin b+B q Press the Spin B button repeatedly until the required spin speed is set, page 31. q Press the Start M button. The water is drained away. The washer dryer spins. The programme has ended when End appears in the display.

q Remove the laundry. q Leave the door open to allow the inside of the washer dryer to dry out. q Turn off the tap. 37 Cleaning and servicing the washer dryer d Risk of electric shock! First, always disconnect the appliance from the power supply. Never clean the washer dryer with a water jet. d Risk of explosion! Never clean the washer dryer with solvents. Warning Never use sharp objects they will damage the surface! Housing and fascia If required: q Use a mild, non abrasive detergent. q Wipe dry with a soft cloth. Remove residual foreign bodies from the drum and rubber seals. If metal items (e.

g. coins, paper clips, needles, nails) left in the drum have caused rust spots: q Use chlorine free cleaning agents; comply with the manufacturer's instructions. Never use steel wool. Drum Detergent drawer If there are detergent or cleaning product residues in the detergent drawer: q Pull out the detergent drawer to its stop (position). q Lift it slightly and q then pull fairly vigorously. q Clean the inside of the detergent drawer housing. q Remove the trap B. q Clean the detergent drawer and insert B under running water and dry. 38 q Put back the trap B. q Slide in the detergent drawer.

Detergent has not been completely pumped away. The pump may be blocked by foreign bodies or lint. d Risk of scalding! Allow hot detergent to cool. Keep children and pets away from the washer dryer. q Set the programme selector to Off m.

Opening the service flap Proceed as follows, depending on the model: Built in appliance: q Using a coin, turn the plastic covers in an anti clockwise direction. Stand alone appliance: q Insert a small screwdriver into the slots on the service flap and gently prise upwards to release the upper part of the service flap. q Gently pull the service flap forwards and then upwards to remove it completely. Detergent pump Draining the water q Remove the drain hose from its holder and pull out of the housing. q Pull out cover cap B and allow water to flow into a container positioned beneath it.

i Depending on the water quantity it may be necessary to empty the container several times. q When there is no more water flowing out, replace cover cap B and push the hose back into place. 39 q Unscrew pump cover D in an anti clockwise direction. More water will flow out. q Remove detergent residues, foreign bodies and lint from the inside, and clean the interior. The pump impeller must be able to turn freely. q Remove detergent residues, foreign bodies and lint from the pump cover thread and pump housing. q Replace the pump cover and screw firmly in place. Replace the service flap and close firmly Proceed as follows, depending on the model: Built in appliance: q First replace the lower part of the service flap. Using a coin, turn plastic cover a 1/4 turn anti clockwise.

i The slots in the covers must be horizontal. Stand alone appliance: q First replace the lower part of the service flap and then press it in place against the housing until it is heard to click into place. Filter in the water inlet hose If no water or insufficient water is running into the washer dryer: First, reduce the water pressure in the inlet hose: q Turn off the tap. q Switch off the washer dryer. q Remove the plug from the socket. q Remove the hose from the tap. q Clean the filter with a small brush or paint brush. q Connect the hose. q Open the water tap. q Check whether water is leaking out of the end of the hose connected to the tap.

If water is still discharged, check that the strainer is attached properly. 40 Descaling the washer dryer Caution Descaling agents contain acids which may corrode the components of the washer dryer and discolour the washing. Provided that you use the correct amount of detergent, it is not necessary to descale the washer dryer. If descaling is nevertheless required, please follow the instructions supplied by the manufacturer of the descaling agent. 41 What to do if. .. d Risk of electric shock! Repairs must only be carried out by customer services or authorised technicians. If repairs are needed, or if you cannot repair a fault yourself with the help of the following table: q Set the programme selector to Off m. q Disconnect the washer dryer from the power supply.

q Turn off the tap. q Call customer services, page 46. Error codes in the display Error code Possible cause Door not closed properly. You have added more washing. Safety device has not yet locked. Defective Aquasure hose. Viewing window red. No water for washing. Remedial action Close the door. Wait for the safety device to lock.

Unplug from the mains; turn off the tap; replace the hose. Check that: the plug is inserted correctly in the socket the door is closed properly the tap is open the water supply hose filter is not blocked. Cleaning the filter, page 40. Turn off the tap; wait for pumping to finish; unplug from the mains; call customer services Check that: the drain hose is not kinked or twisted the detergent pump is not blocked. Cleaning the pump, page 27. Water loss in the washer dryer. Detergent pump pumps constantly. Water does not drain away. Other error codes are only for use by our customer service staff. Note the error code and quote it to the customer service representative.

42 Fault Door cannot be opened. Possible cause Spin speed = 0 selected. Remedial action Select programme Drain+Spin b + B and start. Programme is running and/or door is Wait until End appears in the locked for safety reasons. display.

Programme does not start. The Start M button has not been pressed. Delayed start time selected Power failure selected delayed start time deleted Door not closed properly. Plug not inserted properly into socket. Spin speed cannot be selected.

Maximum spin speed cannot be set. Detergent residues in the detergent drawer. Detergent container does not fill with water. Washer dryer fills with water and continuously drains it away. Spin already in progress; spin speed cannot be set or changed during spinning. Easy care or wool programme has been selected. Damp or lumpy detergent. Press the Start M button. None. Washer dryer starts on completion of the delay period.

Reselect the delay period or start the programme immediately: Press the Start M button. Close the door. Insert plug correctly. Always select the spin speed before the spin cycle starts. Change programme as required. Clean and dry the detergent drawer, page 38. Use the measure for liquid detergent. Plug not inserted properly into socket. Drain hose fitted too low.



[You're reading an excerpt. Click here to read official BOSCH](http://yourpdfguides.com/dref/3549869)

[WVTI2840GB user guide](http://yourpdfguides.com/dref/3549869)

<http://yourpdfguides.com/dref/3549869>

Insert plug correctly.

Fit drain hose correctly, page 53. No water can be seen in Not a fault. the drum. During certain programmes the water level is below the visible range. Supply hose screw fitting is leaking.

Water leaks from the bottom of the appliance. Drain hose is leaking. Tighten screw fitting. Have the drain hose replaced by customer services. 43 Fault Water does not drain.

Possible cause Drain hose is twisted. Detergent pump is blocked. Remedial action Fit the drain hose correctly. Clean the detergent pump, page 27. Reduce amount of detergent. Only use detergent which is correct for the type of textile, and designated for use in automatic washing machines. Always wash large and small items together. Foam escapes from detergent drawer. Too much or incorrect detergent used. Several attempts to start Not a fault.

spinning. Imbalance monitoring system attempts to even out poor washing distribution by spinning the washing several times. Washing is not spun properly. Large items are not distributed evenly in the drum. Spin speed is automatically reduced for safety reasons. Soiling worse than expected. Insufficient detergent used. Always wash large and small items together. Washing results not satisfactory. Select appropriate programme, e.

g. programme with pre wash. Measure detergent quantity in accordance with manufacturer's specifications. Rinse washing again or change to liquid detergent. Brush washing after drying.

Detergent residues on the washing. Some phosphate free detergents contain water insoluble residues which appear on washing as light specks. Drying results not satisfactory. Not a fault. Dig up the ring by hand.

Laundry pressed against the sides of Start a drying programme, page 34 the drum, forming a ring. Water tap is closed. Maximum permitted load for drying is exceeded. The drying time is unsuitable. Open the tap. Reduce the laundry to the maximum permitted load of the selected programme. Select the drying time in accordance with the programme. Set a brief timed drying cycle. 44 Fault Grey residues on the washing. Programme terminated unexpectedly.

The display shows ÊÊ Nothing appears in the display. Possible cause Soiling caused by ointment, grease or oil. Start M button pressed accidentally. Not a fault. Programme status is displayed Power failure. Remedial action Use maximum permissible detergent amount and temperature for the next washing cycle; see the care label. Press the button again to restart programme. The washing or drying cycle is continued, page 12. Programme will continue when power supply is restored. If washing is removed during a power failure, first drain off the water, page 39.

Check whether: the plug is inserted properly into socket the fuse (protective device) has blown; call customer services 45 Customer service Before you call customer service, please check whether you can eliminate the fault yourself, from page 42 onwards. A technician who is called out to give advice will charge you, even if the appliance is still under guarantee. You can find your nearest customer service in the enclosed address list. Please provide customer service with the product number (E Nr.) and the production number (FD) of the appliance.

You can find these numbers in the box marked in bold outline on the identification plate on the door/frame. E Nr. FD Product number Production number Please write the numbers of your appliance here. To prevent unnecessary call outs, please assist customer service by quoting the product and production numbers. This will save you additional costs.

46 Consumption data Washing Programme Coloureds 60 °C Washing and drying Cotton 60 °C (coloureds) and cupboard dry 5.0 kg 2 x 2.5 kg (for drying) Electricity: 4.25 kWh Water: 95 l Weight of washing 5.0 kg Result Electricity: 1.1 kWh Water: 49 l Automatic washing/drying process Boil wash 90 °C + cotton cupboard dry Coloureds 60 °C + cotton cupboard dry Coloureds 40 °C + cotton cupboard dry Easy care 40 °C + easy care cupboard dry 1.5 kg 2.5 kg 2.5 kg Electricity: 3.

35 kWh Water: 81 l Electricity: 2.70 kWh Water: 72 l Electricity: 2.15 kWh Water: 72 l Electricity: 1.90 kWh Water: 91 l Drying Fabrics Weight of washing 1.5 kg Resistant drying 2.5 kg 1.5 kg 2.5 kg Drying time 40 minutes 80 minutes 80 minutes 100 minutes 80 minutes 100 minutes 120 minutes Drying result Damp for ironing Dry Damp for ironing Dry Damp for ironing Dry Damp for ironing Energy consumption [kWh] 0.7 1.2 0.

9 1.4 0.8 0.9 1.0 Delicate drying 47 Installing, connecting and transporting the washer dryer Please install and connect the washer dryer in accordance with the enclosed installation and assembly instructions.

Be sure to read the information contained in this chapter! Safety information d Risk of injury! The washer dryer is very heavy. Lift with caution. Frozen hoses may tear/burst. Do not install the machine in an area where there is a risk of frost or outdoors. The washer dryer may be damaged.

Do not turn the washer dryer upside down and do not place it on its side. Do not lift the washer dryer by its projecting parts (e.g. door). Check the washer dryer for damage caused during transportation. Do not connect the washer dryer if it has visible signs of damage. If in doubt, contact your local dealer.

Remove and keep transit bolts, page 50. In addition to the instructions listed here, particular regulations issued by the relevant water and power utility companies may apply. If in doubt, have the appliance connected by an electrician.

Standard accessories Stand alone appliance Bag inside the drum: - Covers for holes left by removing the transport bolts. - Separator for liquid detergent - Wrench - 1 24-40 mm Ø hose clip (specialist outlet) for connection to a siphon. 48 On the back of the washer dryer: - Water drain hose. - Water inlet hose - Mains cable with plug. Built in appliance i See the separate Installation and assembly instructions. Supplied in addition to the stand alone appliance inside the drum: - a door template, - utilities for the built in installation. Moisture in the drum is due to the final inspection which every washer dryer undergoes before it leaves the factory. Useful tools Spirit level for levelling the washer dryer. Dimensions Stand alone appliance a = 596 mm b = 552 mm c = 850 mm

Built in appliance The dimensions are different from those of a stand alone appliance. See separate installation and assembly instructions.

49 Transport protection devices d Risk of damage! Before using the washer dryer for the first time, completely remove the transport protection devices on the rear. Store the transport protection devices for later transport (moving house). q Loosen bolts with the 13 mm spanner until they are freely movable in the bushes. q Remove complete transport protection devices (bolt with sleeve). q Insert the covers to prevent splashes or water getting inside the washer dryer, or touching parts under voltage.



[You're reading an excerpt. Click here to read official BOSCH  
WVTI2840GB user guide  
http://yourpdfguides.com/dref/3549869](http://yourpdfguides.com/dref/3549869)

Appliance stability is essential to ensure that the washer dryer does not creep" during spin cycles. The installation area must be firm, clean and level. Soft floor coverings, such as carpets or foam backed floor coverings, and parquet flooring are unsuitable. When the washer dryer is being installed it is important to ensure that the floor is capable of taking the loading that the washer dryer will impose. In particular with Floating Floors, often installed in apartment buildings, this washer dryer needs to be sited where the floor has been sufficiently braced so that the loads and vibration do not damage both the washer dryer and the floor.

Installation area 50 q Fix the supplied slide elements to the floor using double sided adhesive tape. On porous surfaces (e.g. screed) use an appropriate adhesive. q Position the washer dryer on the slide elements. q Moisten the slide elements with a mixture of water and washing up liquid before pushing the washer dryer into position. Do not use grease and/or oils! The washer dryer can be adjusted to various working heights using the height adjustment frame\*. q

Fix the feet of the washer dryer in place using holding brackets\*\*. If the washer dryer is to be positioned on the floor above a wooden beam ceiling: q Position washer dryer in a corner wherever possible. @@q Fix the feet of the washer dryer in place using holding brackets\*\*.

@@@All four feet must stand firmly on the ground. The washer dryer must not wobble. q Release lock nut 1 using the wrench. q Adjust the height by turning foot 2. Maximum recommended height adjustment 10 mm. q Screw the lock nut 1 tightly against the housing. Hold the foot tight and do not adjust the height. Attention Loud noises, vibrations and creeping" are the consequences of incorrect alignment! For built in installation See the separate Installation and assembly instruction. 52 Hose and cable lengths Connection on left side approx. 110 cm approx.

130 cm max. 90 cm approx. 180 cm min. 50 cm Connection on right side approx. 100 cm approx.

100 cm approx. 130 cm min. 50 cm Aquasecure extension hose Available in kit form from specialist outlets: - Connecting kit plastic hose (approx. 2.50 m), order no.

WMZ 2380. There are different hose and cable lengths in built in appliances. See the separate Installation and assembly instruction. For built in installation max. 90 cm 53 Water connection To prevent leaks or water damage, it is essential to follow the instructions in this chapter! Caution Operate the washer dryer with cold drinking water only. Do not connect the appliance to the mixer tap of an unpressurized hot water boiler. If in any doubt, have the water connection carried out by an authorized technician. The water supply hose must not be: - Bent or squashed. - Modified or cut through (stability can no longer be guaranteed). Plastic threads must only be tightened by hand.

Do not remove the strainers from the water supply hose. Observe the water pressure in the supply network: - The water pressure should be between 0.5x10<sup>5</sup> ... 9x10<sup>5</sup> Pa (0.5 ... 9 bars) (when the tap is turned on, at least 8 litres of water is discharged per minute).

- A pressure reducing valve must be installed if the maximum water pressure is exceeded. Connect the water supply hose. q Connect the water supply hose to the tap. i In the case of a defective Aquasure hose (water supply hose), the check eye 1 is red, for fault report, page 42. After connecting the water inlet hose: q Turn on the tap fully.

q Check the connection points for leaks. min. 10 mm 54 Water drainage Caution Do not bend or pull the water drainage hose. Height difference between the placement area and drainage point: max. 90 cm, min.

50 cm. Drainage into a siphon: q Secure the connection point with a hose band clip of 24-40 mm diameter (from specialist stores). Drainage into a wash basin: Caution The plug must not block the drain of the wash basin. q Secure the water drainage hose so that it does not slide out. q When water is being drained, check that the water flow is fast enough. You can obtain appropriate parts from your specialist dealer. i The water inlet and drain hoses can be turned to the right or left depending on installation requirements. 55 Transporting the washer dryer Before you transport the washer dryer (e.g. when moving house) - Turn off the tap.

- Reduce the water pressure in the water inlet hose, page 40. - Drain off any residual water, page 39. - Disconnect the machine from the power supply. - Remove the hoses. - Remove the covers. - Installing transportation protection devices. Electrical connection Caution: The washer dryer must be connected correctly to an A.C. contactor socket. The mains voltage must comply with the voltage information given on the identification plate. The connected load and the necessary fusing are shown on the identification plate. Ensure that: - the plug and the socket are compatible. - the wire cross section is sufficient. - the earth system is installed in accordance with regulations. If the mains cable needs altering, this should only be done by the after sales service.

Do not use multiple plugs/connectors and/or extension cables. Only use current operated circuit breakers which are marked as follows: 7. Do not touch the plug with wet hands. Always pull the plug grip to remove the plug from the socket. 56 57 Index A Additional options Delay Timer, W 10 Reduced time, I 10 D Degrees of dirt, 14 Delay Start, 10, 11, 28 Delicate drying, 25 Detergent, 19 Detergent drawer, 21, 38 Dimensions, 49 Display panel, 10 Door, 11 Door button, 10 Door template, 49 Dosing detergent, 19 Drain the water, 39 Dry only programmes, 34 Drying button, 10, 30 Drying programmes, 24 Drying times, 30 Dyeing, 27 H Height adjustment frame, 51 Holding brackets, 51 Hose and cable lengths, 53 B Bleaching, 27 Built in appliance, 49 Built in installation, 52, 53 Button Delay Start W, 12, 28 Delicate drying J, 10 Door h, 10 Drying Y, 10, 30 Short Wash I, 10, 28 Spin B, 10, 31 Start/Stop M, 10, 28 Buttons, 10 I Identificationplate, 46 Installation area, 50 Intensive dry, 30 L Laundry preparing, 13 remove, 13 sorting, 14, 17 Liquid detergent, 20 LED Delicate drying, 30 Normal drying, 30 Low heat, 10 C Care labels, 16 Cleaning and care Descaling, 41 Detergent drawer, 38 Drum, 38 Filter in the water inlet hose, 40 Housing and fascia, 38 Pump, 39 Connecting kit, 53 Consumption data, 47 Control panel, 10 Cottons/coloureds, 23 Customer service, 46 E Easy care, 23 Electrical connection, 56 End, 10 End of programme, Rinse hold, 37 Error code, 42 M Maximum laundry loads, 16, 17 N Normal drying, 10 O Option lights, 10 Delay timer, 10 Delicate drying, 10, 30 Normal drying, 10, 30 Spin speed, 10 Time to end, 10 F Fault, 42 Filling detergent, 21 Filter in the water inlet hose, 40 First wash, 22 Fluff removal, 25 Freshen up, 25 Functions, 23 58 P Positioning and levelling, 52 Powder detergent, 20 Programme selector, 10, 23 Programme state, 12 Programmes, 23 Dry only, 34 Wash + Dry, 36 Wash only, 33 Pump, 39 Pumping, 27 S Scale removers, 21 Selecting Programmes, 23 Service flap, 39, 40 Short Wash, 10, 28 Signal, 11 Silk, 24 Soaking, 26 Special programmes, 25 Bleaching, 27 Dyeing, 27 Freshen up, 25 Pumping, 27 Soaking, 26 Softening, 25 Starching, 25 Spin Speed, 10, 12, 31 Stand alone appliance, 47 Standard accessories, 47 Starching, 25 Start, 10, 28 T Time to end, 10 Transport protection devices, 50 Transporting the washer dryer, 56 U Unbalanced load detection system, 31 Use, 32, 37 R Remedial action, 43 Removing stains, 15 Rinse hold, 37 W Wash + Dry programmes, 36 Wash only programmes, 33 Washer dryer, 11 Washing programmes, 23 Water connection, 54 Water drainage, 55 Water hardness, 19 Woollens, 23 59 WVTI2840 0107 EN 9000 242 898.



[You're reading an excerpt. Click here to read official BOSCH](http://yourpdfguides.com/dref/3549869)

[WVTI2840GB user guide](http://yourpdfguides.com/dref/3549869)

<http://yourpdfguides.com/dref/3549869>