



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for BRAUN 2776. You'll find the answers to all your questions on the BRAUN 2776 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual BRAUN 2776
User guide BRAUN 2776
Operating instructions BRAUN 2776
Instructions for use BRAUN 2776
Instruction manual BRAUN 2776



[You're reading an excerpt. Click here to read official BRAUN 2776 user guide](http://yourpdfguides.com/dref/3362622)
<http://yourpdfguides.com/dref/3362622>

Manual abstract:

Do not exchange or manipulate any part of it. Otherwise there is risk of electric shock. When charging for the first time, leave the shaver to charge continuously for 4 hours. The green charging light (5) shows that the shaver is being charged. When the battery is fully charged, the charging light intermittently blinks on and off. This indicates that the battery maintains its full capacity. a full charge provides 30 minutes of cordless shaving time depending on your beard growth. Once the shaver is completely charged, discharge the shaver through normal use. Maximum battery capacity will only be reached after several charging/discharging cycles. If the rechargeable batteries are discharged, you may also shave by connecting the shaver to an electrical outlet via the special cord set.

First, remove the trimming attachment: Using your thumbs, press against the side clips of the trimming attachment so that they swing off in the direction of the arrows (a). activate the on/off switch (6). The floating foil frame automatically adapts to your skin surface for a close, smooth shave. For pre-shaving after a few days of not having shaved, use the wide shaper (4a) to pre-cut long hairs. For a close, smooth shave, finish with the foil.

tips for the perfect shave · We recommend that you shave before washing, as the skin tends to be slightly swollen after washing. Stretch the skin and shave against the direction of beard growth. Press the blue rib to push out the styler (c). Frequent use of the styler (4) may reduce the battery capacity. After use, pull back the styler.

regular cleaning ensures better shaving performance. Rinse off all foam and let the shaver run for a few more seconds. Then leave the disassembled shaving parts to dry. (Shaver foil and cutter block: 2000 series) Preserving the batteries In order to maintain the optimum capacity of the rechargeable batteries, the shaver has to be fully discharged (by shaving) every 6 months approximately. then recharge the shaver to full capacity. Do not expose the shaver to temperatures higher than 50 °C for extended periods of time. In the interest of protecting the environment, please do not dispose of the product in the household waste at the end of its useful life. Disposal can take place at a Braun Service Centre or at appropriate collection points provided in your country. Subject to change without notice. Within the guarantee period we will eliminate, free of charge, any defects in the appliance resulting from faults in materials or workmanship, either by repairing or replacing the complete appliance as we may choose.

This guarantee extends to every country where this appliance is supplied by Braun or its appointed distributor. This guarantee does not cover: damage due to improper use, normal wear and tear (e. The guarantee becomes void if repairs are undertaken by unauthorised persons and if original Braun parts are not used. @ @ @ @ @.



[You're reading an excerpt. Click here to read official BRAUN 2776 user guide](http://yourpdfguides.com/dref/3362622)
<http://yourpdfguides.com/dref/3362622>