



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for BRAUN 4875. You'll find the answers to all your questions on the BRAUN 4875 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual BRAUN 4875
User guide BRAUN 4875
Operating instructions BRAUN 4875
Instructions for use BRAUN 4875
Instruction manual BRAUN 4875



www.braun.com/register



[You're reading an excerpt. Click here to read official BRAUN 4875 user guide](http://yourpdfguides.com/dref/3273213)
<http://yourpdfguides.com/dref/3273213>

Manual abstract:

Do not exchange or manipulate any part of it. Otherwise there is risk of electric shock. If the rechargeable batteries are discharged, you may also shave by connecting the shaver to an electrical outlet via the special cord set. We recommend that you shave before washing, as the skin tends to be slightly swollen after washing. Stretch the skin and shave against the direction of beard growth. To maintain 100% shaving performance, replace the shaver foil and cutter block at least every 18 months or when worn. 1 2 3 4 5 6 7 8 Shaver foil Cutter block Release button On/off switch (»start/stop«) Long hair trimmer Charging light (green) Low-charge light (red) Special cord set When charging for the first time, leave the shaver to charge continuously for 4 hours. The green charging light (6) shows that the shaver is being charged. When the batteries are fully charged, the charging light intermittently blinks on and off. This indicates that the battery maintains its full capacity.

Once the shaver is completely charged, discharge the shaver through normal use. regular cleaning ensures better shaving performance. Rinse off all foam and let the shaver run for a few more seconds. Next, switch off the shaver and press the release buttons. remove the shaver foil and the cutter block.

Then leave the disassembled shaving parts to dry. Subject to change without notice. then recharge the shaver to full capacity. Change both parts at the same time for a closer shave with less skin irritation. In the interest of protecting the environment, please do not dispose of the product in the household waste 5 Within the guarantee period we will eliminate, free of charge, any defects in the appliance resulting from faults in materials or workmanship, either by repairing or replacing the complete appliance as we may choose.

This guarantee extends to every country where this appliance is supplied by Braun or its appointed distributor. This guarantee does not cover: damage due to improper use, normal wear and tear (e. The guarantee becomes void if repairs are undertaken by unauthorised persons and if original Braun parts are not used. .



[You're reading an excerpt. Click here to read official BRAUN 4875 user guide](http://yourpdfguides.com/dref/3273213)

<http://yourpdfguides.com/dref/3273213>