



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for BRAUN 7570. You'll find the answers to all your questions on the BRAUN 7570 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual BRAUN 7570
User guide BRAUN 7570
Operating instructions BRAUN 7570
Instructions for use BRAUN 7570
Instruction manual BRAUN 7570

BRAUN

7570 
+



Syncro System

Type 5491



[You're reading an excerpt. Click here to read official BRAUN 7570 user guide](http://yourpdfguides.com/dref/3289398)

<http://yourpdfguides.com/dref/3289398>

Manual abstract:

We hope you enjoy your new Braun shaver. Your Braun Syncro is supplied with a Braun Clean&Charge (please see separate use instructions). Important Only use the power supply cord set provided. 1 2 3 4 5 Foil protection cap Shaver foil Cutter block Foil release button Long hair trimmer 6 7 8 9 10 Switch Display Info key Pilot light Shaver socket First charging: Using the power supply cord set, connect the shaver to the mains with the switch on position «0» and charge it for at least 4 hours (plug might get warm). @@@@The display shows the operation mode and charging conditions of the shaver: During charging the display shows the battery capacity symbol increasing by 20% segments and the remaining charging time (flashing): First charging (4 h): The display counts down in 20 min. Below 10 minutes remaining shaving time, the display shows the minutes left. The «moving» plug symbol indicates that you should charge your shaver. there is insufficient battery charge for a cordless shave. Either recharge the shaver or shave with the cord connected to the mains. display changes * The Clean&Charge.

To this format when the shaver is in the Your shaver features an automated battery conditioning facility which monitors the charging/discharging process. If necessary, it will automatically recondition the battery with a complete discharge/recharge cycle (about every 6 months). Press again: to display the key part number for shaver foil and cutter block hold for 3 secs: to run a display demo The shaver cannot be charged if the environmental temperature is too low (<0 °C) or too high (>55 °C). Allow the shaver to remain for some time at room temperature for optimal charging conditions. Switch positions 0 = Off (switch is locked) Press and push up the switch to operate the shaver 1 = Shaving with the pivoting head The pivoting cutting system automatically adjusts to every contour of your face 2 = Shaving with the pivoting head locked at an angle (to permit shaving in difficult areas, e.

g. Under the nose) 3 = The long hair trimmer is activated (for trimming sideburns, moustache and beard) Shaving with the cord If the rechargeable battery is discharged, you may also shave with the shaver connected to the mains via the power supply cord set. (If the shaver does not run immediately, charge it with the switch on position «0» for approx. @@Stretch your skin and shave against the direction of beard growth. @@@@ please refer to the separate use instructions.

@@@@@ switch on the shaver for approx. 5-10 seconds so that the shaved stubbles can fall out. @@@@@@», apply a drop of light machine oil onto the shaver foil. @@@@ * (Shaver foil and cutter block: part No. @@@@@@Subject to change without notice. This product conforms to the EMC-Requirements as laid down by the Council Directive 89/336/EEC and to the Low Voltage Regulation (73/23 EEC). Rakapparaten skall rengöras (referera till avsnittet «Manuell rengöring» eller till den separata «Clean&Charge» instruktionen), för att ställa tillbaka displayen , tryck på informationsknappen. Rakapparaten skall smörjas (referera till avsnittet «Manuell rengöring» eller till den separata «Clean&Charge» instruktionen). Denna produkt är anpassad till EMC-föreskrifterna 89/336/EEC och till lågspänningsdirektivet (73/23 EEC).

Please ensure you store your sales receipt in a safe place. Within the guarantee period we will repair, free of charge, any defects in the appliance resulting from faults in materials or workmanship, but may, at our discretion, choose to exchange specific parts or replace the complete appliance. This guarantee does not cover: damage arising from improper use (kinks in the shaver foil, breakage), normal wear and defects that have a negligible effect on the value or operation of the appliance. The guarantee becomes void if repairs are undertaken by unauthorised persons and if original Braun parts are not used. The guarantee is valid for 12 months from the original date of purchase as per your sales receipt. The guarantee on any repairs or exchanges made under guarantee expires at the end of this period. @@@@@@Konsumentköp EHL 91 Gäller vid försäljning till konsument av nya elektriska hushållsapparater och reglerar, i anslutning till Konsumentköplagen, köparens rättigheter om apparaten är felaktig. Köparen skall så snart som möjligt prova apparaten efter mottagandet och inom skälig tid, normalt 14 dagar, reklamera eventuella fel till säljaren eller till av säljaren eller leverantören anvisad verkstad. .



[You're reading an excerpt. Click here to read official BRAUN 7570 user guide](http://yourpdfguides.com/dref/3289398)
<http://yourpdfguides.com/dref/3289398>