



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for BRAUN 7680. You'll find the answers to all your questions on the BRAUN 7680 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual BRAUN 7680
User guide BRAUN 7680
Operating instructions BRAUN 7680
Instructions for use BRAUN 7680
Instruction manual BRAUN 7680



The advertisement features the BRAUN logo at the top left. Below it, the number '7680' is displayed next to a small icon of a shaver head, with a plus sign and a smaller icon of the shaver's body below. The main image is a full view of the BRAUN 7680 electric shaver, which is silver and black. The shaver has a blue circular button on the front and a digital display. The text 'BRAUN' is visible on the bottom left of the shaver, and '7680' is on the bottom right. The shaver is set against a blue background with a vertical gradient. To the right of the shaver, the text 'Syncro System Logic' is written vertically in white. At the bottom left of the advertisement, the text 'Type 5491' is displayed.



[You're reading an excerpt. Click here to read official BRAUN 7680 user guide](http://yourpdfguides.com/dref/3289567)
<http://yourpdfguides.com/dref/3289567>

Manual abstract:

We hope you enjoy your new Braun shaver. Your Braun Syncro is supplied with a Braun Clean&Charge (please see separate use instructions). SmartLogic Inside The «SmartLogic» electronics inside your shaver analyzes your personal shaving patterns and the type of beard you have, and then adapts the battery care and cleaning cycles to ensure optimal performance. Warning Your shaver is provided with a low voltage adaption system. Therefore you must not exchange or manipulate any part of it. Otherwise there is risk of electric shock. @@@@Do not expose the shaver to temperatures of more than 50 °C for longer periods of time. The display shows the operation mode and charging conditions of the shaver: During charging the display shows the battery capacity symbol increasing by 20% segments and the remaining charging time (flashing): First charging (4 h): The display counts down in 20 min. Ok» when it is still well charged. Below 10 minutes remaining shaving time, the display shows the minutes left.

The «moving» plug symbol indicates that you should charge your shaver. If there is insufficient battery charge for a cordless shave, either recharge the shaver or shave via the power supply cord connected to the mains. *The display changes to this format when the shaver is in The SmartLogic inside your shaver automatically monitors the condition of the batteries as well as the charging/discharging processes and adapts them to your personal shaving patterns. For instance, if it is your routine to never let the batteries run low, the SmartLogic will recognize this, look for a pause when you are likely to not use the shaver and completely discharge and then recharge your shaver to recondition the batteries (every six months at the most, and only when necessary). Press again: to display the key part number for shaver foil and cutter block hold for 3 secs: to run a display demo The SmartLogic inside your shaver will detect when the shaver needs to be cleaned (refer to paragraph «Manual cleaning» or to separate «Clean&Charge» use instructions).

to reset the display , push the info key. The SmartLogic inside will recognize when the shaver has to be lubricated (refer to paragraph «Manual cleaning» or to separate «Clean&Charge» use instructions). to reset the display , push the info key. @@@@ g. @@@@Stretch your skin and shave against the direction of beard growth.

@@@@ please refer to the separate use instructions. @@@@ switch on the shaver for approx. 5-10 seconds so that the shaved stubbles can fall out. @@@@», apply a drop of light machine oil onto the shaver foil. @@Replace your foil and cutter block every 18 months and get a 25% better shave.) (* Overall evaluation from Braun users comparing their shave with new parts and those used for 18 months. This appliance is provided with nickel-hydrate rechargeable batteries. To protect the environment, do not dispose of the appliance in the household waste at the end of its useful life. Open the housing as shown, remove and dispose of the batteries at your retail store or at appropriate collection sites according to national or local regulations. Subject to change without notice.

This product conforms to the EMC-Requirements as laid down by the Council Directive 89/336/EEC and to the Low Voltage Regulation (73/23 EEC). Within the guarantee period we will eliminate, free of charge, any defects in the appliance resulting from faults in materials or workmanship, either by repairing or replacing the complete appliance as we may choose. This guarantee extends to every country where this appliance is supplied by Braun or its appointed distributor. @@@@For UK only: This guarantee in no way affects your rights under statutory law. Denna produkt är anpassad till EMC-föreskrifterna 89/336/EEC och till lågspänningsdirektivet (73/23 EEC).



[You're reading an excerpt. Click here to read official BRAUN 7680 user guide](http://yourpdfguides.com/dref/3289567)
<http://yourpdfguides.com/dref/3289567>