



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for BRAUN 8585. You'll find the answers to all your questions on the BRAUN 8585 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual BRAUN 8585
User guide BRAUN 8585
Operating instructions BRAUN 8585
Instructions for use BRAUN 8585
Instruction manual BRAUN 8585

BRAUN

8590 
8585 

Activator™

www.braun.com

Type/Modèle/Modelo 5644
5-644-3181001-1-05/02
USA/CAN/MEX
Printed in Germany



[You're reading an excerpt. Click here to read official BRAUN 8585 user guide](http://yourpdfguides.com/dref/3274168)
<http://yourpdfguides.com/dref/3274168>

Manual abstract:

If you have any questions, please call: US residents 1-800-BRAUN-11 1-800-272-8611 Canadian residents 1-800-387-6657 Merci d'avoir fait l'achat d'un produit Braun. When using an electrical appliance, basic precautions should always be followed, including the following: Read all instructions before using this appliance. Do not reach for an appliance that has fallen into water. Do not use while bathing or in a shower when the appliance is connected to an electrical outlet. 3. Do not place, store or charge the appliance where it can fall or be pulled into a tub or sink. Do not place in or drop into water or other liquid. 4. When not using for a longer period of time, unplug this appliance from the electrical outlet. 5.

Unplug this appliance before cleaning. 6. This appliance is provided with a special cord set with integrated Safety Extra Low Voltage power supply. Therefore, you must not exchange or manipulate any part of it. Close supervision is necessary when this appliance is used by, on, or near children or invalids. 2. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer. 3. The appliance should never be exposed to temperatures of less than 32 °F / 0 °C and more than 105 °F / + 40 °C for longer than a few hours. Be sure to completely dry appliance after use. Keep cord and adapter dry at all times. do not store in a damp environment. To avoid damage do not wind the cord around the appliance. It is important to check the cord for damage periodically particularly at each end where the cord enters the plug. 4. Return the appliance to a service center for examination and repair. 5. Keep the cord away from heated surfaces. 6.

Never drop or insert any object into any opening. 7. 8. 9. Always attach plug to appliance first, then to outlet. Your Activator (shaver with Clean&Renew™ station) is a system equipped with highly advanced electronic processors. It ensures unsurpassed closeness and comfort for you and optimum care for your shaver: The system recognizes when cleaning of your shaver is required, and automatically recognizes which of the three cleaning programs is appropriate. While the shaver is connected to an electrical outlet, the system automatically takes care of charging and discharging in a way that is optimized for the shaver's battery capacity and life span. In order to avoid any leakage of the cleaning fluid, place the Clean&Renew™ station on a flat, stable surface. Do not tip, move suddenly or transport the station in any way if a cleaning cartridge is installed.

Do not place the station in a mirror cabinet, nor store it over radiators, nor place it on polished or laquered surfaces. Keep it away from sources of ignition. no smoking. Keep out of reach of children. Special cord set «start cleaning» button Station-to-shaver connecting contacts Station lift button for cartridge exchange Display for cleaning programs Display for cleaning fluid status Station socket Cleaning cartridge Shaver foil protection cap Shaver foil Cutter block Foil release buttons Long hair trimmer Shaver-to-station connecting contacts (shaver backside) Switch Shaver charging lights (green) Shaver low-charge light (red) Pilot light Shaver socket If you wish, you may start shaving right away (if the shaver is charged).

However, we recommend to follow the procedure described here: Using the special cord set (1), connect the socket of the Clean&Renew™ station (7) to an electrical outlet. Carefully remove the lid from the cartridge. Slowly close the housing by pushing it down until it locks. The display for cleaning fluid (6) will show how much cleaning fluid is in the cartridge: a) Cleaning solution sufficiently available b) Up to 7 cleanings left c) New cartridge required Make sure the foil protection cap (9) is removed from the shaver. Insert the shaver head down into the station (the contacts on the back of the shaver (14) will correspond to the contacts in the station (3)).

If necessary, the system will now charge the shaver. Also, the cleaning status will be automatically analyzed and one of the four diodes of the cleaning program display (5) will light up: a) The shaver is clean b) Eco(nomic), i. e. Short cleaning required c) Normal cleaning required d) Intensive cleaning required If the system has selected one of the three cleaning programs, it will not start until you push down the «start cleaning» button (2). This locks the shaver into the station and starts the cleaning process. we recommend cleaning after each shave. While the shaver is drying, the metal parts of the shaver may be hot. Your shaver is now clean and ready for use. Stretch your skin and shave against the direction of beard growth. All charging and cleaning needs are then taken care of.

switch on the shaver for approx. 5-10 seconds so that the shaved stubbles can fall out. Never use water to clean the shaver. remove the shaver foil and tap it out on a flat surface. Replacing the cartridge After having pressed the lift button (4) to open the housing, wait for a few seconds before removing the used cartridge. Before discarding the used cartridge, make sure to close the openings using the lid of the new cartridge, since the used cartridge will contain contaminated cleaning solution. Cleaning shaver and Clean&Renew™ housing Clean the housing of shaver and Clean&Renew™ station from time to time using a damp cloth, paying special attention to the opening of the station where the shaver rests. The red low-charge light (17) flashes when the battery capacity has dropped below 20%, provided the shaver is switched on. This will take place every six months at the most, and only if necessary. This appliance is provided with nickel-hydrate batteries.

They do not contain any harmful heavy metals. Nevertheless, in the interest of recycling raw materials, please do not dispose of this appliance in the household waste at the end of its useful life. disposal can take place at a Braun Service Center of appropriate collection sites. The cartridge can be disposed with regular garbage. Subject to change without notice.

Model 8585: The green single charging light (16) shows that the shaver is being charged. When the battery is fully charged, the charging light goes off and only lights up again when the battery maintains its full capacity. Model 8590: When the shaver is fully charged, all five green charging lights (16) will light up (20% per light), provided the shaver is connected to an electrical outlet or switched on. 2 year limited warranty (foil and cutter block excluded) Braun warrants this Braun shaver (except foil and cutter block) to be free of defects in material and workmanship for a period of two years from the date of original purchase. 2 year limited warranty (foil and cutter block excluded) In the event a Braun Shaver fails to function within 2 years from date of purchase, because of defects in material or workmanship, and the consumer returns the unit to an authorized service center, Braun Canada, will, at its option, either repair or replace the unit without additional charge to the consumer.



[You're reading an excerpt. Click here to read official BRAUN 8585 user guide](http://yourpdfguides.com/dref/3274168)
<http://yourpdfguides.com/dref/3274168>

This guarantee does not cover any product, which has been damaged by dropping, tampering, wrong current, servicing performed or attempted by unauthorized service agencies, misuse or abuse, kinks in the shaver foil as well as the normal wear of the shearing parts. exclusion of Warranties: The foregoing warranty is the sole warranty offered by Braun Canada. Braun Canada hereby disclaims any implied warranty or merchantability or fitness for any particular purpose. In no event will Braun Canada be responsible for consequential damages resulting from the use of this product. .



[You're reading an excerpt. Click here to read official BRAUN 8585 user guide](http://yourpdfguides.com/dref/3274168)

<http://yourpdfguides.com/dref/3274168>