



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for BRAUN CONTOUR 5895. You'll find the answers to all your questions on the BRAUN CONTOUR 5895 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual BRAUN CONTOUR 5895**  
**User guide BRAUN CONTOUR 5895**  
**Operating instructions BRAUN CONTOUR 5895**  
**Instructions for use BRAUN CONTOUR 5895**  
**Instruction manual BRAUN CONTOUR 5895**



[www.braun.com/register](http://www.braun.com/register)



[You're reading an excerpt. Click here to read official BRAUN CONTOUR 5895 user guide](http://yourpdfguides.com/dref/3275170)  
<http://yourpdfguides.com/dref/3275170>

**Manual abstract:**

We hope you enjoy your new Braun Shaver. Warning Your shaver is provided with a special cord set with an integrated Safety Extra Low Voltage power supply. Do not exchange or manipulate any part of it. Otherwise there is risk of electric shock. Re-charging time with the special cord set: 1 hour. If the rechargeable batteries are discharged, you may also shave by connecting the shaver to an electrical outlet via the special cord set. Stretch the skin and shave against the direction of beard growth. The green charging light blinks when the shaver is being charged. When the battery is fully charged, the charging light lights permanently. Once the shaver is completely charged, shave without the cord.

With normal use the shaver will be charged automatically after every cleaning in the Clean&Renew™ (see separate use instructions). Cleaning indicator Your shaver should be cleaned daily in the Clean&Renew™, and certainly when the yellow cleaning light (8) shines constantly after shaving. If this is not done, the yellow light will go out after some time. And a new calculation of the time when the next cleaning is required will be started. During the cleaning process in the Clean&Renew™ the yellow light will flash and will go off after approx.

Manual cleaning is recommended only when the Clean&Renew™ is not available, e. Warning: Detach the hand-held part from the power supply before cleaning it in water. regular cleaning ensures better shaving performance. Rinsing the shaving head after each shave under running water is an easy and fast way to keep it clean: Switch the shaver on (cordless) and rinse the shaving head under hot running water. A natural based soap may also be used provided it contains no particles or abrasive substances.

Rinse off all foam and let the shaver run for a few more seconds. Next, switch off the shaver, remove the shaver foil and the cutter block. Then leave the disassembled shaving parts to dry. Alternatively, you may clean the shaver using the brush provided: Using the brush, clean the cutter block and the inner area of the shaver head. then the shaver will automatically reset the display. The manual reset can be done at any time. then recharge the shaver to full capacity. Keep it away from sources of ignition. no smoking. Keep out of reach of children.

When cleaning the shaver, its protection cap should be removed. The used cartridge can be disposed in the household waste. The special socket at the back is adjustable to save space. the cleaning process will start. The yellow light on the shaver will flash during the complete process (approx. Do not interrupt the cleaning process, as it leaves the shaver wet and not fit for use. When cleaning is finished, the yellow light will go off and the shaver is ready for use. To release it, push the start/release button. A cleaning cartridge should be sufficient for about 30 cleaning cycles. When the level indicator (4) has reached the «min» mark, the remaining fluid in the cartridge is sufficient for about 5 more cleaning cycles.

Then the cartridge should be replaced, when used daily approx. The hygienic cleaning solution cartridge contains alcohol which, once opened, will naturally evaporate slowly into the surrounding air. Each cartridge, if not used daily should be replaced after approx. Clean the housing from time to time with a damp cloth, especially the opening where the shaver rests. Subject to change without notice.

Carefully remove the lid from the cartridge. slide the cartridge into the base as far as it will go. Slowly close the housing by pushing it down until it locks. Replacing the cartridge After having pressed the lift button to open the housing, wait for a few seconds before removing the used cartridge. Please do not dispose of the product in the household waste at the end of its useful life.

To obtain service within the guarantee period, hand in or send the complete appliance with your sales receipt to an authorised Braun Customer Service Centre. For UK only: This guarantee in no way affects your rights under statutory law. .



[You're reading an excerpt. Click here to read official BRAUN CONTOUR 5895 user guide](http://yourpdfguides.com/dref/3275170)  
<http://yourpdfguides.com/dref/3275170>