



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for BRAUN CRUZER 4 FACE. You'll find the answers to all your questions on the BRAUN CRUZER 4 FACE in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual BRAUN CRUZER 4 FACE
User guide BRAUN CRUZER 4 FACE
Operating instructions BRAUN CRUZER 4 FACE
Instructions for use BRAUN CRUZER 4 FACE
Instruction manual BRAUN CRUZER 4 FACE



[You're reading an excerpt. Click here to read official BRAUN CRUZER 4 FACE user guide](http://yourpdfguides.com/dref/3686709)
<http://yourpdfguides.com/dref/3686709>

Manual abstract:

We hope you entirely enjoy your new Braun shaver. Warning Your shaver is provided with a special cord set with an integrated Safety Extra Low Voltage power supply. Do not exchange or manipulate any part of it. Otherwise there is risk of electric shock. This appliance is not intended for use by children or persons with reduced physical, sensory or mental capabilities, unless they are given supervision by a person responsible for their safety. For hygienic reasons, do not share this appliance with other persons. Oil bottle Keep out of reach of children. Using the special cord set, connect the shaver to an electrical outlet with the motor switched off. When charging for the first time or when the shaver is not used for a few months, leave the shaver to charge continuously for 4 hours. The charging light (5) shows that the appliance is being charged.

When the battery is fully charged, the charging light turns off. Intermittent blinking after a while indicates that the battery maintains its full capacity. Also happen short term when charging after the battery was completely discharged. a full charge provides 30 minutes of cordless shaving time depending on your beard growth. Once the shaver is completely charged, discharge the shaver through normal use.

Maximum battery capacity will only be reached after several charging/ discharging cycles. The floating foil frame automatically adapts to your skin surface for a close, smooth shave. for best results: Always shave before washing your face. At all times, hold the shaver at right angles (90°) to the skin (b). Stretch the skin and shave against the direction of beard growth.

For pre-shaving after a few days of not having shaved, use the wide trimmer (4a) to pre-cut long hairs. For a close, smooth shave, finish with the foil. Press the blue stripes to push up the twistable trimmer (4). The shaver head is suitable for cleaning under running tap water.

You may use liquid soap without abrasive substances. Rinse off all foam and let the shaver run for a few more seconds. Then leave the disassembled shaving parts to dry. Subject to change without notice. This guarantee does not cover: damage due to improper use, normal wear or use as well as defects that have a negligible effect on the value or operation of the appliance. The guarantee becomes void if repairs are undertaken by unauthorised persons and if original Braun parts are not used.

To obtain service within the guarantee period, hand in or send the complete appliance with your sales receipt to an authorised Braun Customer Service Centre (address information available online at www. This guarantee in no way affects your rights under statutory law. This warranty applies in all States and Territories of Australia and in New Zealand and is in addition to any mandatory statutory obligations imposed on Procter & Gamble Australia Pty. Ltd., its distributors and its manufacturer. This express warranty does not purport to exclude, restrict or modify any such mandatory statutory obligations. This warranty only covers defects in the appliance resulting from faults in workmanship or materials. Therefore, if your appliance becomes faulty as a result of faults in workmanship or materials, it will be exchanged by your retailer, on presentation of proof of purchase. This warranty only applies to domestic or household use of this appliance and the warranty will only apply if the correct operating instructions included with this product have been followed. The warranty on any appliance replaced under this warranty ends on the expiry of the warranty period that applied to the original appliance.

This warranty does not cover: A. Damage arising from improper use or operation on incorrect voltages. Normal wear due to moving parts. Appliances that are outside the warranty period or are not faulty. This appliance is not intended for use by young children or infirm persons without supervision.

Young children should be supervised to ensure that they do not play with the appliance. If the appliance is powered by a cord extension set or electrical portable outlet device these should be positioned so they are not subject to splashing or ingress of moisture. Ltd. Please retain proof of purchase of this appliance. for service or replacement parts refer to the authorised Service Agents listed overleaf.

Local Service Agents may change from time to time in that event please contact the Consumer Service free call number below for updated local service agent details. .



[You're reading an excerpt. Click here to read official BRAUN CRUZER 4 FACE user guide](http://yourpdfguides.com/dref/3686709)
<http://yourpdfguides.com/dref/3686709>