



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for BRAUN CRUZER 5 FACE. You'll find the answers to all your questions on the BRAUN CRUZER 5 FACE in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual BRAUN CRUZER 5 FACE
User guide BRAUN CRUZER 5 FACE
Operating instructions BRAUN CRUZER 5 FACE
Instructions for use BRAUN CRUZER 5 FACE
Instruction manual BRAUN CRUZER 5 FACE



[You're reading an excerpt. Click here to read official BRAUN CRUZER 5 FACE user guide](http://yourpdfguides.com/dref/3686721)
<http://yourpdfguides.com/dref/3686721>

Manual abstract:

We hope you entirely enjoy your new Braun shaver. Warning Your shaver is provided with a special cord set with an integrated Safety Extra Low Voltage power supply. Do not exchange or manipulate any part of it. Otherwise there is risk of electric shock. This appliance is not intended for use by children or persons with reduced physical, sensory or mental capabilities, unless they are given supervision by a person responsible for their safety. @@@@For hygienic reasons, do not share this appliance with other persons. Oil bottle Keep out of reach of children. 1 2 3 4 4a 4b 5 6 7 8 9 3-day beard comb & protective cap Shaver foil Cutter block Twistable trimmer Wide trimmer (28 mm) Narrow trimmer (14 mm) Charging light On/off switch Adjustable comb Beard length selector Special cord set Do not expose the shaver to temperatures higher than 50 °C for extended periods of time. â Using the special cord set, connect the shaver to an electrical outlet with the motor switched off. When charging for the first time or when the shaver is not used for a few months, leave the shaver to charge continuously for 4 hours.

â The charging light (5) shows that the appliance is being charged. When the battery is fully charged, the charging light turns off. Intermittent blinking after a while indicates that the battery maintains its full capacity. This can also happen short term when charging after the battery was completely discharged. Once the shaver is completely charged, discharge the shaver through normal use.

Maximum battery capacity will only be reached after several charging/ discharging cycles. First, remove the adjustable comb (7): Using your thumbs, press against the side clips of the adjustable comb so that they swing off in the direction of the arrows (a). activate the on/off switch (6). The floating foil frame automatically adapts to your skin surface for a close, smooth shave. for best results: Â Always shave before washing your face.

@@@@@For a close, smooth shave, finish with the foil. @@@@@@Press the blue stripes to push up the twistable trimmer (4).

@@@@@@@@@@@@@@@@@The shaver head is suitable for cleaning under running tap water. @@ regular cleaning ensures better shaving performance. @@You may use liquid soap without abrasive substances. Rinse off all foam and let the shaver run for a few more seconds. @@Then leave the disassembled shaving parts to dry. â If you regularly clean the shaver under water, then once a week apply a drop of light machine oil onto the trimmers (4a, 4b) and shaver foil (h). Alternatively, you may clean the shaver using the brush provided (i): Â Using the brush, clean the cutter block and the inner area of the shaver head. However, do not clean the shaver foil with the brush as this may damage the foil.

Replacing the shaving parts To maintain 100% shaving performance, replace your foil and cutter block at least every 18 months or when worn. Change both parts at the same time for a closer shave with less skin irritation. (Shaver foil and cutter block: 10B) Preserving the batteries In order to maintain the optimum capacity of the rechargeable batteries, the shaver has to be fully discharged (by shaving) every 6 months approximately. In the interest of protecting the environment, please do not dispose of the product in the household waste at the end of its useful life. Disposal can take place at a Braun Service Centre or at appropriate collection points provided in your country. Subject to change without notice. Within the guarantee period we will eliminate any defects in the appliance resulting from faults in materials or workmanship, free of charge either by repairing or replacing the complete appliance at our discretion. @@@@@@To obtain service within the guarantee period, hand in or send the complete appliance with your sales receipt to an authorised Braun Customer Service Centre (address information available online at www. For UK only: This guarantee in no way affects your rights under statutory law. .



[You're reading an excerpt. Click here to read official BRAUN CRUZER 5 FACE user guide](http://yourpdfguides.com/dref/3686721)
<http://yourpdfguides.com/dref/3686721>