



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for BRAUN HT 500-550. You'll find the answers to all your questions on the BRAUN HT 500-550 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual BRAUN HT 500-550
User guide BRAUN HT 500-550
Operating instructions BRAUN HT 500-550
Instructions for use BRAUN HT 500-550
Instruction manual BRAUN HT 500-550

BRAUN

Multiquick 5
Multiquick 3



多士炉

型号 4119
型号 4120
www.braun.com

HT 500/550
HT 400/450



[You're reading an excerpt. Click here to read official BRAUN HT 500-550 user guide](http://yourpdfguides.com/dref/3586286)
<http://yourpdfguides.com/dref/3586286>

Manual abstract:

@@This appliance is not intended for use by children or persons with reduced physical, sensory or mental capabilities, unless they are given supervision by a person responsible for their safety. In general, we recommend that you keep the appliance out of reach of children. Children should be supervised to ensure that they do not play with the appliance. do not use unattended. Before plugging into a socket, check that your voltage corresponds with the voltage printed on the bottom of the appliance. avoid touching hot insides. Never let the cord come in contact with the inside. Do not put metal objects into the toaster. This appliance is not suitable for toasting crisp bread, rusk, or similar food. Never cover the toaster slot, nor insert food covered with foil.

Never use without the crumb tray in place. Therefore do not use near or below curtains or other flammable materials. The appliance will get hot, especially the metal parts. let it cool down before storing. Braun electric appliances meet applicable safety standards.

@@@You can toast all sizes of bread which fit the toaster slot. Insert the bread, then push down the lift (D). @@@@For your convenience, the bread lift remains in the upper position. @@The bread will be lifted and the toaster will be turned off. @@@@Do not attempt to use with cakes, pizza, baking tins or whole loaves.

This will cause heat accumulation within the toaster. rolls etc. Must not be wrapped in any kind of foil. @@Always unplug the appliance and allow to cool down before cleaning. @@Clean the exterior surfaces with a damp cloth only. do not use steel wool or abrasive cleaners. Small amounts of dishwashing liquids may be used. Never use any solvents such as alcohol, gasoline or benzene. Occasionally pull out and empty the crumb tray (H). Subject to change without notice Please do not dispose of the product in the household waste at the end of its useful life.

Disposal can take place at Braun Service Centre or at appropriate collection points provided in your country. Within the guarantee period we will eliminate any defects in the appliance resulting from faults in materials or workmanship, free of charge either by repairing or replacing the complete appliance at our discretion. This guarantee extends to every country where this appliance is supplied by Braun or its appointed distributor. This guarantee does not cover: damage due to improper use, normal wear or use as well as defects that have a negligible effect on the value or operation of the appliance. @@@.



[You're reading an excerpt. Click here to read official BRAUN HT 500-550 user guide](http://yourpdfguides.com/dref/3586286)

<http://yourpdfguides.com/dref/3586286>