



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for BRAUN KM 32 B. You'll find the answers to all your questions on the BRAUN KM 32 B in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual BRAUN KM 32 B
User guide BRAUN KM 32 B
Operating instructions BRAUN KM 32 B
Instructions for use BRAUN KM 32 B
Instruction manual BRAUN KM 32 B

BRAUN




Service Documentation

Market Release 7/84

Braun Kitchen machine
with lamp

KM 32 B

4209

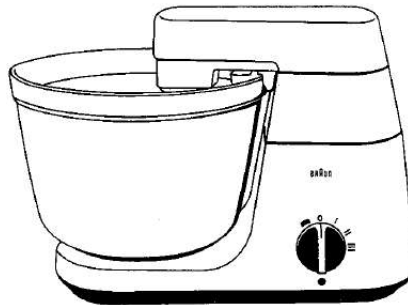

4209



[You're reading an excerpt. Click here to read official BRAUN KM 32 B user guide](http://yourpdfguides.com/dref/1322741)

<http://yourpdfguides.com/dref/1322741>

Manual abstract:

12 Screw Switch knob Terminal block Screw Resistor Capacitor Glow lamp Glow lamp holder Switch Bottom plate cpl. Foot Screw Fan wheel Suspension of the motor Rubber buffer Washer Screw Screw Washer Motor Screw Upper end shield Rotor Washer Washer Stator Air baffle Thermo-switch Tension spring for pos. 39 Pos. @@@@125 W + 10 % appr. 130 W + 10 % appr. 205 W + 10 % appr. 10700 min -1 appr. 12500 min -1 appr. 16000 min -1 Thermo-switch/Fuse appr. @@Removal of motor (31) Disconnect appliance mains plug from the socket.

Loosen the holding screws from the bottom cover plate (22) and remove plate. Then withdraw the male-drive coupling (1) with the aid of an angle-shaped screw-driver. Draw off switch knob (14) and unscrew switch securing screws (8, 9). Proceed by disconnecting the motor wiring on the terminal block (15). Subsequently loosen the 4 screws (28) with a long screw-driver and take the motor together out of the housing.

2. Reassembly The reassembly is carried out in the reverse order, however attention should be paid to the rubber buffer (27). The motor shaft must be supported at the bottom end, when the new male drive coupling (1) is mounted onto the shaft. Pay attention to the wiring diagram. 3.

Replacement of the thermo-switch (39) Remove motor (31) as described in paragraph 1. Withdraw the air baffle (38) and loosen spring (40). Continue by disconnecting the plug connection on switch (21) and also connection on the terminal block (15) and install new thermo-switch. 4. Dismantling of motor (31)

With the aid of a screwdriver, push off the fan wheel (25). @@Use a 8 mm box spanner for removing screws (32). @@@@5. @@@@If necessary this has to be newly adjusted. 2. All screws of the motor-suspension (Pos.

26 respectively 37) must be tightly fastened. If necessary, this has to be corrected. 3. The motor suspension (Pos. @@4. Remove the lower centering rubber parts of the motor (Pos. 44 resp. @@@@27 resp. @@The motor suspension will be changed accordingly.

@@@@44 resp. 58) will be eliminated without a replacement. Also in this case, the base plate has been changed accordingly. @@@@It is not possible, to attach the new base plate, if the motor still has any centering rubber parts. The new base plate can be used without problem for previously produced products, it the centering rubber parts have been removed.

Only when these points have been considered, the machine will correspond with the noise allowed by the factory. 4209 - 11 BINC Rev: 7/96 BAG Rev: 7/84 Service Documentation Exploded Drawing 4209 Mixing arm for Kitchen Machine 4209 - 12 BINC Rev: 7/96 BAG Rev: 2/94 Service Documentation Spare Parts List 4209 Part Description Mixing arm cover Screw Gear cover Rubber seal Screw Bearing bracket Flanged bearing Flanged bearing Circlip Main worm shaft Fiber washer Worm gear Spring pin Fiber washer Washer Grooved pin Gear wheel-set Shaft Pinion Fiber washer Worm gear Pin Screw Screw, self tapping * Washer Fiber washer Driving worm Washer Flanged bearing Flanged bearing Retaining rod Mixing arm housing Coupling pin (Metal) Coupling pin (Plastic) * Locking lever (Metal) Locking lever (Plastic)* Circlip Radial oil seal ring Radial oil seal ring Bowl drive with shaft Ball Pos. No. 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17/18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 33 34 34 35 36 37 38 39 Part Number 4207033 0030008 4207020 4207044 0030008 4207822 4207107 4207005 0109301 4207394 4207019 4207478 0127201 4207015 4207014 0125102 4207623 4207821 4207820 4207007 4207010 4207384 0003135 0038022 0103001 4207008 4207006 4207034 4207004 4207002 4207112 4207819 4207030 4207533 4207028 4207528 0112001 4207351 0104003 4207035 0162002 4209 - 13 BINC Rev: 7/96 BAG Rev: 2/94 Service Documentation Spare Parts List 4209 Part Description Leaf spring * Spring Locking ring (metal) Locking ring (plastic) * Grub screw Guide bracket Distance washer Coupling Screw Screw Pos. No.

39 40 41 41 42 44 45 46 47 48 Part Number 4207529 4207180 4207027 4207527 0015101 4207032 4213042 4203055 0031077 0003126 No. 17 and 18 are replaced together. * Parts that are to be replaced together. When rebuild from metal to plastic version all parts with * should be used together. 4209 - 14 BINC Rev: 7/96 BAG Rev: 11/85 Service Documentation Reference Drawing 4209 4209 - 15 BINC Rev: 7/96 BAG Rev: 8/85 Service Documentation Service Information 4209 Shredder Meat Mincer Citrus Juicer Shredder Liquidizer Coffee Grinder KS 33 KGZ 2 KMZ 3 KS 32 KX 32 MXK 4247 4610 4612 4613 4614 4615 4209 - 16 BINC Rev: 7/96 BAG Rev: 8/85 Service Documentation Exploded Drawing 4247 4209 - 17 BINC Rev: 7/96 BAG Rev: 6/91 Service Documentation Spare Parts List 4247 Part Description Pusher Lid with no. 3 Cap Guide block Upper housing cpl. Flat spring Felt washer Driving shaft coupling Spring Washer Thrust bearing Gear wheel Washer Swivel bearing Intermediate gear wheel Pinion Fibre washer Lower housing Screw Fibre washer Bronze washer Spring Washer Coupling Working disc I Working disc II Grater disc for potatoes Carrier disc Adapter for KMZ 3 Pos. No. 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 - Part Number 4207492 4247851 4247022 4247035 4247852 4247028 4242126 4247853 4247007 4247026 4247037 4247015 4247025 4247024 4247014 4247016 4247017 4247625 0031052 4250082 4213041 4203135 4213042 4203055 4247047 4247048 4247039 4247858 4247038 4209 - 18 BINC Rev: 7/96 BAG Rev: 1/82 Service Documentation Exploded Drawing 4610 4209 - 19 BINC Rev: 7/96 BAG Rev: 12/83 Service Documentation Spare Parts List 4610 Part Description Part Number Pos. @@@@Perforated disc, 3.

0 dia. Perforated disc, 8.0 dia. @@@@No. 1 2 3 - Part Number 4207391 4253285 4253284 4247038 4209 - 23 BINC Rev: 7/96 BAG Rev: 1/82 Service Documentation Exploded Drawing 4613 4209 - 24 BINC Rev: 7/96 BAG Rev: 11/93 Service Documentation Spare Parts List 4613 Part Description Tamper (old with lid) Tamper (new without lid) Upper housing Retaining clamp Oil sealing ring Lower housing Plain seal Screw Bearing bracket Output gear Ball Ball thrust plate Washer Intermediate gear Drive shaft Bronze washer Fiber washer Bearing Metal housing Set screw Nut Washer Coupling Screw Shredding insert, coarse Shredding insert, fine Slicing insert, coarse Slicing insert, fine Grating insert Insert stand Carrier disc Pos. No. 1 1 2 3 4 5 6 7 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 Part Number 4207809 4207492 NLA 4203270 4207093 NLA 4203266 0003101 4203883 4203884 0162003 4203264 4203257 4203882 4203254 4213041 4213040 4206047 4203881 0016102 0061108 4213042 4203055 0003170 4207068 NLA 4207070 4207071 4207072 4207094 4207807 4209 - 25 BINC Rev: 7/96 BAG Rev: 5/84 Service Documentation Exploded Drawing 4614 4209 - 26 BINC Rev: 7/96 BAG Rev: 12/85 Service Documentation Spare Parts List 4614 Part Description Funnel plug Lid Glass goblet Rubber gasket Complete knife (6 - 20) Cap nut Washer (Steel) Upper knife Lower knife Cover Washer (Steel) Washer (Fibre) Cutter base plate (Metal) Washer (Fibre) Washer (Bronze) Socket Spring Shaft Washer (Steel) Coupling Knife retainer housing Pos.



[You're reading an excerpt. Click here to read official BRAUN KM 32](#)

[B user guide](#)

<http://yourpdfguides.com/dref/1322741>