



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for BRAUN STEAM AND STYLE PRO. You'll find the answers to all your questions on the BRAUN STEAM AND STYLE PRO in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual BRAUN STEAM AND STYLE PRO
User guide BRAUN STEAM AND STYLE PRO
Operating instructions BRAUN STEAM AND STYLE PRO
Instructions for use BRAUN STEAM AND STYLE PRO
Instruction manual BRAUN STEAM AND STYLE PRO



[You're reading an excerpt. Click here to read official BRAUN STEAM AND STYLE PRO user guide](http://yourpdfguides.com/dref/3290787)
<http://yourpdfguides.com/dref/3290787>

Manual abstract:

Carefully read the use instructions before use. **Important** Plug your appliance into an alternating current outlet only and make sure that your household voltage corresponds to the voltage marked on your appliance. This appliance must never be used near water (e. Do not allow the appliance to become wet. For additional protection, it is advisable to install a residual current device (RCD) with a rated residual operating current not exceeding 30mA in the electrical circuit of your bathroom. This appliance is not intended for use by children or persons with reduced physical or mental capabilities, unless they are given supervision by a person responsible for their safety. In general, we recommend that you keep the appliance out of reach of children. Do not wrap the mains cord around the appliance. Always unplug after use. if plugged in , the appliance will continue to heat even on the «»-setting.

Even switched off, the appliance presents a hazard when near water. «1» = Warm air setting to style a medium and small amount of hair and to create volume at the roots. «2» = Drying/styling setting to style a big amount of hair. «3» = Power setting for fast pre-drying wet hair, especially with the volumizer attachment (only with steam & style pro). (3).

4 Re-insert the water reservoir until it snaps into place (illustr. The power control light lights up. Ready for steaming after 2 minutes (illustr. 5). After use Always empty the water reservoir.

The steam function can be used with all attachments. To change attachments press the release button (b). Slowly remove brush from the streak. This guarantee extends to every country where this appliance is supplied by Braun or its appointed distributor. This guarantee does not cover: damage due to improper use, normal wear or use as well as defects that have a negligible effect on the value or operation of the appliance. The guarantee becomes void if repairs are undertaken by unauthorised persons and if original Braun parts are not used. To obtain service within the guarantee period, hand in or send the complete appliance with your sales receipt to an authorised Braun Customer Service Centre. For UK only: This guarantee in no way affects your rights under statutory law. Clean the attachments with a damp cloth and the motor part with a dry cloth. Remove dust from the filter with your finger.

in case of intensive dust remove the filter and clean under water. Subject to change without notice. this product conforms to the European Directives EMC 2004/108/EC and Low Voltage 2006/95/EC. .



[You're reading an excerpt. Click here to read official BRAUN STEAM AND STYLE PRO user guide](http://yourpdfguides.com/dref/3290787)
<http://yourpdfguides.com/dref/3290787>