



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for BRAUN TEXSTYLE 7. You'll find the answers to all your questions on the BRAUN TEXSTYLE 7 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual BRAUN TEXSTYLE 7
User guide BRAUN TEXSTYLE 7
Operating instructions BRAUN TEXSTYLE 7
Instructions for use BRAUN TEXSTYLE 7
Instruction manual BRAUN TEXSTYLE 7



www.braun.com/register

Type 4690, Type 4679



[You're reading an excerpt. Click here to read official BRAUN
TEXSTYLE 7 user guide
http://yourpdfguides.com/dref/3289906](http://yourpdfguides.com/dref/3289906)

Manual abstract:

Our products are engineered to meet the highest standards of quality, functionality and design. We hope you enjoy your new Braun steam iron. 7 Temperature selector 8 Temperature pilot light 9 «auto-off» light (only with 780 and 770 models) 10 Heel rest 11 Textile Protector (only with 780, 770 and 760 models) 12 Soft Textile Protector (only with 780 model) Before using the iron, read the use instructions completely. Keep the use instructions during the entire life of the appliance. Make sure your voltage corresponds to the voltage printed on the iron. Caution: Due to the high power of this steam iron please make sure that your mains supply is sufficient. Please contact your local electric power company to make sure that the so called mains impedance is not higher than 0. Always unplug the iron before filling with water. Always pull the plug, not the cord. The cord should never come in contact with hot objects or the sole plate.

Never immerse the iron in water or other liquids. The iron must be used and rested on a stable surface. During ironing pauses, always place the iron upright on its heel rest and ensure that the heel rest is placed on a stable surface. The iron must not be left unattended while it is connected to the mains supply. This appliance is not intended for use by children or persons with reduced physical, sensory or mental capabilities, unless they are given supervision by a person responsible for their safety.

@@Never iron or dampen clothes while wearing them. @@@@ faulty or unqualified repair work may cause accidents or injury to the user. Braun electric appliances meet applicable safety standards. If you have extremely hard water, we recommend that you use a mixture of 50 % tap water and 50 % distilled water. Do not add any additives (e.

Do not use condensation water from a tumble dryer. Before filling with water, turn off the steam regulator (6) («0» = steam off). Holding the iron slightly inclined (as shown in B), fill the water tank up to the «max» marking. Select the temperature according to the ironing guide on the heel rest of the iron or on the label in your garments. The pilot light (8) goes off when the desired temperature is reached (after approx. Vario steam You can select the steam quantity by turning the steam regulator (6) in a range from «0» to «6». Notice: While ironing, do not turn the steam regulator beyond setting «6». Precision shot Prior to use, press the precision shot button (4) 3 to 4 times to activate it. Press the precision shot button in intervals of at least 5 seconds for a powerful steam shot with preconditioning steam. Precision shot can be activated when dry ironing.

However, the temperature selector has to be within the solid red range. The precision shot function can also be used in the vertical position for steaming hanging clothes. @@@@This is normal and in no case indicates a fault of the iron. @@@@To turn on the iron again, just move it.

@@@@To prolong the life of the iron, empty the water tank. Store the cool iron in a dry place always standing on its heel rest. To clean the sole plate, use steel wool. Never use a scouring pad, vinegar or other chemicals. To clean the soft material on the handle, use soapy water. @@ a special coating avoids shiny patches.

@@@@However, in order not to damage the coating, avoid ironing over e. @@@@When positioned at x, pull it out vertically. Do not touch the anticalc valve at its lower end. @@Brush off remaining residues and rinse under running water (fig. Firmly push down the steam regulator until it turns back to setting «6» (fig.

h) where it catches. Notice: The iron must never be used without steam regulator. In order to clean the steam chamber from residues, decalcify it as shown in picture section I, 1-8. Caution: Hot water and steam will come out from the sole plate when the steam regulator is turned clockwise beyond setting «6». Wait for the sole plate to cool down, then clean it as described above.

Then refill the tank with water, heat up the iron and press the precision shot button 4 times to rinse the iron before ironing (fig. i, 9-13). Do not use commercial decalcifiers, they may damage the iron. Within the guarantee period we will eliminate any defects in the appliance resulting from faults in materials or workmanship, free of charge either by repairing or replacing the complete appliance at our discretion. This guarantee extends to every country where this appliance is supplied by Braun or its appointed distributor. This guarantee does not cover: damage due to improper use, normal wear or use as well as defects that have a negligible effect on the value or operation of the appliance. The guarantee becomes void if repairs are undertaken by unauthorised persons and if original Braun parts are not used. To obtain service within the guarantee period, hand in or send the complete appliance with your sales receipt to an authorised Braun Customer Service Centre. For UK only: This guarantee in no way affects your rights under statutory law. Take longer intervals when pressing the precision shot button.

Subject to change without notice. @@@@Voorbewaterende stoom spuitopeningen Spray spuitopening Waterreservoir opening Precision shot knob Spray knob Stoom doseerknop Temperatuur-regelaar Temperatuur indicatielampje Automatisch-uit lampje («auto-off») (alleen bij modellen 780 en 770) 10 Rustvlak 11 Textile Protector (alleen bij modellen 780, 770 en 760) 12 Soft Textile Protector (alleen bij model 780) 1 2 3 4 5 6 7 8 9 Precision shot Druk voor gebruik 3 tot 4 keer de Precision shot knob (4) in om deze te activeren. Soft Textile Protector (12) (alleen bij model 780) De Soft Textile Protector verzekert een verhoogde hittebescherming en uiterste zorg voor de meest gevoelige stoffen dankzij het speciaal ontworpen SoftTouch kussen. Dampregulator Temperatuurvælger Temperatuurkontrollampe Lampe for automatisk slukning (kun model 780 og 770) 10 Hvilehæl 11 Textile Protector (kun model 780, 770 og 760) 12 Soft Textile Protector (kun model 780) 6 7 8 9 Soft Textile Protector (12) (kun model 780) Soft Textile Protector sikrer en øget varmebeskyttelse og en meget nænsom behandling af de mest sarte tekstiler takket være den specialdesignede SoftTouch pude. Precision shot Napfied stisknûte tlaãitko Precision shot (4) 3krát aã 4krát, aby ste túto funkci u aktivovali. Precision shot Najskôr stlaãte tlaãidlo Precision shot (4) 3 krát aã 4 krát, aby ste túto funkci u aktivovali.



[You're reading an excerpt. Click here to read official BRAUN
TEXSTYLE 7 user guide
http://yourpdfguides.com/dref/3289906](http://yourpdfguides.com/dref/3289906)