



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for BRAUN TS715. You'll find the answers to all your questions on the BRAUN TS715 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual BRAUN TS715
User guide BRAUN TS715
Operating instructions BRAUN TS715
Instructions for use BRAUN TS715
Instruction manual BRAUN TS715

Stapled booklet, 128 x 225 mm, 76 pages (incl. 8 pages cover), 2/2c = PMS186u+ black

BRAUN

TexStyle 7

TS 715
TS 725
TS 735 TP
TS 745 A



www.braunhousehold.com

Type 4661, Type 4661 E

57127004L_TS_745-715_001.indd 1

08.03.13 13:28



[You're reading an excerpt. Click here to read official BRAUN TS715 user guide](http://yourpdfguides.com/dref/5528264)
<http://yourpdfguides.com/dref/5528264>

Manual abstract:

indd 3 00 50 3 4 5 6 3 4 5 6 clean g / anti in l ic a 100 C! Clean g / anti in 2 ca c 2 3 4 13 I c 5 3 4 5 6 vinegar or lemon juice clean g / anti in 5 2 1 3 4 c 5 6 3 4 5 6 c clean g / anti in al c 2 9 1 2 3 4 5 6 l ca 2 6 1 2 4x cleaning / an a tic lc 08. 13 14:33 English Before using the iron, read the use instructions completely. Keep the use instructions during the entire life of the appliance. Important Safeguards • Make sure your voltage corresponds to the voltage printed on the iron. □ This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 years and supervised. □ During operation and cool-down, the appliance and its mains cord shall be kept out of reach of children under 8 years. • Caution: Hot surfaces! Electric irons combine high temperatures and hot steam that could lead to burns. □ Always unplug the iron before filling with water. Always pull the plug, not the cord. □ Do not open the water tank cover during ironing. □ The cord should never come in contact with hot objects or the sole plate. □ Never immerse the iron in water or other liquids. □ The iron must be used and rested on a stable surface.

@@@ • Never iron or dampen clothes while wearing them. @@ Regularly check the cord for damage. @@ Faulty or unqualified repair work may cause accidents or injury to the user. Braun electric appliances meet applicable safety standards. A Description 1 2 3 4 5 6 7 8 9 10 11 Preconditioning nozzles Spray nozzle Water tank opening Precision Shot button Spray button Steam regulator Temperature selector Temperature pilot light «auto-off» light (only with TS 745 A model) Heel rest Textile Protector (only with TS 735 TP model) B Before starting off This iron is designed for tap water.

If you have extremely hard water, we recommend that you use a mixture of 50 % tap water and 50 % distilled water. Do not add any additives (e. Do not use condensation water from a tumble dryer. □ Before filling with water, turn off the steam regulator («0» = steam off). □ Holding the iron slightly inclined (as shown in B), fill the water tank up to the «max» marking. □ Place the iron upright on its heel rest and connect it to the mains. Select the temperature according to the ironing guide on the heel rest of the iron or on the label in your garments. The pilot light (8) goes off when the desired temperature is reached (after approx. 13 14:33 C Ironing Vario steam You can select the steam quantity by turning the steam regulator (6) in a range from «0» to «6». The temperature selector has a minimum temperature level 2 (••).

we recommend a medium steam setting for all normal ironing. Only when ironing linen, thick cotton or similar fabrics we recommend the maximum steam setting. Notice: While ironing, do not turn the steam regulator beyond setting «6». @@ 30 seconds. @@@@ Precision Shot can be activated when dry ironing. @@@@ Caution: Hot steam comes out from the preconditioning nozzles. spray function Press the spray button (5). @@ 2 minutes without Textile Protector. @@ a special coating avoids shiny patches. However, in order not to damage the coating, avoid ironing over e.

@@@@ Always store your iron with the Textile Protector detached. @@ To prolong the life of the iron, empty the water tank. Store the cool iron in a dry place always standing on its heel rest. F Maintenance and cleaning To clean the sole plate, use steel wool. Never use a scouring pad, vinegar or other chemicals.

@@ For this, the water tank has to be empty. @@@@ When positioned at x, pull it out vertically. Do not touch the anticalc valve at its lower end. @@ Brush off remaining residues and rinse under running water (fig. g , 1-7).

@ g 8). @ g) where it catches. Notice: The iron must never be used without steam regulator. Automatic shut-off (only with TS 745 A model) The «auto-off» mechanism causes a slight rattling noise during ironing. This is normal and in no case indicates a fault of the iron. The red «auto-off» light (9) will flash when the automatic shut-off is activated. This happens when the iron has rested: – horizontally on its sole plate for about 30 seconds or – vertically on its heel rest for about 8 minutes. To turn on the iron again, just move it. When the «auto-off» pilot light stops flashing, the electrical power is on again. The automatic shut-off will be activated approximately 2 minutes after the iron is plugged into a socket.

D Textile Protector (only with TS 735 TP model Before attaching the Textile Protector (10) for the first time, iron approximately 10 5712710044_TS_745-715_S06-76. 13 14:33 H Decalcifying/anticalc system In order to clean the steam chamber from residues, decalcify it as shown in picture section H, 1-8. Caution: Hot water and steam will come out from the sole plate when the steam regulator is turned clockwise beyond setting «6». Wait for the sole plate to cool down, then clean it as described above. Then refill the tank with water, heat up the iron and press the precision shot button 4 times to rinse the iron before ironing (fig. h , 9-13). Do not use commercial decalcifiers, they may damage the iron. Trouble-shooting guide Problem Remedy Drops coming out Turn the steam regulator of the steam vents. Anti-clockwise to reduce the steam or turn it off. Take longer intervals when pressing the Precision Shot button.

Calcium particles coming through the steam vents. Subject to change without notice. @@@@ For at tænde for strygejernet igen behøver du bare bevæge det en lille smule. Løsning Drej dampregulatoren mod uret for at begrænse eller slukke for dampen. Funksjonen for ekstra kraftige dampstøt kan også brukes i vertikal stilling for damping av klær som henger.

13 14:33 wyŁącznika («auto-off») (tylko model TS 745 A) 10 Podstawa łelazka 11 Nakładka Ochronna Protector (Textile Protector) (tylko model TS 735 TP) B Praktyczne wskazówki przed rozpoczciem prasowania Do napełniania łelazka mo ĩna stosowaç wod z kranu. A Popis Trysky pro priedbũlné napafiování Kropicĩ tryska Otvor nádrĩky na vodu Tlaãitko v ĩtrysk páry vpřed (Precision Shot) 5 Tlaãitko kropení 6 Regulaç mnořství páry 7 Voliã teploty 8 Kontrolka teploty 9 Kontrolka automatického vypnutí («auto-off») (pouze model TS 745 A) 10 Odstavná plocha ĩehliãky 11 Textilní protektor (Textile Protector) (pouze model TS 735 TP) 1 2 3 4 B NeĽ zaãnete ĩehlit Tato ĩehliãka je zkonstruovãna pro pouřitĩ vody z vodovodu.



[You're reading an excerpt. Click here to read official BRAUN TS715 user guide](http://yourpdfguides.com/dref/5528264)

<http://yourpdfguides.com/dref/5528264>