



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for BRIGGS & STRATTON 104772. You'll find the answers to all your questions on the BRIGGS & STRATTON 104772 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual BRIGGS & STRATTON 104772
User guide BRIGGS & STRATTON 104772
Operating instructions BRIGGS & STRATTON 104772
Instructions for use BRIGGS & STRATTON 104772
Instruction manual BRIGGS & STRATTON 104772

FORM MS-9876-793
REPLACES FORM MS-9876-092
FILE IN SECTION 2 OF SERVICE MANUAL
104700 to 104799

Illustrated Parts List Vanguard Model Series

104700 to 104799

Non-Compliance

TYPE NUMBERS
0101, 0102,
0110 through 0125
0127,
4003 through 4007
4024, 4025, 4044,
4045.

Compliance

TYPE NUMBERS
3101, 3102, 3112.

TO FIND THE CORRECT NUMBER OF THE PART YOU NEED: FOLLOW THE INSTRUCTIONS BELOW

- A. Refer to Engine Model, Type and Code Number that is stamped on the blower housing of engine. Engine type numbers such as 0123 01 are listed only as 0123 in most instances. The two digits (01 or 02, etc.) to the right of the space may be required for more accurate parts identification in some instances. Select the Illustrated Parts List covering the correct Model Series and Type Number.
- B. Refer to the Illustrations and compare the original part with illustration. The number next to the illustration is the Reference Number. Assemblies include all parts shown in frames. All parts shown in assembly frames having individual reference numbers can be purchased separately.
- C. After the Reference Number has been identified, refer to the Numerical text where Reference and Primary Part Number are listed. THE PRIMARY PART IS USED ON ALL TYPE NUMBERS EXCEPT THOSE TYPE NUMBERS UNDER "NOTE."
- D. If a "Note" appears below the Primary Part Number, it means that this part differs from the Primary Part for certain types. If your Type number is listed under "Note," order the part referred to at the "Note."
- E. If your Engine Type Number does not appear after any part number listed under "Note," use the Primary Part Number.
- F. For Engine Type Numbers not covered by this book, check other Parts Lists having the same engine model or contact your source of supply.

PRINTED IN U.S.A.



COPYRIGHT ©



[You're reading an excerpt. Click here to read official BRIGGS & STRATTON 104772 user guide](http://yourpdfguides.com/dref/3639906)
<http://yourpdfguides.com/dref/3639906>

Manual abstract:

2 OF SERVICE MANUAL 104700 to 104799 Illustrated Parts List Vanguard Model Series 104700 to 104799 Non-Compliance TYPE NUMBERS 0101, 0102, 0110 through 0125 0127, 4003 through 4007 4024, 4025, 4044, 4045. Compliance TYPE NUMBERS 3101, 3102, 3112. TO FIND THE CORRECT NUMBER OF THE PART YOU NEED: FOLLOW THE INSTRUCTIONS BELOW A. Refer to Engine Model, Type and Code Number that is stamped on the blower housing of engine. Engine type numbers such as 0123 01 are listed only as 0123 in most instances. The two digits (01 or 02, etc.) to the right of the space may be required for more accurate parts identification in some instances. Select the Illustrated Parts List covering the correct Model Series and Type Number.

Refer to the Illustrations and compare the original part with Illustration. The number next to the illustration is the Reference Number.

Assemblies include all parts shown in frames. All parts shown in assembly frames having individual reference numbers can be purchased separately. After the Reference Number has been identified, refer to the Numerical text, where Reference and Primary Part Number are listed. THE PRIMARY PART IS USED ON ALL TYPE NUMBERS EXCEPT THOSE TYPE NUMBERS UNDER "NOTE." B.

C. D. If a "Note" appears below the Primary Part Number, it means that this part differs from the Primary Part for certain types. @@@@SEE REPAIR INSTRUCTION MANUAL. REF.

NO. 1 2 3 8 8A 9 10 PART NO. 492741 492761 K399781 224144 66434 K272161 810050 DESCRIPTION REF. NO. 27 28 29 PART NO. @@For Connecting Rod With .020" Undersize Crank Pin BoreOrder No. 493205. ScrewConn. Rod PlugPipe (1/418 NPTF) SpringGovernor See Last Pages.

Lever AssemblyGov. WasherGov. Crank (1 Required) WasherGov. Crank (3 Required) ScrewOil Fill Tube Screw PlugSpark REF. NO. 383 523 524 525 552 562 592 614 615B 616 634B 718 718A 842 847 1022 1023 PART NO. 19374 492737 K280892 492736 231632 810043 810011 93306 93307 492164 K491323 231589 230192 K280393 492735 K272131 213522 DESCRIPTION WrenchSpark Plug DipstickOil Filler SealFiller Tube TubeOil Filler Bushing-Gov. Crank BoltGov. Lever NutGov. Lever PinCotter RingRetaining (Governor Crank) CrankGovernor SealOil (Governor Crank) PinCylinder PinCylinder SealTube Dipstick & Tube Assy.

GasketRocker Arm Cover CoverRocker Arm 383 3 2 3 337 305 8 8A 9 634B 229 614 230 227 84A 552 718A 718 1 27 209 1022 29 562 26 32 25 27 27 28 Cylinder Assembly Bushing & SealCyl. SealOil CoverBreather DiscBreather GasketBreather ScrewRocker Arm Cover 11 280889 TubeBreather 14 94436 StudCylinder Head 25 Piston Assy. (Std.) See Last Pages. PISTON RING SETS 26 492766 Ring SetPiston (Std.)

) 492883 Ring SetPiston (.010" Oversize) 492884 Ring SetPiston (.020" Oversize) 492885 Ring SetPiston (.030" Oversize) 32 84A 209 227 229 230 284 305 337 810050 93448 492159 810018 94742 810077 810037 491055 K Included in Gasket SetPart No. 492872.

98782 Assemblies include all parts shown in frames. 2 73 104700 to 104799 45 1026 13 7 54 33 40 868 1022 40 35 238 868 34 166A 1034 294 192 1029 REQUIRES SPECIAL TOOLS TO INSTALL. SEE REPAIR INSTRUCTION MANUAL. REF. NO. PART NO. DESCRIPTION REF. NO. 54 122 166A 192 238 294 868 871 PART NO. DESCRIPTION REF.

NO. 883A 1022 1026 1029 1034 PART NO. DESCRIPTION 5 871 883A 122 52 51A 5 492782 HeadCylinder 7 K272133 GasketCylinder Head 13 94426 ScrewCylinder Head 33 492770 ValveExhaust 34 492769 ValveIntake 35 262550 SpringValve 40 262552 RetainerValve Spring 45 262521 TappetValve 51AKDz272160 GasketAdapter to Carburetor 52KDz272159 GasketAdapter to Cylinder 94438 StudCarburetor Mtg. 492866 Adapter & Gasket Assy (Carburetor Mtg.) 94437 StudRocker Arm 492160 Ball & Screw Assy. Rocker Arm 262499 CapValve 810068 ScrewSet (Valve Adj.) K491020 SealValve Stem 262378 BushingValve Guide (Exhaust or Intake) K272130 GasketExhaust (Elbow To Head) K272131 GasketRocker Arm Cover 492042 RodPush 224111 ArmRocker 224205 GuidePush Rod K Included in Gasket SetPart No. 492872. f Included in Carburetor Overhaul KitPart No. 494248. z Included in Carburetor Gasket SetPart No. 492482. D Included in Carburetor Overhaul KitPart No. 492487. 98783 Assemblies include all parts shown in frames.

3 73 104700 to 104799 1028 982 84 1024 116A 1027 819 615A 215 377 219 741 759 REF. NO. 12 15 15A 16 18 20 22 24 46 84 116A 215 PART NO. 978 249 243 437 18 253 24 12 22 239 16 979 15 982A 84 1028A 20 15A 978A 46 DESCRIPTION 615 220 REF. NO.

PART NO. DESCRIPTION REF. NO. PART NO. DESCRIPTION K272132 GasketEngine Base 94239 PlugOil Drain 93418 PlugOil Drain (Socket Head) Crankshaft See Last Pages. 492760 Base Assembly Engine (Sump) K399781 SealOil 810076 ScrewEngine Base 222698 KeyFlywheel 492004 GearCam 94379 PlugPipe (1/827 NPTF) K280891 O-Ring (Oil Pump Cover) 262808 SpringCam Release (Red) (Used After Code Date 90111900). 219 220 239 243 249 253 377 437 615 615A Note: 262568 SpringCam Release (Yellow) (Used Before Code Date 90111800). 492752 GearGovernor 221551 WasherGov. Gear 491657 SwitchOil Pressure 224208 ScreenOil Pump 492758 ValvePressure Relief 231573 NippleOil Filter 94329 KeyWoodruff 810080 ScrewScreen Mtg. @@@@@@@NO.

PART NO. 269 51 951 271 270 50 53A DESCRIPTION REF. NO. 223 PART NO. DESCRIPTION REF. NO. 374 445 467 467A 535 549 621 642 901 916 951 PART NO. @@@@@Hd. @@WireControl See Last Pages. @@492872.

f Included in Carburetor Overhaul KitPart No. 494248. z Included in Carburetor Gasket SetPart No. 492482. D Included in Carburetor Overhaul KitPart No. @@@@NO. @@NO. @@NO. @@@@@@@@@@@@@@@@494248. D Included in Carburetor Overhaul KitPart No. 492487. z Included in Carburetor Gasket SetPart No. @@@@NO. 356A 363 474 482 575 PART NO. 333 334 REF. NO. PART NO. REF. NO. 23 23A PART NO.

DESCRIPTION DESCRIPTION DESCRIPTION 258 325 332 333 334 356 493911 Flywheel Assy. 491814 Flywheel & Ring Gear Assy.Magneto Note: 493987 Flywheel & Ring Gear Assy. Magneto Used on Type No. 3102. 810075 ScrewBrake Mtg. 492676 HubRewind Starter 810042 NutFlywheel 491760 ArmatureMagneto 810035 ScrewArmature Mtg. 399094 WireGround 621 635 789 493468 Wire Assembly Dual Stop 19203 PullerFlywheel 491469 Stator-Alternator 810071 ScrewStator Mtg. 396291 SwitchIgnition Includes: 392832 Key Set 396847 SwitchStop 280897 ElbowSpark Plug 492520 HarnessWiring Used on Engines Without Brake. 851 922 935 942 948 1005 Note: 492518 Harness Wiring Used on Engines With Brake.



You're reading an excerpt. [Click here to read official BRIGGS & STRATTON 104772 user guide](http://yourpdfguides.com/dref/3639906)
<http://yourpdfguides.com/dref/3639906>

221798 TerminalIgnition Cable 262554 SpringBrake 492371 Switch & Bracket Assy.Brake 492372 Brake Assembly 492519 WireStarter to Brake Switch 280887 FanFlywheel 98787 Assemblies include all parts shown in frames. 7 73 104700 to 104799 736 941 228 666 304 305 727A 423 736 727 305 601 65 REF. NO. 65 180 181 182 184 187 188 198 228 PART NO.

810074 492191 491367 224173 810037 393815 DESCRIPTION 941A 670 181 188 305 617 198 617A 184 180 240 670A 601 184 REF. NO. 617 617A 666 670 670A 727 727A 736 941 941A PART NO. 182 573 REF. NO.

240 304 PART NO. 187 DESCRIPTION DESCRIPTION ScrewHex. Hd. Tank Assy.Fuel CapFuel Tank BracketFuel Tank ScrewTank Bracket HoseFuel (Cut to Length) 810050 ScrewTank Mtg. 491753 ValveFuel Shut-Off 810085 ScrewBrake Cover 305 423 573 601 492044 FilterFuel Tank Inlet 492074 Housing-Blower (Red) Note: 492075 Housing Blower (Black) 810037 Screw 810079 ScrewHex. Hd. 492055 PlateBack 93807 ClampFuel Hose (Black) Note: 93053 ClampFuel Hose (Green) SetPart No. 492872. f Included in Carburetor Overhaul KitPart No.

494248. z Included in Carburetor Gasket SetPart No. 492482. D Included in Carburetor Overhaul KitPart No. 492487. 987811 Assemblies include all parts shown in frames. 11 73 104700 to 104799 51 52 116 634 51A 137 977 CARBURETOR GASKET SET 987 634A 978 883 1022 7 3 978A 524 868 617 20 9 116A 51 883A 52 51A 358 GASKET SET REF. NO. PART NO. DESCRIPTION REF. NO. PART NO. DESCRIPTION REF. NO. 883 883A PART NO.

842 12 634B 617A DESCRIPTION 3 K399781 SealOil 7 K272133 GasketCylinder Head 9 K272161 GasketBreather 12 K272132 GasketEngine Base 20 K399781 SealOil 51KDfz272162 GasketIntake Elbow 51AKDfz272160 GasketAdapter to Carburetor 52KDfz272159 GasketAdapter to Cylinder 116 Dj272187 GasketCarb. Bowl Screw 116A K280891 O-Ring (Oil Pump Cover) 137Dfz272188 GasketCarb. Bowl 358 492872 Gasket Set 524 K280892 Seal-Filler Tube 617 K280936 O-Ring (Fuel Gage) 617A K280670 O-Ring (Shut-Off Valve) 634Dfz492172 SealThrottle Shaft 634ADfz272184 SealChoke Shaft 634B K491323 SealOil (Governor Crank) 842 K280393 SealTube (Oil Fill) 868 K491020 SealValve Stem K272228 GasketMuffler K272130 GasketExhaust (Elbow To Head) 977 492482 Gasket Set Carburetor 978 K272169 GasketOil Filter Adapter 978A K272158 GasketFilter Bypass Cover 987Dfz280912 WasherThrottle Shaft 1022 K272131 GasketRocker Arm Cover K Included in Gasket SetPart No. 492872. f Included in Carburetor Overhaul KitPart No.

494248. z Included in Carburetor Gasket SetPart No. 492482. D Included in Carburetor Overhaul KitPart No. @@@@NO. 309 310 311 510 513 PART NO. @@@Drive Assy. Clutch Assy. REF. NO.

544 728 783 801 PART NO. DESCRIPTION REF. NO. 802 803 876 896 PART NO. DESCRIPTION 492865 Armature Assy. 810040 ScrewElec. Starter Mtg. @@490467 Pinion KitSpring 94288 PinRoll 987813 Assemblies include all parts shown in frames. 13 73 104700 to 104799 REF. NO. 16 PART NO. DESCRIPTION REF. NO. 25 PART NO. DESCRIPTION REF. NO. PART NO. DESCRIPTION 262576 SpringGov. Used on Type Nos. 0110, 0114, 0115, 0117, 0118, 0123, 0125, 0127.

262577 SpringGov. Used on Type Nos. 0112, 0113. CasingControl Wire (72" Long) If Longer Casing is Required, Specify Length in Inches; If Shorter Casing is Needed, Order No. 65616 and Cut to Required Length. WireControl (78" Long) If Longer Wire is Required, Specify Length in Inches; If Shorter Wire is Needed, Order No. 26633 and Cut to Required Length. 493874 Crankshaft (25 mm) Note: Order Part No. 94388 For Timing Gear Key Replacement. 493875 Crankshaft Used on Type Nos.

0121, 3112. 493876 Crankshaft Used on Type Nos. 0110, 0111, 0123, 0124, 4005, 4007, 4025. 493877 Crankshaft Used on Type Nos. 0117, 0118, 0125, 4044. 493878 Crankshaft Used on Type No. 4045. 492767 Piston Assy. (Std.) 492886 Piston Assy. (.010" O.S.) 492887 Piston Assy. (.020" O.S.) 492888 Piston Assy. (.030" O.S.) 262572 SpringGovernor Note: 262573 SpringGov. Used on Type Nos. 0101, 0102, 3101, 3102, 3112. 262574 SpringGov. Used on Type Nos. 0111, 4003, 4024, 4025, 4044, 4045. 262575 SpringGov. Used on Type Nos. 0116, 0119, 0120, 0121, 0124, 4004, 4005, 4006, 4007.

209 268 65616 Note: 269 26633 Note: 987814 Assemblies include all parts shown in frames. 14 73 .



You're reading an excerpt. Click here to read official BRIGGS & STRATTON 104772 user guide
<http://yourpdfguides.com/dref/3639906>