



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for BRIGGS & STRATTON 10A900 TO 10A999. You'll find the answers to all your questions on the BRIGGS & STRATTON 10A900 TO 10A999 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual BRIGGS & STRATTON 10A900 TO 10A999**  
**User guide BRIGGS & STRATTON 10A900 TO 10A999**  
**Operating instructions BRIGGS & STRATTON 10A900 TO 10A999**  
**Instructions for use BRIGGS & STRATTON 10A900 TO 10A999**  
**Instruction manual BRIGGS & STRATTON 10A900 TO 10A999**



FORM MS-0669-07/10/2008  
REPLACES FORM MS-0669-05/19/2008  
FILE IN SECT. 2 OF SERVICE MANUAL  
**10A900**

## Illustrated Parts List

### Model Series

### 10A900

TYPE NUMBERS  
0015 through 2299.

#### TABLE OF CONTENTS

|                                   |   |
|-----------------------------------|---|
| Air Cleaner .....                 | 5 |
| Blower Housing/Shrouds .....      | 7 |
| Brake .....                       | 7 |
| Camshaft .....                    | 3 |
| Carburetor .....                  | 4 |
| Controls .....                    | 5 |
| Crankcase Cover/Sump .....        | 3 |
| Crankshaft .....                  | 3 |
| Cylinder .....                    | 2 |
| Cylinder Head .....               | 2 |
| Exhaust System .....              | 6 |
| Flywheel .....                    | 7 |
| Fuel Supply .....                 | 4 |
| Gasket Set - Engine .....         | 2 |
| Gasket Set - Valve .....          | 2 |
| Governor Spring .....             | 5 |
| Ignition .....                    | 5 |
| Lubrication .....                 | 2 |
| Operator's Manual .....           | 2 |
| Piston/Rings/Connecting Rod ..... | 3 |
| Rewind Starter .....              | 8 |
| Warning Label .....               | 2 |



PRINTED IN U.S.A.  
COPYRIGHT by BRIGGS & STRATTON CORPORATION  
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.



[You're reading an excerpt. Click here to read official BRIGGS & STRATTON 10A900 TO 10A999 user guide](http://yourpdfguides.com/dref/3639771)

<http://yourpdfguides.com/dref/3639771>

**Manual abstract:**

2 OF SERVICE MANUAL 10A900 Illustrated Parts List Model Series 10A900 TYPE NUMBERS 0015 through 2299. TABLE OF CONTENTS Air Cleaner . . .

. . . . .

. . . . .

. . . . .

. . . . . 5 Blower Housing/Shrouds . . . . .

. . . . . 7 Brake . . . . .

. . . . .

. . . . .

. . . . . 7 Camshaft . . . . .

. . . . .

. . . . .

. . . . . 3 Carburetor . . . . .

. . . . .

. . . . . 4 Controls . . . . .

. . . . .

. . . . .

. . . . . 5 Crankcase Cover/Sump . . . . .

. . . . . 3 Crankshaft . . . . .

. . . . .

. . . . .

. . . . . 3 Cylinder . . . . .

. . . . .

. . . . .

. . . . . 2 Cylinder Head . . . . .

. . . . .

. . . . . 2 Exhaust System . . . . .

. . . . .

. . . . . 6 Flywheel . . . . .

. . . . .

. . . . .

. . . . . 7 Fuel Supply . . . . .

. . . . .

. . . . .

. . . . . 4 Gasket Set - Engine . . . . .

. . . . .

. . . . . 2 Gasket Set - Valve . . . . .

. . . . . 2 Governor Spring . . . . .

. . . . .

. . . . . 5 Ignition . . . . .

. . . . .

. . . . .

. . . . . 5 Lubrication . . . . .

.....  
.....  
.....  
. 2 Operator's Manual .....

..... 2 Piston/Rings/Connecting Rod .

.....  
. 3 Rewind Starter . . . .

..... 8 Warning Label . . .

.....  
.....  
..... 2 PRINTED IN U.

S.A. COPYRIGHT by BRIGGS & STRATTON CORPORATION All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation. 10A900 1058 OPERATOR'S MANUAL 1330 REPAIR MANUAL 1319 WARNING LABEL 358 ENGINE GASKET SET 3 12 7 20 51 9 51A 883 163 444 529 524 426 200 11 REQUIRED when replacing parts with warning labels affixed. 1095 VALVE GASKET SET 1 2 3 668 745 523A 847 842 7 9 523 525 883 524 287 524 306 718 50 870 869 871 54 307 51 7 50A 8 5 13 54 51A 337 635 337A 9 10 383 362 Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine. 0669-2 Assemblies include all parts shown in frames. 2 07/10/2008 10A900 25 45 35 34 40 36 33 40 45 26 27 28 46 46A 27 29 32 43 374 24 16 4B 12 444 377 718A 741 20 43 4A 12 4 12 22 22A 20 20 20A 444 101 83 721 444 178 1143 743 15 Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine. 0669-3 Assemblies include all parts shown in frames. 3 07/10/2008 10A900 90 976 163 97 130 633 529 913 365 106 617 393 612 394 390 724 957A 181 180 957 190 670 190A Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine. 0669-4 Assemblies include all parts shown in frames. 4 07/10/2008 10A900 201 209 211 222F 222E 621 188 268 265A 267 265 271 269 270 335 333 334 24 333B 851A 362 851 635 356 536 578 643 534 535A 535 163 Illustrations cover a range of engines.

Parts shown without corresponding text may not be used on your specific engine. 0669-5 Assemblies include all parts shown in frames. @@@@ 07/10/2008 10A900 608 55 65 592 257 66 71 70 67 68 60 678 1211 58A 1210 58 57 58 65A 55A 459 689 456 60 56 770A 597 608 608A 55 65 592 304A 1211 55 65 592 1210 1211 459 689 1210 73 459 689 456 332 597 455 58 969A 60 921 969 73 456 597 332 455 58 60 304A 305 Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine. 0669-8 Assemblies include all parts shown in frames. 8 07/10/2008 10A900 REF. NO. 1 2 3 4 PART NO. DESCRIPTION REF. NO. 15 16 PART NO. DESCRIPTION REF. NO. PART NO. DESCRIPTION 691472 Crankshaft Used on Type No(s).

0219, 0479, 1019, 1615, 1650, 1651, 2001, 2004, 2005, 2007, 2008, 2010, 2011, 2027, 2028, 2031, 2034, 2035, 2050, 2064, 2067, 2072, 2075, 2087, 2092, 2101, 2107, 2124, 2126, 2130, 2132, 2135, 2142, 2143, 2145, 2146, 2148, 2149, 2151, 2153, 2164, 2171, 2189, 2190, 2234, 2250, 2255, 2256, 2257, 2258, 2260, 2262, 2263, 2264, 2265, 2267, 2268, 2269, 2271, 2273, 2277, 2280, 2284, 2289, 2290, 2292, 2293, 2295, 2298, 2299. 693472 Crankshaft Used on Type No(s). 2266. 695413 Crankshaft Used on Type No(s). 1024. Seal-Oil (PTO Side) Seal-Oil (PTO Side) (Auxiliary PTO) Screw (Crankcase Cover/Sump) (1 1/4" Long) Screw (Crankcase Cover/Sump) (3/4" Long) 699653 Cylinder Assembly 399269 Kit-Bushing/Seal (Magneto Side) K299819S Seal-Oil (Magneto Side) 698691 Sump-Engine (Used After Code Date 02111200). ----- Note ----- 395384 Sump-Engine (Used Before Code Date 02111300). Sump-Engine (NO LONGER AVAILABLE) Used on Type No(s). 0050, 0051, 0159, 0167, 0169, 0173, 0186, 0193, 0197, 0202, 0206, 0211, 0219, 0230, 0430, 0650, 0651, 1019, 1650, 1651, 2067, 2130, 2169, 2254, 2258, 2259, 2261, 2285. 699084 Sump-Engine Used on Type No(s).

2266. 790169 Head-Cylinder K698717 Gasket-Cylinder Head 791781 Breather Assembly K695890 Gasket-Breather 691666 Screw (Breather Assembly) 691245 Tube-Breather K692218 Gasket-Crankcase (.015" Thick) (Standard) ----- Note ----- K270895 Gasket- Crankcase (.005" Thick) K270896 Gasket-Crankcase (.009" Thick) 691640 Screw (Cylinder Head) 691680 Plug-Oil Drain 496838 Crankshaft ----- Note ----- 692989 Crankshaft Used on Type No(s). 1605, 1618, 2029, 2083, 2090, 2140, 2180, 2233, 2252, 2253, 2254, 2259, 2261, 2279, 2285, 2286, 2291. 691406 Crankshaft Used on Type No(s). 0016, 0106, 0107, 0108, 0109, 0157, 0161, 0163, 0169, 0182, 0184, 0193, 0195, 0196, 0215, 0217, 0222, 0223, 0228, 0229, 0239, 0241, 0423, 0439, 0616. 496839 Crankshaft Used on Type No(s). 0018, 0156, 0183, 0190, 0233, 0240, 0483, 0505, 0506, 0618.

691471 Crankshaft Used on Type No(s). 0236, 0250, 1021, 1022, 1023, 1025, 1026, 1028, 1616, 2003, 2032, 2033, 2040, 2052, 2070, 2073, 2082, 2084, 2094, 2106, 2108, 2109, 2110, 2121, 2123, 2128, 2139, 2152, 2169, 2251, 2270, 2272, 2275, 2278, 2281, 2282, 2287, 2288, 2294, 2296, 2297. 4A 4B 5 7 8 9 10 11 12 20 K391483S 20A 22 K691952 692551 22A 691108 13 K Engine Gasket Set-Reference 358 Valve Gasket Set-Reference 1095 Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine. 0669-9 Assemblies include all parts shown in frames. 9 07/10/2008 10A900 REF. NO. 23 PART NO. DESCRIPTION REF. NO.

25 PART NO. DESCRIPTION REF. NO. 26 PART NO. DESCRIPTION 795549 Flywheel ----- Note ----- 690843 Flywheel Used on Type No(s). 0156, 0157, 0161, 0190, 0198, 0208, 0215, 0233, 0240, 0505, 0506, 1023, 1024, 1605, 2032, 2082, 2090, 2108, 2109, 2233, 2257, 2263, 2265, 2266, 2270, 2281, 2282. 795695 Flywheel (Used After Code Date 08012900). Used on Type No(s). 2140. 690843 Flywheel (Used Before Code Date 08013000). Used on Type No(s). 2140. 24 222698S Key-Flywheel 790908 Piston Assembly (Standard) (Used After Code Date 04111400). ----- Note ----- 699657 Piston Assembly (Standard) (Used Before Code Date 04111500). 792532 Piston Assembly (.020" Oversize) (Used After Code Date 96020500). 298906 Piston Assembly (.020" Oversize) (Used After Code Date 96020500).



[You're reading an excerpt. Click here to read official BRIGGS & STRATTON 10A900 TO 10A999 user guide](http://yourpdfguides.com/dref/3639771)  
<http://yourpdfguides.com/dref/3639771>

020" Oversize) (Used Before Code Date 96020600). 298907 Piston Assembly (.030" Oversize) (Used Before Code Date 96020600). 790909 Ring Set (Standard) (Used After Code Date 04111400). ----- Note ----- 699658 Ring Set (Standard) (Used After Code Date 03080300 and Before Code Date 04111500). 498680 Ring Set (Standard) (Used After Code Date 96020500 and Before Code Date 03080400). 298982 Ring Set (Standard) (Used Before Code Date 96020600). 795134 Ring Set (.020" Oversize) (Used After Code Date 04111400). 498682 Ring Set (.020" Oversize) (Used After Code Date 96020500 and Before Code Date 04111500). 298984 Ring Set (.020" Oversize) (Used Before Code Date 96020600).

@@@@@@@@@ 10 07/10/2008 10A900 REF. NO. 29 32 33 34 35 36 37 37A 40 43 PART NO. DESCRIPTION REF. NO. PART NO. DESCRIPTION REF. NO. 90 PART NO. @@@@0051, 0186, 0651, 1651.

699644 Manifold-Intake (Used After Code Date 03080300). 693446 Manifold-Intake (Used Before Code Date 03080400). K699649 Gasket-Intake (Used After Code Date 03080300). 270345S Gasket-Intake (Used Before Code Date 03080400). @ 73B 691725 Screen-Rotating (Used Before Code Date 97052600).

@@@----- Note ----- 690506 Shaft-Auxiliary Drive Used on Type No(s). 0050, 0167, 0219, 0650, 1019, 1650, 2067. 691249 Shaft-Auxiliary Drive Used on Type No(s). 0159, 0193, 0206, 2254, 2259, 2261, 2285. 794161 Carburetor (Used After Code Date 96051900).

@@@@@ 11 07/10/2008 10A900 REF. NO. 209 PART NO. DESCRIPTION REF. NO. PART NO. DESCRIPTION 262942 Spring- Governor (Used Before Code Date 96052000). Used on Type No(s). 0156, 0157, 0187, 0190, 0198, 0208, 0505. 690251 Spring- Governor (Used After Code Date 96051900).

Used on Type No(s). 0164, 0166, 0207, 0212, 0235, 0244, 0245, 0246, 0479, 1615, 1616, 1618, 1650, 1651, 2001, 2003, 2005, 2029, 2031, 2034, 2040, 2064, 2070, 2073, 2083, 2084, 2092, 2094, 2107, 2121, 2123, 2124, 2126, 213, 2072, 2073, 2075, 2082, 2084, 2087, 2094, 2106, 2108, 2110, 2135, 2143, 2153, 2164, 2250, 2262, 2270, 2275, 2282, 2293, 2294, 2295, 2296, 2297, 2298, 2299. @ @Used on Type No(s). 2008, 2010. @ @2011. @ @Used on Type No(s). 2008, 2010. @ @Used on Type No(s). 0164, 0232. @ @ @ @ @2027, 2034, 2190.

@ 698369 Filter-Air Cleaner Foam (Used After Code Date 02083000). 698472 Cleaner-Air 398153 Wire Assembly Used on Type No(s). 0015, 0016, 0018, 0050, 0051, 0615, 0616, 0618, 0650, 0651, 1615, 1616, 1618, 1650, 1651, 2050, 2052, 2152, 2250, 2278, 2296. 690800 Nut (Rewind Starter) 383 390 393 394 337 304 337A 426 444 455 456 459 523 523A 304A 524 525 529 534 535 305 306 307 356 358 362 535A 326 536 578 363 365 592 K Engine Gasket Set-Reference 358 Valve Gasket Set-Reference 1095 Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

0669-13 Assemblies include all parts shown in frames. 13 07/10/2008 10A900 REF. NO. 597 608 PART NO. DESCRIPTION REF. NO. 676 676A PART NO. DESCRIPTION REF. NO. 815 832 832A 832B PART NO. DESCRIPTION 691696 Screw (Pawl Friction Plate) 499706 Starter-Rewind (88 5/8" Rope) (Used After Code Date 97071300). 499926 Starter-Rewind (Non Compliance Engines) (70" Rope) 496046S Tube-Pick Up 691413 Screw (Muffler) (Super Lo Tone) 691114 Screw (Muffler) (Catalyst) Used on Type No(s). 0219, 0236, 0250, 1019, 1020, 1021, 1022, 1025, 1026, 1028, 2280. 270344S Seal-O Ring (Intake Manifold) 692310 Switch-Stop 691321 Seal-Choke/Throttle Shaft (Throttle) 66538S Boot-Spark Plug ----- Note ----- 66538S Boot-Spark Plug (Used Before Code Date 06073100). Used on Type No(s).

2008, 2010. 691911 Retainer-Air Filter (Used Before Code Date 97100600). 692889 Spacer 691633 Spacer-Fuel Tank (Used After Code Date 97071300). ----- Note ----- 691631 Spacer-Fuel Tank (Used Before Code Date 97071400). 393756 Deflector-Muffler (Side Out) 397931 Deflector-Muffler (Direct Out) Used on Type No(s). 0159, 2254, 2259, 2261, 2285. 497682 Deflector-Muffler Used on Type No(s). 0219, 0236, 0250, 1019, 1020, 1021, 1022, 1025, 1026, 1028, 2280. 690661 Screw (Muffler Deflector) 490817 Spacer-Rewind 691855 Spring-Friction 690959 Pin-Locating (Cylinder) 499047 Pin-Locating (Crankshaft) 690397 Stop-Shaft 697478 Retainer-Seal 690586 Clip-Wire 691805 Gear-Timing 691772 Gear-Drive ----- Note ----- 690516 Gear-Drive Used on Type No(s). 0051, 0186, 0651, 1651.

691146 Screw (Brake) (7/8" Long) 690859 Screw (Brake) (1/2" Long) 499915 Kit-Rewind/Blower Housing (Compliance Engines) (Used Before Code Date 97100600). 691111 Screw (Linkage Cover) (1 1/8" Long) ----- Note ----- 691183 Screw (Linkage Cover) (3/4" Long) 690345 Screw (Linkage Cover) (1/2" Long) 690324 Screw (Band Brake Pivot) 699299 Guard-Muffler (Super Lo Tone) 699670 Guard-Muffler (Round Lo Tone) 699300 Guard-Muffler Used on Type No(s). 0219, 0236, 0250, 1019, 1020, 1021, 1022, 1025, 1026, 1028, 2280. 790743 Guard-Muffler Used on Type No(s). 2007, 2011, 2027, 2033, 2034, 2035, 2052, 2072, 2082, 2087, 2106, 2108, 2109, 2110, 2135, 2143, 2153, 2164, 2250, 2262, 2270, 2275, 2293, 2294, 2295, 2298, 2299.

790744 Guard-Muffler Used on Type No(s). 2004, 2008, 2010. 690664 Screw (Muffler Guard) (13/32" Long) 790745 Screw (Muffler Guard) (1/2" Long) 691125 Screw (Muffler Guard) (5/8" Long) Used on Type No(s). 2004, 2007, 2011, 2027, 2033, 2034, 2035, 2052, 2072, 2082, 2087, 2106, 2108, 2109, 2110, 2135, 2143, 2153, 2164, 2250, 2262, 2270, 2275, 2293, 2294, 2295, 2298, 2299. K691870 Seal-O Ring (Dipstick Tube) 608A 676B 612 613 613A 677 678 689 718 718A 721 724 729 741 743 832C 617 621 633 635 832D 836 836A 836B 745 745A 770A 643 668 670 772 842 772A K Engine Gasket Set-Reference 358 Valve Gasket Set-Reference 1095 Illustrations cover a range of engines.

Parts shown without corresponding text may not be used on your specific engine. 0669-14 Assemblies include all parts shown in frames. 14 07/10/2008 10A900 REF. NO. 847 851 851A 869 PART NO. DESCRIPTION REF. NO. 921B 922 PART NO. DESCRIPTION REF. NO.

PART NO. DESCRIPTION 691440 Dipstick/Tube Assembly 493880S Terminal-Spark Plug 692424 Terminal-Spark Plug 699641 Seat-Valve (Intake) (Used After Code Date 03080300). ----- Note ----- 691701 Seat-Valve (Intake) (Used Before Code Date 03080400). 699642 Seat-Valve (Exhaust) (Used After Code Date 03080300). ----- Note ----- 691702 Seat-Valve (Exhaust) (Used Before Code Date 03080400). 699643 Bushing-Valve Guide (Exhaust Valve) (Used After Code Date 03080300). @ @ @ @2007, 2027, 2028, 2034, 2180, 2190. 793973 Cover-Blower Housing Used on Type No(s). 2008, 2011, 2035. 692135 Spring-Brake (Used After Code Date 97071300).

@ @Used on Type No(s). 2034. 691809 Spring-Brake (Used Before Code Date 97071400). 691487 Brake (Used After Code Date 97071300). @ @Used on Type No(s).

2034. 394867 Brake (Used Before Code Date 97071400). 691349 Cover-Linkage (Used After Code Date 97071300). Used on Type No(s). 2007, 2027, 2180, 2190.

----- Note ----- 691349 Cover-Linkage (Used After Code Date 97071300 and Before Code Date 05100400).



[You're reading an excerpt. Click here to read official BRIGGS & STRATTON 10A900 TO 10A999 user guide](http://yourpdfguides.com/dref/3639771)  
<http://yourpdfguides.com/dref/3639771>

*Used on Type No(s). 2034. 930C 691932 Guard-Rewind 933 690428 Pivot-Band Brake 957 497929S Cap-Fuel Tank 957A 692050 Cap-Fuel Tank Used on Type No(s). 0171, 0226, 0426, 2126, 2180, 2189, 2252, 2259, 2285, 2286. 969 691698 Screw (Blower Housing Cover) (1/2" Long) 969A 694046 Screw (Blower Housing Cover) (2 1/4" Long) 969B 692523 Screw (Blower Housing Cover) (2/3" Long) Used on Type No(s). 2007, 2027, 2028, 2034, 2180, 2190. 976 694394 Primer-Carburetor 1036 Label-Emissions (Available From A Briggs & Stratton Authorized Dealer) 1058 277038 Operator's Manual 1095 498526 Gasket Set-Valve 1143 691141 Screw (Drive Gear Cover) 1208 690859 Screw (Brake Bracket) 1210 499901 Pulley/Spring Assembly (Pulley) 1211 499901 Pulley/Spring Assembly (Spring) 1319 794467 Label-Warning 1330 270962 Repair Manual 870 922A 923 871 923A 925 883 913 921 921A K Engine Gasket Set-Reference 358 Valve Gasket Set-Reference 1095 Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine. 0669-15 Assemblies include all parts shown in frames.*

15 07/10/2008.



[You're reading an excerpt. Click here to read official BRIGGS & STRATTON 10A900 TO 10A999 user guide](http://yourpdfguides.com/dref/3639771)  
<http://yourpdfguides.com/dref/3639771>