



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for BRIGGS & STRATTON 10C902. You'll find the answers to all your questions on the BRIGGS & STRATTON 10C902 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual BRIGGS & STRATTON 10C902
User guide BRIGGS & STRATTON 10C902
Operating instructions BRIGGS & STRATTON 10C902
Instructions for use BRIGGS & STRATTON 10C902
Instruction manual BRIGGS & STRATTON 10C902

FORM ME-0967-K3-12000
REPLACES FORM ME-0967-8999
FILE SUBJECT: 200F SERVICE MANUAL
10C900 to 10C999

Illustrated Parts List Model Series 10C900 to 10C999

TYPE NUMBERS
0102, 0115, 0116,
0125,
0128 through 0134,
2002, 2028, 2029,
2030, 2032, 2034,
2035, 2036, 2037,
2038.

TO FIND THE CORRECT NUMBER OF THE PART YOU NEED: FOLLOW THE INSTRUCTIONS BELOW

- A. Refer to Engine Model, Type and Code Number that is stamped on the blower housing of engine. Engine type numbers such as 0123 01 are listed only as 0123 in most instances. The two digits (01 or 02, etc.) to the right of the space may be required for more accurate parts identification in some instances. Select the Illustrated Parts List covering the correct Model Series and Type Number.
- B. Refer to the Illustrations and compare the original part with illustration. The number next to the illustration is the Reference Number. Assemblies include all parts shown in frames. All parts shown in assembly frames having individual reference numbers can be purchased separately.
- C. After the Reference Number has been identified, refer to the Numerical text, where Reference and Primary Part Number are listed. **THE PRIMARY PART IS USED ON ALL TYPE NUMBERS EXCEPT THOSE TYPE NUMBERS UNDER "NOTE."**
- D. If a "Note" appears below the Primary Part Number, it means that this part differs from the Primary Part for certain types. If your Type number is listed under "Note," order the part referred to at the "Note."
- E. If your Engine Type Number does not appear after any part number listed under "Note," use the Primary Part Number.
- F. For Engine Type Numbers not covered by this book, check other Parts Lists having the same engine model or contact your source of supply.

PRINTED IN U.S.A.



COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.



[You're reading an excerpt. Click here to read official BRIGGS & STRATTON 10C902 user guide](http://yourpdfguides.com/dref/3639981)
<http://yourpdfguides.com/dref/3639981>

Manual abstract:

2 OF SERVICE MANUAL 10C900 to 10C999 Illustrated Parts List Model Series 10C900 to 10C999 TYPE NUMBERS 0102, 0115, 0116, 0125, 0128 through 0134, 2002, 2028, 2029, 2030, 2032, 2034, 2035, 2036, 2037, 2038. TO FIND THE CORRECT NUMBER OF THE PART YOU NEED: FOLLOW THE INSTRUCTIONS BELOW A. Refer to Engine Model, Type and Code Number that is stamped on the blower housing of engine. @@@@Refer to the Illustrations and compare the original part with Illustration. The number next to the illustration is the Reference Number. Assemblies include all parts shown in frames. All parts shown in assembly frames having individual reference numbers can be purchased separately. After the Reference Number has been identified, refer to the Numerical text, where Reference and Primary Part Number are listed. THE PRIMARY PART IS USED ON ALL TYPE NUMBERS EXCEPT THOSE TYPE NUMBERS UNDER "NOTE." If a "Note" appears below the Primary Part Number, it means that this part differs from the Primary Part for certain types.

If your Type number is listed under "Note," order the part referred to at the "Note." If your Engine Type Number does not appear after any part number listed under "Note," use the Primary Part Number. For Engine Type Numbers not covered by this book, check other Parts Lists having the same engine model or contact your source of supply. PRINTED IN U.S.

A. COPYRIGHT by BRIGGS & STRATTON CORPORATION All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation. B. C.

D. E. F. 10C900 to 10C999 847 842 383 523 525 287 524 8 9 11 10 426 13 5 200 7 870 718 REQUIRES SPECIAL TOOLS TO INSTALL. SEE REPAIR INSTRUCTION MANUAL. REF. NO. 1 2 PART NO. REF. NO.

200 287 306 307 337 383 426 523 524 525 635 668 718 842 847 PART NO. REF. NO. 869 870 871 PART NO. 337 1019 LABEL KIT 1058 OWNER'S MANUAL 50 54 1 51 2 3 635 668 842 525 306 524 307 869 871 DESCRIPTION DESCRIPTION DESCRIPTION 399164 Cylinder Assembly 399269 Kit-Bushing/Seal (Magneto Side) 3 K299819 SealOil (Magneto Side) 5 690386 HeadCylinder 7 K272694 GasketCylinder Head 8 495785 Breather Assembly 9 K272602 GasketBreather 10 94621 Screw (Breather Assembly) 11 691245 TubeBreather 13 691697 Screw (Cylinder Head) 50 298775 ManifoldIntake 51 K270345 GasketIntake 54 691111 Screw (Intake Manifold) 281024 BladeGovernor 691002 Screw (Dipstick Tube) 690400 ShieldCylinder 690345 Screw (Cylinder Shield) 802592 Sparkplug 89838 WrenchSparkplug 691107 Screw (Governor Blade) 497968 Dipstick K271485 SealDipstick Tube 691320 Tube-Dipstick 66538 BootSparkplug 692889 Spacer 230192 PinLocating 270920 ORing Seal 691440 Dipstick/Tube Assembly 211172 SeatValve (Intake) 211291 SeatValve (Exhaust) 231348 BushingValve Guide (Exhaust Valve) Note 63709 BushingValve Guide (Intake Valve) 497624 KitLabel 294260 Owner's Manual (Emission Engines) Note 272308 Owner's Manual (Non Emission Engines) 1019 1058 K Included in Engine Gasket SetRef. No. 358. Included in Valve Gasket SetRef. No. 1095.

09672 Assemblies include all parts shown in frames. 2 1Q1/2000 10C900 to 10C999 25 28 27 26 27 35 REF. NO. 25 PART NO. DESCRIPTION REF. NO. 26 PART NO. DESCRIPTION REF. NO. 27 28 PART NO.

DESCRIPTION 29 32 36 33 40 45 34 40 45 498668 Piston AssemblyStd (Standard) (Used After Code Date 96020500). Note 298904 Piston Assembly-Standard (Standard) (Used Before Code Date 96020600). 498669 Piston Assembly010 (.010 O.S.) (Used After Code Date 96020500).

@@@@@@@@@@@@@@@@@498681 Ring Set010 (.010 O.S.) (Used After Code Date 96020500).

298983 Ring Set010 (.010 O.S.) (Used Before Code Date 96020600). 498682 Ring Set020 (.020 O.S.) (Used After Code Date 96020500). 298984 Ring Set020 (.020 O.

S.) (Used Before Code Date 96020600). 498683 Ring Set030 (.030 O.S.

) (Used After Code Date 96020500). @No. 358. Included in Valve Gasket SetRef. No.

1095. 09673 Assemblies include all parts shown in frames. 3 1Q1/2000 10C900 to 10C999 16 24 146 741 REF. NO. 16 PART NO. DESCRIPTION REF. NO. 24 146 PART NO. DESCRIPTION REF. NO.

@@2029, 2032, 2035. 691471 Crankshaft Used on Type No(s). 2002, 2028, 2030, 2034, 2037, 2038. 691406 Crankshaft Used on Type No(s). 0102, 0128, 0130, 0131, 0134 692989 Crankshaft Used on Type No(s). @No. 358. Included in Valve Gasket SetRef. No. 1095.

09674 Assemblies include all parts shown in frames. @SEE REPAIR INSTRUCTION MANUAL. REF. NO. 4 12 PART NO.

DESCRIPTION REF. NO. 15 19 20 PART NO. 22 15 DESCRIPTION REF. NO.

22 PART NO. @No. 358. Included in Valve Gasket SetRef. No. 1095. 09675 Assemblies include all parts shown in frames. @NO. 90 PART NO. DESCRIPTION REF.

NO. 390 393 394 529 612 617 708 913 PART NO. DESCRIPTION REF. NO. @@@@@@694394 PrimerCarburetor (Used After Code Date 99103100). @No. 358. Included in Valve Gasket SetRef. No. 1095.

09676 Assemblies include all parts shown in frames. @NO. 188 201 209 PART NO. REF. NO.

211 222 222A PART NO. REF. NO. @0125. 262761 Spring Governor Used on Type No(s).

2036. 263117 Spring Governor Used on Type No(s). 0131, 2037. 690251 Spring Governor Used on Type No(s). 0132, 2002, 2030, 2038. 691297 Spring Governor Used on Type No(s). 2028, 2029, 2032, 2034, 2035. 236 236A 265 267 268 269 263109 SpringGoverned Idle 691446 BracketControl 691445 BracketControl Used on Type No(s). 0128, 0129, 0130, 0131, 0132, 0134, 2028, 2029, 2030, 2032, 2034, 2035, 2036, 2037. 263247 LinkLockout 262461 Link-Lockout 213146 ClampCasing 94882 Screw (Casing Clamp) 691072 CasingControl Wire Cut to Required Length) 26099 WireControl (Cut to Required Length) 933 942 1208 63426 Nut (Control Wire Casing) 290568 LeverControl 396847 SwitchStop 690586 ClipWire 691146 Screw (Brake) 690324 Screw (Band Brake Pivot) 261647 SpringBrake 692135 SpringBrake 394867 Brake 691487 Brake Used on Type No(s).

2002, 2028, 2029, 2038. 690428 PivotBand Brake 493248 BracketBrake 94902 Screw (Brake Bracket) K Included in Engine Gasket SetRef. No. 358. Included in Valve Gasket SetRef. No. 1095. 09677 Assemblies include all parts shown in frames. 7 1Q1/2000 10C900 to 10C999 334 333 356 356A 851 24 578 356B 356A REF. NO.

24 333 PART NO. DESCRIPTION REF. NO. 334 356 356A PART NO.

[You're reading an excerpt. Click here to read official BRIGGS & STRATTON 10C902 user guide](#)



<http://yourpdfguides.com/dref/3639981>

DESCRIPTION REF.

NO. 356B 578 851 PART NO. DESCRIPTION 222698 KeyFlywheel 496914 ArmatureMagneto 94731 Screw (Magneto Armature) 692390 WireStop 398808 WireStop 494250 WireStop 398153 Wire Assembly 493880 TerminalSparkplug K Included in Engine Gasket SetRef. No. 358. Included in Valve Gasket SetRef. No. 1095. 09678 Assemblies include all parts shown in frames. 8 1Q1/2000 10C900 to 10C999 181 180 957 190 190A 670 REF. NO. 180 181 PART NO. DESCRIPTION REF. NO. 670 PART NO.

DESCRIPTION REF. NO. 957 PART NO. DESCRIPTION 190 190A 494406 TankFuel (Metal) 493982 CapFuel Tank Used on Type No(s). 0125. 691697 Screw (Fuel Tank) 94786 Screw (Fuel Tank) 94047 SpacerFuel Tank (Used After Code Date 97071300). Note 94038 SpacerFuel Tank (Used Before Code Date 97071400). 497929 CapFuel Tank (Plastic) K Included in Engine Gasket SetRef. No. 358.

Included in Valve Gasket SetRef. No. 1095. 09679 Assemblies include all parts shown in frames. @@NO.

81 163 300 346 534 PART NO. 691179 K271139 394644 94876 DESCRIPTION REF. NO. 535 536 570 613 PART NO. DESCRIPTION REF. NO. @@No. 358. Included in Valve Gasket SetRef. No. 1095. 096710 Assemblies include all parts shown in frames. @@NO. 23 PART NO. DES Gasket Set-Ref.

No. 358. Included in Valve Gasket SetRef. No. 1095. 096713 Assemblies include all parts shown in frames. 13 1Q1/2000 10C900 to 10C999 358 ENGINE GASKET SET 3 51 12 7 163 9 20 883 524 1095 VALVE GASKET SET 883 7 9 REF. NO. 3 PART NO. DESCRIPTION REF.

NO. 12 PART NO. DESCRIPTION REF. NO. 20 PART NO.

DESCRIPTION K299819 SealOil (Magneto Side) 7 K272694 GasketCylinder Head 9 K272602 GasketBreather K270833 Gasket Crankcase015 Std (.015 Thick, Standard) Note K270895 Gasket Crankcase005 (.005 Thick) K270896 Gasket Crankcase009 (.009 Thick) K391483 SealOil (PTO Side) 51 K270345 GasketIntake 163 K271139 GasketAir Cleaner 358 298989 Gasket SetEngine 524 K271485 SealDipstick Tube 883 K272252 GasketExhaust 1095 498526 Gasket SetValve K Included in Engine Gasket SetRef. No.

358. Included in Valve Gasket SetRef. No. 1095. 096714 Assemblies include all parts shown in frames. 14 1Q1/2000 .



[You're reading an excerpt. Click here to read official BRIGGS & STRATTON 10C902 user guide](http://yourpdfguides.com/dref/3639981)
<http://yourpdfguides.com/dref/3639981>