



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for BRIGGS & STRATTON 10D900 TO 10D999. You'll find the answers to all your questions on the BRIGGS & STRATTON 10D900 TO 10D999 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual BRIGGS & STRATTON 10D900 TO 10D999**  
**User guide BRIGGS & STRATTON 10D900 TO 10D999**  
**Operating instructions BRIGGS & STRATTON 10D900 TO 10D999**  
**Instructions for use BRIGGS & STRATTON 10D900 TO 10D999**  
**Instruction manual BRIGGS & STRATTON 10D900 TO 10D999**



FORM MS-6379-07/10/2008  
REPLACES FORM MS-6379-06/2002/038  
FILE IN SECT. 2 OF SERVICE MANUAL  
**10D900**

## Illustrated Parts List Model Series

**10D900**

TYPE NUMBERS  
0100 through 5000.

### TABLE OF CONTENTS

Air Cleaner .....	5
Blower Housing/Shrouds .....	7
Brake .....	6
Camshaft .....	3
Carburetor .....	4
Controls .....	5
Crankcase Cover/Sump .....	3
Crankshaft .....	3
Cylinder .....	2
Cylinder Head .....	2
Exhaust System .....	6
Flywheel .....	7
Fuel Supply .....	4
Gasket Set - Engine .....	2
Gasket Set - Valve .....	2
Governor Spring .....	5
Ignition .....	5
Lubrication .....	2
Operator's Manual .....	2
Piston/Rings/Connecting Rod .....	3
Rewind Starter .....	7
Warning Label .....	2



PRINTED IN U.S.A.  
COPYRIGHT by BRIGGS & STRATTON CORPORATION  
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.



[You're reading an excerpt. Click here to read official BRIGGS & STRATTON 10D900 TO 10D999 user guide](http://yourpdfguides.com/dref/3639706)  
<http://yourpdfguides.com/dref/3639706>

**Manual abstract:**

2 OF SERVICE MANUAL 10D900 Illustrated Parts List Model Series 10D900 TYPE NUMBERS 0100 through 5000. TABLE OF CONTENTS Air Cleaner . . .

. . . . .

. . . . .

. . . . .

. . . . . 5 Blower Housing/Shrouds . . . . .

. . . . . 7 Brake . . . . .

. . . . .

. . . . .

. . . . . 6 Camshaft . . . . .

. . . . .

. . . . .

. . . . . 3 Carburetor . . . . .

. . . . .

. . . . . 4 Controls . . . . .

. . . . .

. . . . .

. . . . . 5 Crankcase Cover/Sump . . . . .

. . . . . 3 Crankshaft . . . . .

. . . . .

. . . . .

. . . . . 3 Cylinder . . . . .

. . . . .

. . . . .

. . . . . 2 Cylinder Head . . . . .

. . . . .

. . . . . 2 Exhaust System . . . . .

. . . . .

. . . . . 6 Flywheel . . . . .

. . . . .

. . . . .

. . . . . 7 Fuel Supply . . . . .

. . . . .

. . . . .

. . . . . 4 Gasket Set - Engine . . . . .

. . . . .

. . . . . 2 Gasket Set - Valve . . . . .

. . . . . 2 Governor Spring . . . . .

. . . . .

. . . . . 5 Ignition . . . . .

. . . . .

. . . . .

. . . . . 5 Lubrication . . . . .





[You're reading an excerpt. Click here to read official BRIGGS & STRATTON 10D900 TO 10D999 user guide](http://yourpdfguides.com/dref/3639706)  
<http://yourpdfguides.com/dref/3639706>

691867 Link-Lockout Used on Type No(s). 0118, 0119, 0132, 0139, 0140.

692179 Clamp-Casing Used on Type No(s). 0136, 0146, 0150, 0166, 0183, 0184. 690798 Clamp-Casing 691024 Clamp-Casing Used on Type No(s). 0116.  
691044 Screw (Casing Clamp) 691025 Casing-Control Wire (72" Long) (Cut To Required Length) 691026 Wire-Control (78" Long) (Cut To Required Length) 691027 Nut (Control Wire Casing) 691028 Lever-Control 691002 Screw (Dipstick Tube) 692307 Muffler (Super Lo Tone) 394569S Muffler (Round Lo Tone) 691484 Housing-Blower (Compliance Engines) ----- Note ----- 692536 Housing- Blower (Non Compliance Engines) 694236 Housing-Blower (Compliance Engines) Used on Type No(s).

0145, 0147, 0157, 0158, 0159, 0160, 0169, 0171, 0172, 0173, 0176, 0180, 0181, 0187, 0188, 0189, 0190, 0193, 0198, 0199, 0252, 0253. ----- Note -----  
694051 Housing- Blower (Non Compliance Engines) Used on Type No(s). 0113, 0114, 0162, 0175, 0177, 0183, 0184. 692198 Screw (Blower Housing) 690400 Shield-Cylinder (Used Before Code Date 04071400). 690345 Screw (Cylinder Shield) (Used Before Code Date 04071400).

690662 Nut (Flywheel) 793281 Armature-Magneto 793352 Armature-Magneto (Snap In Spark Plug Boot) Used on Type No(s). @@@@@692390 Wire-Stop 692191 Key-Drive Pulley Used on Type No(s). 0197. 222A 304A 334 335 337 236 305 306 307 265 265A 265B 267 268 356 357 332 269 270 K Engine Gasket Set-Reference 358 Valve Gasket Set-Reference 1095 Illustrations cover a range of en348 Guard-Rewind 497929S Cap-Fuel Tank (Black) ----- Note ----- 692050 Cap-Fuel Tank (Red) Used on Type No(s). 0151. 791129 Cap-Fuel Tank Used on Type No(s). 0133, 0137, 0144, 0167, 0182, 0186 0197, 5000. @@@0113, 0114, 0189, 0190, 0198, 0199. 694394 Primer-Carburetor Label-Emissions (Available From A Briggs & Stratton Authorized Dealer) 277038 Operator's Manual 498526 Gasket Set-Valve 691141 Screw (Drive Gear Cover) 499901 Pulley/Spring Assembly (Pulley) 499901 Pulley/Spring Assembly (Spring) 794467 Label-Warning 270962 Repair Manual 922 923 925 930 957 976 1036 883 913 921 1058 1095 1143 1210 1211 1319 1330 957A 921A 957B 969 K Engine Gasket Set-Reference 358 Valve Gasket Set-Reference 1095 Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

6379-12 Assemblies include all parts shown in frames. 12 07/10/2008 .



[You're reading an excerpt. Click here to read official BRIGGS & STRATTON 10D900 TO 10D999 user guide](http://yourpdfguides.com/dref/3639706)  
<http://yourpdfguides.com/dref/3639706>