



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for BRIGGS & STRATTON 10G900 TO 10G999. You'll find the answers to all your questions on the BRIGGS & STRATTON 10G900 TO 10G999 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual BRIGGS & STRATTON 10G900 TO 10G999
User guide BRIGGS & STRATTON 10G900 TO 10G999
Operating instructions BRIGGS & STRATTON 10G900 TO 10G999
Instructions for use BRIGGS & STRATTON 10G900 TO 10G999
Instruction manual BRIGGS & STRATTON 10G900 TO 10G999



FORM MS-5549-07/10/2008
REPLACES FORM MS-5549-06/22/2008
FILE IN SECT. 2 OF SERVICE MANUAL
10G900

Illustrated Parts List

Model Series

10G900

TYPE NUMBERS
0015 through 0825.

TABLE OF CONTENTS

Air Cleaner	5
Blower Housing/Shrouds	7
Brake	6
Camshaft	3
Carburetor	4
Controls	5
Crankcase Cover/Sump	3
Crankshaft	3
Cylinder	2
Cylinder Head	2
Exhaust System	6
Flywheel	7
Fuel Supply	4
Gasket Set - Engine	2
Gasket Set - Valve	2
Governor Spring	5
Ignition	5
Lubrication	2
Operator's Manual	2
Piston/Rings/Connecting Rod	3
Rewind Starter	7
Warning Label	2



PRINTED IN U.S.A.
COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.



[You're reading an excerpt. Click here to read official BRIGGS & STRATTON 10G900 TO 10G999 user guide](http://yourpdfguides.com/dref/3640344)

<http://yourpdfguides.com/dref/3640344>

Manual abstract:

@@.....
.....
.....
.... 5 Blower Housing/Shrouds.....

..... 7 Brake.....
.....
.....
.....
..... 6 Camshaft.....
.....
.....
.....
.. 3 Carburetor.....
.....
.....
..... 4 Controls...

.....
.....
.....
.... 5 Crankcase Cover/Sump.....

..... 3 Crankshaft...
.....
.....
.....
.. 3 Cylinder.....
.....
.....
..... 2 Cylinder Head .

.....
.....
.....
.. 2 Exhaust System.....

.....
..... 6 Flywheel.....
.....
.....
..... 7 Fuel Supply ..
.....
.....
.....
.. 4 Gasket Set - Engine.....
.....
... 2 Gasket Set - Valve ..
.....

..... 2 Governor Spring
.....
.....
..... 5 Ignition.....

.....
.....
.....
.... 5 Lubrication.....

.....
.....
..... 2 Operator's Manual .
.....

..... 2 Piston/Rings/Connecting Rod . . .
..... 3 Rewind Starter .

..... 7 Warning Label

..... 2 PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation. 10G900 1058 OPERATOR'S MANUAL 1330 REPAIR MANUAL 1319 WARNING LABEL 358 ENGINE GASKET SET 3 12 7 20 51 9 51A 163 524 842 883 524 11 1 7 9 529 668 745 523A REQUIRED when replacing parts with warning labels affixed. 847 842 525 287 524 523 1095 VALVE GASKET SET 2 3 883 306 50 718 307 870 869 871 383 7 50A 5 13 51A 9 54 8 54 51 337 635 10 362 Illustrations cover a range of engines. @@Assemblies include all parts shown in frames. @@@Assemblies include all parts shown in frames. 07/10/2008 5549-3 3 10G900 90 976 163 97 130 633 529 913 365 106 617 393 612 394 390 724 957A 180 957 190 670 190A Illustrations cover a range of engines. @@Assemblies include all parts shown in frames. 07/10/2008 5549-4 4 10G900 202 209 222B 621 222 222C 222D 621 188 333 222G 851 24 227 333B 334 362 615 404 851A 562 505 265 265A 267 265B 536 534 268 269 271 356 270 535 616 578 163 Illustrations cover a range of engines. @@Assemblies include all parts shown in frames. 07/10/2008 5549-5 5 10G900 300 676 832 81 677 836 613 832A 836A 300A R 832D 836A 836B 994 346 772 236 925 729 923 621 745A 745 668 922 Illustrations cover a range of engines. @@Assemblies include all parts shown in frames. 07/10/2008 5549-6 6 10G900 1036 EMISSIONS LABEL 921 969A 921A 969A 921C 969A 332 455 74 73 608 55 363 65 592 23 1211 1210 37B 1278 459 689 456 304 597 305 78 37A 58 60 Illustrations cover a range of engines. @@Assemblies include all parts shown in frames. 07/10/2008 5549-7 7 10G900 REF.

NO. 1 2 3 4 5 7 8 9 10 11 12 PART NO. DESCRIPTION REF. NO. PART NO.

DESCRIPTION REF. NO. 26 PART NO. DESCRIPTION 699650 Cylinder Assembly 399269 Kit-Bushing/Seal (Magneto Side) K299819S Seal-Oil (Magneto Side) 698691 Sump-Engine 790169 Head-Cylinder K698717 Gasket-Cylinder Head 791781 Breather Assembly K695890 Gasket-Breather 691666 Screw (Breather Assembly) 691245 Tube-Breather K692218 Gasket-Crankcase (Standard) (.015" Thick) ----- Note ----- K270895 Gasket- Crankcase (.005" Thick) K270896 Gasket- Crankcase (.009" Thick) 691640 Screw (Cylinder Head) 691680 Plug-Oil Drain 691472 Crankshaft Used on Type No(s). @@----- Note ----- 691471 Crankshaft Used on Type No(s). @@692989 Crankshaft Used on Type No(s). 0018, 0171, 0189, 0367.

791739 Crankshaft Used on Type No(s). 0173. @@Used on Type No(s). 0125. 690843 Flywheel (Used Before Code Date 08013000). Used on Type No(s). 0125. @@----- Note ----- 699657 Piston Assembly (Standard) (Used After Code Date 03080300 and Before Code Date 04111500). 790908 Piston Assembly (Standard) (Used Before Code Date 03080400). @@790909 Ring Set (Standard) (Used After Code Date 04111400).

@@498680 Ring Set (Standard) (Used Before Code Date 03080400). @@@@ 5549-8 Assemblies include all parts shown in frames. 8 07/10/2008 10G900 REF. NO. @@DESCRIPTION REF.

NO. 209 PART NO. DESCRIPTION REF. NO. 222D PART NO.

DESCRIPTION K699649 Gasket-Intake (Used After Code Date 03080300). 270345S Gasket-Intake (Used Before Code Date 03080400). @@@----- Note ----- 698726 Spring- Governor (Pink) Used on Type No(s). 0110, 0111, 0114, 0115, 0116, 0118, 0119, 0120, 0121, 0122, 0124, 0125, 0126, 0127, 0128, 0129, 0130, 0132, 0134, 0135, 0136, 0176, 0248, 0249, 0464, 0465, 0483, 0570, 0823, 0825. 790001 Spring- Governor (Yellow) Used on Type No(s). 0175. 698725 Bracket-Control Used on Type No(s). 0124, 0128, 0136, 0171, 0175, 0189, 0217, 0271, 0352, 0464, 0570, 0823, 0825. 699326 Bracket-Control Used on Type No(s). 0015, 0016, 0018.

697410 Bracket-Control Used on Type No(s). 0100, 0110, 0111, 0114, 0115, 0116, 0118, 0119, 0121, 0122, 0123, 0126, 0127, 0129, 0132, 0134, 0135, 0173, 0176, 0248, 0249, 0251, 0254, 0257, 0260, 0465, 0483. 699577 Bracket-Control Used on Type No(s). 0120, 0125, 0130, 0131, 0192, 0196, 0272, 0367.

794780 Bracket-Control Used on Type No(s). 0138. 697402 Lever-Governor Control 691867 Link-Lockout Used on Type No(s). 0015, 0016, 0018. 692179 Clamp-Casing Used on Type No(s). 0120, 0130, 0132, 0173.

690798 Clamp-Casing Used on Type No(s). 0015, 0016, 0018, 0100, 0110, 0111, 0114, 0115, 0116, 0118, 0119, 0123, 0125, 0126, 0127, 0129, 0135, 0176, 0192, 0196. 691024 Clamp-Casing Used on Type No(s). 0121, 0131, 0272. 691044 Screw (Casing Clamp) 691025 Casing-Control Wire (72" Long) (Cut To Required Length) 691026 Wire-Control (72" Long) (Cut To Required Length) 691027 Nut (Control Wire Casing) 691028 Lever-Control 691002 Screw (Dipstick Tube) 222G 227 236 265 265A 265B 267 268 222 269 222B 222C 270 271 287 K Engine Gasket Set-Reference 358 Valve Gasket Set-Reference 1095 Illustrations cover a range of engines.

5549-9 Assemblies include all parts shown in frames. 9 07/10/2008 10G900 REF. NO. 300 PART NO. DESCRIPTION REF.

NO. 337 PART NO. DESCRIPTION REF. NO. 505 PART NO. DESCRIPTION 692307 Muffler (Super Lo Tone) Used on Type No(s). @@394569S Muffler (Round Lo Tone) Used on Type No(s). @@@@0120, 0125, 0130, 0192, 0272, 0367. @@690345 Screw (Cylinder Shield) (Used Before Code Date 04071400). 690662 Nut (Flywheel) 793281 Armature-Magneto 793352 Armature-Magneto (Snap In Spark Plug Boot) 691061 Screw (Magneto Armature) 697451 Plug-Spark Used on Type No(s).

0015, 0016, 0018, 0110, 0111, 0114, 0115, 0116, 0118, 0119, 0120, 0121, 0122, 0123, 0124, 0125, 0126, 0127, 0128, 0130, 0131, 0132, 0138, 0173, 0175, 0192, 0196, 0248, 0249, 0272, 0367, 0464, 0465, 0570. ----- Note ----- 802592S Plug-Spark Used on Type No(s). 0100, 0129, 0134, 0135, 0136, 0171, 0176, 0189, 0217, 0251, 0254, 0257, 0260, 0271, 0352, 0483, 0823, 0825. 690661 Screw (Spark Arrester) Used on Type No(s). 0825. @@@@690272 Washer (Governor Crank) 691236 Cup-Flywheel 692299 Plate-Pawl Friction 281505S Pawl-Ratchet 691251 Nut (Governor Control Lever) 692040 Dipstick ----- Note ----- 692040 Dipstick (Used After Code Date 04121900).



[You're reading an excerpt. Click here to read official BRIGGS & STRATTON 10G900 TO 10G999 user guide](http://yourpdfguides.com/dref/3640344)
<http://yourpdfguides.com/dref/3640344>

Used on Type No(s). 0173. 691913 Dipstick (Used Before Code Date 04122000). Used on Type No(s). 0173. @@0015, 0016, 0018. 690800 Nut (Rewind Starter) 691696 Screw (Pawl Friction Plate) 499706 Starter-Rewind 496046S Tube-Pick Up 691413 Screw (Muffler) 690340 Retainer-Governor Shaft 697405 Crank-Governor 270344S Seal-O Ring (Intake Manifold) 692310 Switch-Stop 691321 Seal-Choke/Throttle Shaft (Throttle) 66538S Boot-Spark Plug 692889 Spacer 691633 Spacer-Fuel Tank 523 523A 300A 524 525 529 534 535 536 562 304 346 356 358 362 363 365 383 390 393 394 578 592 597 608 612 613 615 616 617 621 633 305 306 307 332 333 333B 334 404 455 456 459 635 668 670 K Engine Gasket Set-Reference 358 Valve Ga.



[You're reading an excerpt. Click here to read official BRIGGS & STRATTON 10G900 TO 10G999 user guide](http://yourpdfguides.com/dref/3640344)

<http://yourpdfguides.com/dref/3640344>