



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for BRIGGS & STRATTON 10H900 TO 10H999. You'll find the answers to all your questions on the BRIGGS & STRATTON 10H900 TO 10H999 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual BRIGGS & STRATTON 10H900 TO 10H999
User guide BRIGGS & STRATTON 10H900 TO 10H999
Operating instructions BRIGGS & STRATTON 10H900 TO 10H999
Instructions for use BRIGGS & STRATTON 10H900 TO 10H999
Instruction manual BRIGGS & STRATTON 10H900 TO 10H999



FORM MS-5716-07/11/2008
REPLACES FORM MS-5716-05/21/2008
FILE IN SECT. 2 OF SERVICE MANUAL
10H900

Illustrated Parts List Model Series 10H900

TYPE NUMBERS
0101 through 0641.

TABLE OF CONTENTS

Air Cleaner	6
Blower Housing/Shrouds	7
Brake	5
Camshaft	3
Carburetor	4
Controls	5
Crankcase Cover/Sump	3
Crankshaft	3
Cylinder	2
Cylinder Head	2
Exhaust System	6
Flywheel	7
Fuel Supply	4
Gasket Set - Engine	2
Gasket Set - Valve	2
Governor Spring	5
Ignition	5
Lubrication	2
Operator's Manual	2
Piston/Rings/Connecting Rod	3
Rewind Starter	7
Warning Label	2



PRINTED IN U.S.A.
COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.



[You're reading an excerpt. Click here to read official BRIGGS & STRATTON 10H900 TO 10H999 user guide](http://yourpdfguides.com/dref/3640341)
<http://yourpdfguides.com/dref/3640341>

Manual abstract:

2 OF SERVICE MANUAL 10H900 Illustrated Parts List Model Series 10H900 TYPE NUMBERS 0101 through 0641. TABLE OF CONTENTS Air Cleaner . . .

.
.
.
. 6 Blower Housing/Shrouds
. 7 Brake
.
.
. 5 Camshaft
.
.
. 3 Carburetor
.
. 4 Controls
.
.
. 5 Crankcase Cover/Sump
. 3 Crankshaft
.
.
. 3 Cylinder
.
.
. 2 Cylinder Head
.
. 2 Exhaust System
.
. 6 Flywheel
.
.
. 7 Fuel Supply
.
.
. 4 Gasket Set - Engine
.
. 2 Gasket Set - Valve
. 2 Governor Spring
.
. 5 Ignition
.
.
. 5 Lubrication

.....
.....
.....
. 2 Operator's Manual

..... 2 Piston/Rings/Connecting Rod .

.....
. 3 Rewind Starter

.....
..... 7 Warning Label . . .

.....
..... 2 PRINTED IN U.

S.A. COPYRIGHT by BRIGGS & STRATTON CORPORATION All rights reserved. @@@@ Parts shown without corresponding text may not be used on your specific engine. 5716-4 Assemblies include all parts shown in frames. 4 07/11/2008 10H900 201 209 211 222 222A 621 188 265 265A 335 267 268 269 271 635 333 270 334 851 24 356 772 925 356C 729 923 745 745A 668 922 621 Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine. 5716-5 Assemblies include all parts shown in frames. 5 07/11/2008 10H900 536 534 535 163 300A R 832A 836 676 677 883 300 832 81 613 836 Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5716-6 Assemblies include all parts shown in frames. @@@@7 07/11/2008 10H900 REF. NO. 1 2 3 4 5 7 8 9 10 11 12 13 15 16 PART NO. DESCRIPTION REF.

NO. PART NO. DESCRIPTION REF. NO. 37A 37B 40 43 45 46 50 51 54 55 58 PART NO.

@@0111, 0113, 0114, 0115, 0120, 0121, 0216, 0327. ----- Note ----- 691472 Crankshaft Used on Type No(s). 0101, 0116, 0246, 0285, 0333, 0437, 0455, 0522, 0632, 0641. 691471 Crankshaft Used on Type No(s). 0117. @@0111, 0115. 795695 Flywheel (Used After Code Date 08012900). Used on Type No(s). 0113, 0114, 0121. 690843 Flywheel (Used Before Code Date 08013000).

Used on Type No(s). 0113, 0114, 0121. @----- Note ----- 699657 Piston Assembly (Standard) (Used Before Code Date 04111500). 792532 Piston Assembly (.020" Oversize) (Used After Code Date 04111400). 790909 Ring Set (Standard) (Used After Code Date 04111400). ----- Note ----- 699658 Ring Set (Standard) (Used Before Code Date 04111500). 795134 Ring Set (.020" Oversize) (Used After Code Date 04111400). 691588 Lock-Piston Pin 699659 Pin-Piston (Standard) (Used After Code Date 03093000).

@@@@@@0111, 0113, 0114, 0115. @@@@8 07/11/2008 10H900 REF. NO. 209 PART NO. DESCRIPTION REF.

NO. 270 271 287 300 PART NO. DESCRIPTION REF. NO. PART NO.

DESCRIPTION 691297 Spring-Governor (White) Used on Type No(s). 0101, 0116, 0216, 0246, 0285, 0327. @@0111, 0113, 0114. 690251 Spring-Governor (Yellow) Used on Type No(s). 0117, 0120, 0333, 0437, 0455, 0522, 0632, 0641. 692211 Spring-Governor (No Color) Used on Type No(s). 0115. 690250 Spring-Governor (Light Green) Used on Type No(s). 0121. @@0111, 0113, 0114, 0115, 0116, 0117.

691446 Bracket-Control Used on Type No(s). @@690798 Clamp-Casing Used on Type No(s). 0101, 0116, 0120. 691024 Clamp-Casing Used on Type No(s). 0117. @@0114, 0116, 0117, 0121. 394569S Muffler (Round Lo Tone) Used on Type No(s). @@694051 Housing-Blower (Non Compliance Engines) Used on Type No(s). 0111, 0113, 0114, 0115, 0116, 0117, 0121. 694236 Housing-Blower (Compliance Engines) Used on Type No(s). 0101, 0216, 0246, 0285, 0327, 0333, 0437, 0455, 0522, 0632, 0641. 691484 Housing-Blower Used on Type No(s). 0120. @@@----- Note ----- 697451 Plug-Spark Used on Type No(s). 0116, 0117.

356 692390 Wire-Stop 356C 793399 Wire-Stop Used on Type No(s). 0121. 358 794209 Gasket Set-Engine 363 19069 Puller-Flywheel 365 790029 Screw (Carburetor) 383 89838S Wrench-Spark Plug 390 691839 Spring-Choke Diaphragm 393 691837 Screen-Carburetor 394 795083 Diaphragm-Carburetor (Used After Code Date 07080800). ----- Note ----- 495770 Diaphragm-Carburetor (Used Before Code Date 07080900). 426 691107 Screw (Governor Blade) 455 691236 Cup-Flywheel Used on Type No(s).

@@@@@@523A 691913 Dipstick Used on Type No(s). @@@@9 07/11/2008 10H900 REF. NO. 524 525 529 534 535 536 592 597 608 PART NO. K691876 691320 692189 691417 698369 698472 690800 691696 499706 DESCRIPTION Seal-Dipstick Tube Tube-Dipstick Grommet Screw (Air Cleaner) Filter-Air Cleaner Foam Cleaner-Air Nut (Rewind Starter) Screw (Pawl Friction Plate) Starter-Rewind Used on Type No(s). @----- Note ----- 690101 Rope-Starter Used on Type No(s). 0111, 0113, 0114, 0115. Tube-Pick Up Screw (Muffler) Seal-O Ring (Intake Manifold) Switch-Stop Seal-Choke/Throttle Shaft (Throttle) Boot-Spark Plug Spacer Spacer-Fuel Tank Deflector-Muffler Used on Type No(s). 0115. Screw (Muffler Deflector) Used on Type No(s).

0115. Spring-Friction Pin-Locating (Cylinder) Pin-Locating (Crankshaft) Retainer-Seal Clip-Wire Gear-Timing Screw (Brake) (7/8" Long) REF. NO. 745A 772 832 832A 836 842 847 851 868 869 870 871 PART NO. DESCRIPTION REF. NO. 925 PART NO. @@0114. 699670 Guard-Muffler Used on Type No(s). 0111, 0113, 0115.

@@0114, 0115. 793973 Cover-Blower Housing Used on Type No(s). 0111, 0113, 0117. 699796 Cover-Blower Housing Used on Type No(s). @@692135 Spring-Brake 691487 Brake Used on Type No(s).

@@691349 Cover-Linkage Used on Type No(s). @@497929S Cap-Fuel Tank Used on Type No(s). 0101, 0114, 0116, 0117, 0120, 0216, 0246, 0285, 0327, 0333, 0437, 0455, 0522, 0632, 0641. 791129 Cap-Fuel Tank Used on Type No(s). 0111, 0113, 0114, 0115, 0121.

792878 Cap-Fuel Tank 694046 Screw (Blower Housing Cover) (2 1/3" Long) Used on Type No(s). 0111, 0114, 0115, 0116.



You're reading an excerpt. Click here to read official BRIGGS & STRATTON 10H900 TO 10H999 user guide

<http://yourpdfguides.com/dref/3640341>