



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for BRIGGS & STRATTON 10S900 TO 10S999. You'll find the answers to all your questions on the BRIGGS & STRATTON 10S900 TO 10S999 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

- User manual BRIGGS & STRATTON 10S900 TO 10S999**
- User guide BRIGGS & STRATTON 10S900 TO 10S999**
- Operating instructions BRIGGS & STRATTON 10S900 TO 10S999**
- Instructions for use BRIGGS & STRATTON 10S900 TO 10S999**
- Instruction manual BRIGGS & STRATTON 10S900 TO 10S999**



FORM MS-3662-07/10/2008
REPLACES FORM MS-3662-05/2002/038
FILE IN SECT. 2 OF SERVICE MANUAL
10S900

Illustrated Parts List
Model Series
10S900

TYPE NUMBERS
0554, 0833.

TABLE OF CONTENTS

Air Cleaner	5
Blower Housing/Shrouds	6
Brake	5
Camshaft	3
Carburetor	4
Controls	4
Crankcase Cover/Sump	3
Crankshaft	3
Cylinder	2
Cylinder Head	2
Exhaust System	5
Flywheel	6
Fuel Supply	4
Gasket Set - Engine	2
Gasket Set - Valve	2
Governor Spring	4
Ignition	5
Lubrication	2
Operator's Manual	2
Piston/Rings/Connecting Rod	3
Rewind Starter	6
Warning Label	2

PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.



[You're reading an excerpt. Click here to read official BRIGGS & STRATTON 10S900 TO 10S999 user guide](http://yourpdfguides.com/dref/3640230)
<http://yourpdfguides.com/dref/3640230>

Manual abstract:

TABLE OF CONTENTS Air Cleaner

.

.

. 5 Blower Housing/Shrouds

. 6 Brake

.

.

. 5 Camshaft

.

.

. 3 Carburetor

.

. 4 Controls

.

.

. 4 Crankcase Cover/Sump

. 3 Crankshaft

.

.

. 3 Cylinder

.

.

2 Cylinder Head

.

.

. 2 Exhaust System

.

.

. 5 Flywheel

.

.

. 6 Fuel Supply

.

.

. 4 Gasket Set - Engine

.

. 2 Gasket Set - Valve

.

. 2 Governor Spring

.

.

. 4 Ignition

.

.

. 5 Lubrication

.....
.....
.....
2 Operator's Manual

..... 2 Piston/Rings/Connecting Rod ..

.....
3 Rewind Starter

..... 6 Warning Label

.....
.....
..... 2 PRINTED IN U.S.

A. COPYRIGHT by BRIGGS & STRATTON CORPORATION All rights reserved. @@Parts shown without corresponding text may not be used on your specific engine. 3662-2 Assemblies include all parts shown in frames. 2 07/10/2008 10S900 25 26 27 45 35 34 36 40 33 40 29 32 27 45 28 16 24 46 741 718A 43 4 12 20 15 22 Illustrations cover a range of engines. @@@@4 07/10/2008 10S900 333 334 333B 536 851A 362 534 635 535 24 851 356 163 300 832 81 613 836 836A 923 621 745 729 745A 922 Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine. 3662-5 Assemblies include all parts shown in frames. @@@@6 07/10/2008 10S900 REF. NO.

1 2 3 4 5 7 8 9 10 11 12 PART NO. DESCRIPTION REF. NO. 27 28 29 32 33 34 35 36 37A 37B 40 43 45 46 50 51 54 55 58 PART NO. @@0554, 0833. @@0554, 0833. @@NO. 190 190A 202 209 PART NO. @@0554, 0833. 698725 Bracket-Control Used on Type No(s). 0554, 0833. @@0554, 0833. 697411 Housing-Blower (Compliance Engines) Used on Type No(s). 0554, 0833. @@Parts shown without corresponding text may not be used on your specific engine. 3662-7 Assemblies include all parts shown in frames. 7 07/10/2008 10S900 REF. NO. 333 333B 334 337 PART NO. DESCRIPTION REF.

NO. 535 536 562 592 597 608 612 613 PART NO. DESCRIPTION REF. NO. 832 836 836A 842 847 851 851A 869 870 871 PART NO. DESCRIPTION 793281 Armature-Magneto Used on Type No(s). 0554. 793352 Armature-Magneto Used on Type No(s). 0833. 691061 Screw (Magneto Armature) 802592S Plug-Spark Used on Type No(s).

0833. ----- Note ----- 697451 Plug-Spark Used on Type No(s). 0554. @@0833. @@@@690272 Washer (Governor Crank) 691236 Cup-Flywheel 692299 Plate-Pawl Friction 281505S Pawl-Ratchet 691251 Nut (Governor Control Lever) 692040 Dipstick K691876 Seal-Dipstick Tube 691320 Tube-Dipstick 692189 Grommet 691417 Screw (Air Cleaner) 698369 Filter-Air Cleaner Foam 698472 Cleaner-Air 92613 Bolt (Governor Control Lever) 690800 Nut (Rewind Starter) 691696 Screw (Pawl Friction Plate) 499706 Starter-Rewind Used on Type No(s).

0554, 0833. 496046S Tube-Pick Up 691413 Screw (Muffler) Used on Type No(s). 0554, 0833. @@0554. 691633 Spacer-Fuel Tank 691855 Spring-Friction 690959 Pin-Locating (Cylinder) 499047 Pin-Locating (Crankshaft) 697478 Retainer-Seal 690586 Clip-Wire 691805 Gear-Timing 691146 Screw (Brake) (7/8" Long) 690859 Screw (Brake) (1/2" Long) 790743 Guard-Muffler 691125 Screw (Muffler Guard) (5/8" Long) 790745 Screw (Muffler Guard) (1/2" Long) K691870 Seal-O Ring (Dipstick Tube) 691440 Dipstick/Tube Assembly 493880S Terminal-Spark Plug 692424 Terminal-Spark Plug 699641 Seat-Valve (Intake) 699642 Seat-Valve (Exhaust) 699643 Bushing-Valve Guide (Exhaust Valve) ----- Note ----- 63709 Bushing-Valve Guide (Intake Valve) 494409 Seat-Check Valve 698709 Cover-Blower Housing 692135 Spring-Brake 691487 Brake 497929S Cap-Fuel Tank 694046 Screw (Blower Housing Cover) (2 1/3" Long) 694394 Primer-Carburetor Label-Emissions (Available From A Briggs & Stratton Authorized Dealer) 277038 Operator's Manual 498526 Gasket Set-Valve 499901 Pulley/Spring Assembly (Pulley) 499901 Pulley/Spring Assembly (Spring) 794467 Label-Warning 270962 Repair Manual 356 358 362 363 365 383 390 393 394 615 616 617 621 633 635 670 689 718 718A 724 729 741 745 745A 913 921 922 923 957 969 976 1036 404 455 456 459 505 523 524 525 529 534 1058 1095 1210 1211 1319 1330 K Engine Gasket Set-Reference 358 Valve Gasket Set-Reference 1095 Illustrations cover a range of engines. @@8 07/10/2008 .



[You're reading an excerpt. Click here to read official BRIGGS & STRATTON 10S900 TO 10S999 user guide](http://yourpdfguides.com/dref/3640230)
<http://yourpdfguides.com/dref/3640230>