



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for BRIGGS & STRATTON 10T500 TO 10T599. You'll find the answers to all your questions on the BRIGGS & STRATTON 10T500 TO 10T599 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual BRIGGS & STRATTON 10T500 TO 10T599  
User guide BRIGGS & STRATTON 10T500 TO 10T599  
Operating instructions BRIGGS & STRATTON 10T500 TO 10T599  
Instructions for use BRIGGS & STRATTON 10T500 TO 10T599  
Instruction manual BRIGGS & STRATTON 10T500 TO 10T599



FORM MS-3718-07/11/2008  
REPLACES FORM MS-3718-05/21/2008  
FILE IN SECT. 2 OF SERVICE MANUAL

10T500

## Illustrated Parts List

Model Series

10T500

TYPE NUMBERS  
0100 through 3840.

### TABLE OF CONTENTS

Air Cleaner .....	6
Blower Housing/Shrouds .....	7
Brake .....	5
Camshaft .....	3
Carburetor .....	4
Controls .....	5
Crankcase Cover/Sump .....	3
Crankshaft .....	3
Cylinder .....	2
Cylinder Head .....	2
Exhaust System .....	6
Flywheel .....	7
Fuel Supply .....	4
Gasket Set - Engine .....	2
Gasket Set - Valve .....	2
Governor Spring .....	5
Ignition .....	5
Lubrication .....	2
Operator's Manual .....	2
Piston/Rings/Connecting Rod .....	3
Rewind Starter .....	7
Warning Label .....	2



PRINTED IN U.S.A.  
COPYRIGHT by BRIGGS & STRATTON CORPORATION  
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.



[You're reading an excerpt. Click here to read official BRIGGS & STRATTON 10T500 TO 10T599 user guide](http://yourpdfguides.com/dref/3639987)

<http://yourpdfguides.com/dref/3639987>

**Manual abstract:**

2 OF SERVICE MANUAL 10T500 Illustrated Parts List Model Series 10T500 TYPE NUMBERS 0100 through 3840. TABLE OF CONTENTS Air Cleaner . . .

. . . . .

. . . . .

. . . . .

. . . . . 6 Blower Housing/Shrouds . . . . .

. . . . . 7 Brake . . . . .

. . . . .

. . . . .

. . . . . 5 Camshaft . . . . .

. . . . .

. . . . .

. . . . . 3 Carburetor . . . . .

. . . . .

. . . . . 4 Controls . . . . .

. . . . .

. . . . .

. . . . . 5 Crankcase Cover/Sump . . . . .

. . . . . 3 Crankshaft . . . . .

. . . . .

. . . . .

. . . . . 3 Cylinder . . . . .

. . . . .

. . . . .

. . . . . 2 Cylinder Head . . . . .

. . . . .

. . . . . 2 Exhaust System . . . . .

. . . . .

. . . . . 6 Flywheel . . . . .

. . . . .

. . . . .

. . . . . 7 Fuel Supply . . . . .

. . . . .

. . . . .

. . . . . 4 Gasket Set - Engine . . . . .

. . . . .

. . . . . 2 Gasket Set - Valve . . . . .

. . . . . 2 Governor Spring . . . . .

. . . . .

. . . . . 5 Ignition . . . . .

. . . . .

. . . . .

. . . . . 5 Lubrication . . . . .

.....  
.....  
.....  
. 2 Operator's Manual .....  
..... 2 Piston/Rings/Connecting Rod .  
.....  
. 3 Rewind Starter . . . .  
.....  
..... 7 Warning Label . . .  
.....  
.....  
..... 2 PRINTED IN U.

S.A. COPYRIGHT by BRIGGS & STRATTON CORPORATION All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation. 10T500 1058 OPERATOR'S MANUAL 1330 REPAIR MANUAL 1319 WARNING LABEL 358 ENGINE GASKET SET 3 12 7 20 51 9 868 426 200 1095 VALVE GASKET SET 1 7 9 2 3 668 11 524 529 163 REQUIRED when replacing parts with warning labels affixed. 745 523A 847 842 523 525 306 524 287 524 307 718 50 870 869 871 7 54 383 5 51 13 8 337 9 635 362 10 Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine. 3718-2 Assemblies include all parts shown in frames. 2 07/11/2008 10T500 25 26 27 45 35 34 40 868 36 33 40 45 28 27 29 32 16 24 357 46 741 718A 43 4 12 22 15 Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

3718-3 Assemblies include all parts shown in frames. 3 07/11/2008 10T500 90 976 163 97 130 633 529 913 365 106 617 393 612 394 390 724 957B 957A 190 670 180 957 190A Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine. 3718-4 Assemblies include all parts shown in frames. 4 07/11/2008 10T500 201 209 211 222E 222 222F 621 188 265 265A 265B 267 268 269 271 270 635 334 851 333 24 335 333B 851A 362 772 578 236 925 729 356 745 745A 356C 668 923 621 922 Illustrations cover a range of engines.

Parts shown without corresponding text may not be used on your specific engine. 3718-5 Assemblies include all parts shown in frames. @@@@ @@@@ @7 07/11/2008 10T500 REF. NO. 1 2 3 4 5 7 8 9 10 11 12 PART NO.

DESCRIPTION REF. NO. 16 PART NO. DESCRIPTION REF. NO. PART NO. DESCRIPTION 699653 Cylinder Assembly 399269 Kit-Bushing/Seal (Magneto Side) K299819S Seal-Oil (Magneto Side) 698691 Sump-Engine 790169 Head-Cylinder K698717 Gasket-Cylinder Head 791781 Breather Assembly K695890 Gasket-Breather 691666 Screw (Breather Assembly) 691245 Tube-Breather K692218 Gasket-Crankcase (.015" Thick) (Standard) ----- Note ----- K270895 Gasket- Crankcase (.005" Thick) K270896 Gasket- Crankcase (.009" Thick) 691640 Screw (Cylinder Head) 691680 Plug-Oil Drain 692989 Crankshaft Used on Type No(s).

0121, 0130, 0197, 0204, 0206, 0501, 0550. ----- Note ----- 691472 Crankshaft Used on Type No(s). 0115, 0116, 0118, 0132, 0133, 0137, 0140, 0155, 0170, 0172, 0181, 0190, 0193, 0198, 0199, 0200, 0202, 0203, 0250, 0251, 0252, 0256, 0457, 0495, 0500, 0609, 0764, 0833, 0838, 0840, 0869, 0931, 0998, 1000, 1022, 1023, 1041, 1053, 1056, 1058, 1096, 2008, 2010, 2011, 2027, 2028, 2034, 2035, 3764, 3838, 3840. 691471 Crankshaft Used on Type No(s). 0100, 0111, 0112, 0113, 0114, 0117, 0120, 0136, 0139, 0141, 0142, 0143, 0153, 0157, 0158, 0161, 0162, 0166, 0168, 0169, 0171, 0173, 0174, 0175, 0176, 0177, 0179, 0183, 0184, 0186, 0187, 0188, 0189, 0195, 0205, 0207, 0210, 0246, 0253, 0254, 0255, 1111, 2110. 20 K391483S Seal-Oil (PTO Side) 22 692551 Screw (Crankcase Cover/Sump) 23 795549 Flywheel ----- Note ----- 795695 Flywheel (Used After Code Date 08012900). Used on Type No(s). 0113, 0116, 0120, 0121, 0130, 0161, 0162, 0166, 0174, 0175, 0186, 0195, 0197, 0204, 0206, 0254, 0255, 0550. 690843 Flywheel (Used Before Code Date 08013000). Used on Type No(s).

0113, 0116, 0120, 0121, 0130, 0161, 0162, 0166, 0174, 0175, 0186, 0195, 0197, 0204, 0206, 0254, 0255, 0550. 795695 Flywheel Used on Type No(s). 0133, 0143. 24 222698S Key-Flywheel 25 790908 Piston Assembly (Standard) ----- Note ----- 792532 Piston Assembly (.020" Oversize) 26 790909 Ring Set (Standard) ----- Note ----- 795134 Ring Set (.020" Oversize) 13 15 K Engine Gasket Set-Reference 358 Valve Gasket Set-Reference 1095 Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine. 3718-8 Assemblies include all parts shown in frames. 8 07/11/2008 10T500 REF. NO.

27 28 29 32 33 34 35 36 37 37A 40 43 45 46 50 51 54 55 PART NO. DESCRIPTION REF. NO. 58 PART NO. DESCRIPTION REF. NO. 60 65 73 78 81 90 97 106 130 163 180 188 190 190A 200 201 PART NO. DESCRIPTION 691588 Lock-Piston Pin 699659 Pin-Piston (Standard) 699654 Rod-Connecting 691664 Screw (Connecting Rod) 296676 Valve-Exhaust 296677 Valve-Intake 690520 Spring-Valve (Intake) 690520 Spring-Valve (Exhaust) 691209 Guard-Flywheel (Muffler Side) 690482 Guard-Flywheel (Carburetor Side) 692194 Retainer-Valve 698690 Slinger-Governor/Oil 691762 Tappet-Valve 691998 Camshaft 699644 Manifold-Intake K699649 Gasket-Intake 691111 Screw (Intake Manifold) 692144 Housing-Rewind Starter 697316 Rope-Starter (88 5/8" Long) Used on Type No(s). @@----- Note ----- 691921 Rope-Starter (70" Long) Used on Type No(s). @@691915 Grip-Starter Rope 690837 Screw (Rewind Starter) 699850 Screen-Rotating 692198 Screw (Flywheel Guard) 691179 Lock-Muffler Screw 794147 Carburetor 691931 Shaft-Throttle 691901 Seat-Inlet 691190 Valve-Throttle K271139S Gasket-Air Cleaner 494406 Tank-Fuel 692198 Screw (Control Bracket) 691640 Screw (Fuel Tank) (1 3/4" Long) 691108 Screw (Fuel Tank) (9/16" Long) 691912 Blade-Governor 690347 Link-Air Vane K Engine Gasket Set-Reference 358 Valve Gasket Set-Reference 1095 Illustrations cover a range of engines.

Parts shown without corresponding text may not be used on your specific engine. 3718-9 Assemblies include all parts shown in frames. 9 07/11/2008 10T500 REF. NO. 209 PART NO. DESCRIPTION REF. NO. PART NO. DESCRIPTION 690250 Spring- Governor Used on Type No(s). 0121E1, 0133, 0204. 690250 Spring- Governor (Used Before Code Date 07092400). Used on Type No(s). 0121B1. 690250 Spring- Governor (Used After Code Date 07111500).



[You're reading an excerpt. Click here to read official BRIGGS & STRATTON 10T500 TO 10T599 user guide](#)



