



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for BRIGGS & STRATTON 10T800 TO 10T899. You'll find the answers to all your questions on the BRIGGS & STRATTON 10T800 TO 10T899 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual BRIGGS & STRATTON 10T800 TO 10T899
User guide BRIGGS & STRATTON 10T800 TO 10T899
Operating instructions BRIGGS & STRATTON 10T800 TO 10T899
Instructions for use BRIGGS & STRATTON 10T800 TO 10T899
Instruction manual BRIGGS & STRATTON 10T800 TO 10T899



FORM MS-3747-07/21/2008
REPLACES FORM MS-3747-05/28/2008
FILE IN SECT. 2 OF SERVICE MANUAL

10T800

Illustrated Parts List

Model Series

10T800

TYPE NUMBERS
0004 through 3716.

TABLE OF CONTENTS

Air Cleaner	5
Blower Housing/Shrouds	6
Brake	5
Camshaft	3
Carburetor	4
Controls	4
Crankcase Cover/Sump	3
Crankshaft	3
Cylinder	2
Cylinder Head	2
Exhaust System	5
Flywheel	6
Fuel Supply	4
Gasket Set - Engine	3
Gasket Set - Valve	3
Governor Spring	4
Ignition	5
Lubrication	2
Operator's Manual	2
Piston/Rings/Connecting Rod	3
Rewind Starter	6
Warning Label	2



PRINTED IN U.S.A.
COPYRIGHT BY BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.



[You're reading an excerpt. Click here to read official BRIGGS & STRATTON 10T800 TO 10T899 user guide](http://yourpdfguides.com/dref/3640274)

<http://yourpdfguides.com/dref/3640274>

Manual abstract:

2 OF SERVICE MANUAL 10T800 Illustrated Parts List Model Series 10T800 TYPE NUMBERS 0004 through 3716. TABLE OF CONTENTS Air Cleaner . . .

.

.

.

. 5 Blower Housing/Shrouds

. 6 Brake

.

.

. 5 Camshaft

.

.

. 3 Carburetor

.

.

. 4 Controls

.

. 4 Crankcase Cover/Sump

.

. 3 Crankshaft

.

.

. 3 Cylinder

.

.

. 2 Cylinder Head

.

. 2 Exhaust System

.

.

. 5 Flywheel

.

.

. 6 Fuel Supply

.

.

. 4 Gasket Set - Engine

.

.

. 3 Gasket Set - Valve

.

.

. 3 Governor Spring

.

.

. 4 Ignition

.

.

.

5 Lubrication

.

.

. 2 Operator's Manual

.

. . . 2 Piston/Rings/Connecting Rod . . .

.

. 3 Rewind Starter

.

. . . 6 Warning Label . . .

.

.

. 2 PRINTED IN U.S.A. COPYRIGHT by BRIGGS & STRATTON CORPORATION All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

10T800 1058 OPERATOR'S MANUAL 1330 REPAIR MANUAL 1319 WARNING LABEL 847 523A 842 523 842 287 524 11 525 529 REQUIRED when replacing parts with warning labels affixed. 1 2 3 50 306 51 50A 718 51 383 5 227 505 13 562 337 615 404 635 362 616 10 8 9 7 870 869 871 54 307 54 Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine. 3747-2 Assemblies include all parts shown in frames. 2 07/21/2008 10T800 358 ENGINE GASKET SET 25 3 9 51 20 51C 163 524 12 842 868 7 45 35 34 40 868 36 33 40 27 29 32 45 26 27 28 1095 VALVE GASKET SET 7 9 16 16A 24 46 741 741A 718A 43 4 12 22 20 15 Illustrations cover a range of engines.

@@@ Parts shown without corresponding text may not be used on your specific engine. 3747-4 Assemblies include all parts shown in frames. 4 07/21/2008 10T800 333 334 24 333B 851A 362 851 635 536 534 356 535 356A 578 163 300 832 836 832C 81 613 836A 836B 772 300A R 832A 836 676C 236 925 923 677 729 745 745A 922 621 Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine. 3747-5 Assemblies include all parts shown in frames.

@@@ 07/21/2008 10T800 REF. NO. 1 2 3 4 PART NO. DESCRIPTION REF. NO. 15 16 PART NO. DESCRIPTION REF. NO. 16A PART NO. DESCRIPTION 699650 Cylinder Assembly 399269 Kit-Bushing/Seal (Magneto Side) K299819S Seal-Oil (Magneto Side) 698691 Sump-Engine ----- Note ----- 699081 Sump-Engine Used on Type No(s).

0005, 790169 Head-Cylinder K698717 Gasket-Cylinder Head 791781 Breather Assembly K695890 Gasket-Breather 691666 Screw (Breather Assembly) 691245 Tube-Breather K692218 Gasket-Crankcase (Standard) (.015" Thick) ----- Note ----- K270895 Gasket- Crankcase (.005" Thick) K270896 Gasket-Crankcase (.009" Thick) 691640 Screw (Cylinder Head) 691680 Plug-Oil Drain 796217 Crankshaft (Used After Code Date 08071300). Used on Type No(s). @----- Note ----- 796218 Crankshaft (Used After Code Date 08071300). Used on Type No(s). 0004, 0005, 0018, 0462, 0497. 796216 Crankshaft (Used After Code Date 08071300).

Used on Type No(s). @ 796219 Crankshaft (Used After Code Date 08071300). Used on Type No(s). 0149, 0177. 691472 Crankshaft (Used Before Code Date 08071400).

Used on Type No(s). @@@@ Used on Type No(s). 0004, 0005, 0018, 0462, 0497. 691471 Crankshaft (Used Before Code Date 08071400). Used on Type No(s).

@ 791739 Crankshaft (Used Before Code Date 08071400). Used on Type No(s). 0149, 0177. @ Parts shown without corresponding text may not be used on your specific engine. 3747-7 Assemblies include all parts shown in frames. 7 07/21/2008 10T800 REF. NO. 23 PART NO. DESCRIPTION REF. NO.

50 50A 51 51C 54 55 58 PART NO. 699644 792388 K699649 K792389 691111 692144 697316 DESCRIPTION Manifold-Intake Manifold-Intake Gasket-Intake Gasket-Intake Screw (Intake Manifold) Housing-Rewind Starter Rope- Starter (88 5/8" Long) Used on Type No(s). 0004, 0005, 0015, 0016, 0018, 0111, 0112, 0114, 0116, 0118, 0119, 0120, 0121, 0122, 0123, 0124, 0125, 0126, 0127, 0128, 0129, 0130, 0131, 0132, 0134, 0135, 0136, 0138, 0139, 0140, 0143, 0145, 0147, 0149, 0173, 0175, 0176, 0177, 0192, 0196, 0197, 0248, 0249, 0272, 0462, 0483, 0497, 0547, 0708, 0716, 0823, 0878, 1025, 1059, 1086, 1095, 1098, 1130, 1132, 1162, 3708, 3716. ----- Note ----- 691921 Rope- Starter (70" Long) Used on Type No(s). 0110, 0115, 0148. Grip-Starter Rope Screw (Rewind Starter) Screen-Rotating Screw (Flywheel Guard) REF. NO. 81 90 PART NO. DESCRIPTION 795549 Flywheel ----- Note ----- 795695 Flywheel (Used After Code Date 08012900). Used on Type No(s).

0004, 0005, 0110, 0115, 0125, 0148, 0149, 0177. 690843 Flywheel (Used Before Code Date 08013000). Used on Type No(s). 0004, 0005, 0110, 0115, 0125, 0148. 795695 Flywheel Used on Type No(s).

0149, 0177. 222698S Key-Flywheel 790908 Piston Assembly (Standard) ----- Note ----- 792532 Piston Assembly (.020" Oversize) 790909 Ring Set (Standard) ----- Note ----- 795134 Ring Set (.020" Oversize) 691588 Lock-Piston Pin 699659 Pin-Piston 699654 Rod-Connecting 691664 Screw (Connecting Rod) 296676 Valve-Exhaust 296677 Valve-Intake 690520 Spring-Valve (Intake) 690520 Spring-Valve (Exhaust) 793748 Guard-Flywheel (Muffler Side) 697403 Guard-Flywheel (Carburetor Side) 692194 Retainer-Valve 697799 Slinger-Governor/Oil 691762 Tappet-Valve 691998 Camshaft 691179 Lock-Muffler Screw 794061 Carburetor (Used After Code Date 07012100). Used on Type No(s).

0015, 0016, 0018, 0462, 0497E1, 0708, 0716, 3708, 3716. ----- Note ----- 790206 Carburetor (Used Before Code Date 07012200). Used on Type No(s). 0015, 0016, 0018, 0462, 0497E1, 0708, 0716, 3708, 3716. 794061 Carburetor Used on Type No(s). @ 790206 Carburetor Used on Type No(s). @@@@ 07/21/2008 10T800 REF. NO. 97 106 130 PART NO. DESCRIPTION REF.

NO. 190A PART NO. DESCRIPTION REF. NO. 222B PART NO. @ Used on Type No(s). @@@ Used on Type No(s). @ 794060 Valve-Throttle Used on Type No(s). 0115, 0147, 0149, 0177, 1086, 1095, 1098, 1130, 1132. 691190 Valve-Throttle Used on Type No(s).

@@@@@ 790220 Spring- Governor (Black) Used on Type No(s). 0004, 0005, 0110, 0115, 0148. 790001 Spring- Governor (Yellow) Used on Type No(s). 0112, 0175. 698725 Bracket-Control Used on Type No(s).

@ 792240 Bracket-Control Used on Type No(s). 0115. 699326 Bracket-Control Used on Type No(s). 0004, 0005, 0015, 0016, 0018, 0110, 0148, 0462,

0497. 697410 Bracket-Control Used on Type No(s).

0123, 0129, 0132, 0145, 0197. ----- Note ----- 795390 Bracket- Control Used on Type No(s). @@794780 Bracket-Control Used on Type No(s).



[You're reading an excerpt. Click here to read official BRIGGS & STRATTON 10T800 TO 10T899 user guide](http://yourpdfguides.com/dref/3640274)

<http://yourpdfguides.com/dref/3640274>

0120, 0125, 0130, 0131, 0138, 0139, 0143, 0192, 0196, 0272. 795550 Bracket-Control Used on Type No(s). 0111, 0112, 0124, 0128, 0136, 0140, 0175, 1162, 697402 Lever-Governor Control 691867 Link-Lockout Used on Type No(s). 0015, 0016, 0018. 692179 Clamp-Casing Used on Type No(s). 0120, 0130, 0132, 0173, 0197.

690798 Clamp-Casing Used on Type No(s). @@691024 Clamp-Casing Used on Type No(s). 0121, 0131, 0272. @@@@9 07/21/2008 10T800 REF. NO. 268 269 270 271 287 300 PART NO. DESCRIPTION REF. NO. 304 PART NO. DESCRIPTION REF.

NO. 333 333B PART NO. @@@@0110, 0148. 690661 Screw (Muffler Deflector) Used on Type No(s). 0110, 0148.

691855 Spring-Friction 690959 Pin-Locating (Cylinder) 499047 Pin-Locating (Crankshaft) (Used Before Code Date 08071400). 697478 Retainer-Seal 690586 Clip-Wire 796210 Gear-Timing (Used After Code Date 08071300). 691805 Gear-Timing (Used Before Code Date 08071400). 691146 Screw (Brake) (7/8" Long) 690859 Screw (Brake) (1/2" Long) 691111 Screw (Linkage Cover) Used on Type No(s). 0111, 0112, 0114.

699299 Guard-Muffler (Super Lo Tone) Used on Type No(s). 0131, 0132, 0138, 0139, 0143, 0149, 0173, 0177, 0197, 0272. 699670 Guard-Muffler (Round Lo Tone) Used on Type No(s). 0004, 0005, 0110, 0148, 0462, 0497, 1162. 790743 Guard-Muffler Used on Type No(s). 0111, 0112, 0114, 0116, 0118, 0119, 0120, 0121, 0122, 0123, 0124, 0125, 0126, 0127, 0128, 0129, 0134, 0135, 0136, 0140, 0145, 0175, 0176, 0192, 0248, 0249, 0483, 0823. 724 729 741 741A 745 745A 772 404 455 456 459 505 523 523A 524 525 529 534 535 536 562 578 592 597 832 612 613 615 616 617 621 633 635 670 676C 677 832A 832C 689 718 K Engine Gasket Set-Reference 358 Valve Gasket Set-Reference 1095 Illustrations cover a range of engines. @@11 07/21/2008 10T800 REF. NO. 836 PART NO.

DESCRIPTION REF. NO. 871 PART NO. DESCRIPTION REF. NO. 957B 969 PART NO. @@0004, 0005, 0110, 0131, 0132, 0138, 0139, 0143, 0148, 0149, 0173, 0177, 0197, 0272, 0462, 0497, 1162. 790745 Screw (Muffler Guard) (1/2" Long) Used on Type No(s). 0111, 0112, 0114, 0116, 0118, 0119, 0120, 0121, 0122, 0123, 0124, 0125, 0126, 0127, 0128, 0129, 0134, 0135, 0136, 0140, 0145, 0175, 0176, 0192, 0196, 0197, 0248, 0249, 0483, 0823. 691125 Screw (Muffler Guard) (5/8" Long) Used on Type No(s).

0111, 0112, 0114, 0116, 0118, 0119, 0120, 0121, 0122, 0123, 0124, 0125, 0126, 0127, 0128, 0129, 0134, 0135, 0136, 0140, 0145, 0175, 0176, 0192, 0196, 0197, 0248, 0249, 0483, 0823. K691870 Seal-O Ring (Dipstick Tube) 691440 Dipstick/Tube Assembly 493880S Terminal-Spark Plug 692424 Terminal-Spark Plug 697338 Seal-Valve 699641 Seat-Valve (Intake) 699642 Seat-Valve (Exhaust) 699643 Bushing-Valve Guide (Exhaust Valve) ----- Note ----- 63709 Bushing-Valve Guide (Intake Valve) 494409 Seat-Check Valve 793973 Cover-Blower Housing Used on Type No(s). 0004, 0005, 0015, 0016, 0018, 0110, 0116, 0118, 0119, 0120, 0121, 0122, 0123, 0124, 0125,.



[You're reading an excerpt. Click here to read official BRIGGS & STRATTON 10T800 TO 10T899 user guide](http://yourpdfguides.com/dref/3640274)
<http://yourpdfguides.com/dref/3640274>