



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for BRIGGS & STRATTON 121802. You'll find the answers to all your questions on the BRIGGS & STRATTON 121802 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual BRIGGS & STRATTON 121802**  
**User guide BRIGGS & STRATTON 121802**  
**Operating instructions BRIGGS & STRATTON 121802**  
**Instructions for use BRIGGS & STRATTON 121802**  
**Instruction manual BRIGGS & STRATTON 121802**

FORM MS2430-9/94  
REPLACES FORM MS2430-8/93  
FILE IN SECT. 7 OF SERVICE MANUAL  
**121800 to 121899**

## **Illustrated Parts List** **Model Series** **121800 to 121899**

TYPE NUMBERS  
0106, 0206, 0208,  
0214 through 0218,  
0220 through 0222,  
0224, 0230, 0285, 0404,  
0406 through 0419,  
0422 through 0448,  
0464 through 0471,  
0509, 3106, 3212, 3214,  
3225, 3226, 3406,  
3411 through 3431.

### **TO FIND THE CORRECT NUMBER OF THE PART YOU NEED: FOLLOW THE INSTRUCTIONS BELOW**

- A. Refer to Engine Model, Type and Code Number that is stamped on the blower housing of engine. Engine type numbers such as 0123 01 are listed only as 0123 in most instances. The two digits (01 or 02, etc.) to the right of the space may be required for more accurate parts identification in some instances. Select the Illustrated Parts List covering the correct Model Series and Type Number.
- B. Refer to the illustrations and compare the original part with illustration. The number next to the illustration is the Reference Number. Assemblies include all parts shown in frames. All parts shown in assembly frames having individual reference numbers can be purchased separately.
- C. After the Reference Number has been identified, refer to the Numerical text, where Reference and Primary Part Number are listed. THE PRIMARY PART IS USED ON ALL TYPE NUMBERS EXCEPT THOSE TYPE NUMBERS UNDER "NOTE."
- D. If a "Note" appears below the Primary Part Number, it means that this part differs from the Primary Part for certain types. If your Type number is listed under "Note," order the part referred to at the "Note."
- E. If your Engine Type Number does not appear after any part number listed under "Note," use the Primary Part Number.
- F. For Engine Type Numbers not covered by this book, check other Parts Lists having the same engine model or contact your source of supply.

PRINTED IN U.S.A.



COPYRIGHT ©



[You're reading an excerpt. Click here to read official BRIGGS & STRATTON 121802 user guide](http://yourpdfguides.com/dref/3639915)  
<http://yourpdfguides.com/dref/3639915>

**Manual abstract:**

2 OF SERVICE MANUAL 121800 to 121899 Illustrated Parts List Model Series 121800 to 121899 TYPE NUMBERS 0106, 0206, 0208, 0214 through 0218, 0220 through 0222, 0224, 0230, 0265, 0404, 0406 through 0419, 0422 through 0448, 0464 through 0471, 0509, 3106, 3212, 3214, 3225, 3228, 3406, 3411 through 3431. TO FIND THE CORRECT NUMBER OF THE PART YOU NEED: FOLLOW THE INSTRUCTIONS BELOW A. Refer to Engine Model, Type and Code Number that is stamped on the blower housing of engine. Engine type numbers such as 0123 01 are listed only as 0123 in most instances. The two digits (01 or 02, etc.) to the right of the space may be required for more accurate parts identification in some instances. Select the Illustrated Parts List covering the correct Model Series and Type Number. Refer to the Illustrations and compare the original part with Illustration. The number next to the illustration is the Reference Number. Assemblies include all parts shown in frames.

All parts shown in assembly frames having individual reference numbers can be purchased separately. After the Reference Number has been identified, refer to the Numerical text, where Reference and Primary Part Number are listed. THE PRIMARY PART IS USED ON ALL TYPE NUMBERS EXCEPT THOSE TYPE NUMBERS UNDER "NOTE." B. C.

D. If a "Note" appears below the Primary Part Number, it means that this part differs from the Primary Part for certain types. @@@@NO. 1 2 3 5 7 8 9  
9A 10 11 13 52 54 284 307 337 PART NO. @SEE REPAIR INSTRUCTION MANUAL.

REF. NO. 572 625 635 842 847 PART NO. 224328 492717 66538 K280966 495263 DESCRIPTION BaffleCylinder ManifoldIntake BootSpark Plug SealO-Ring Tube Assy.Oil Fill (Used After Code Date 92072600). Note 493459 Tube Assy. Oil Fill (Used Before Code Date 92072700). SeatValve (Intake) Seat-Valve (Exhaust) GuideExhaust Valve Note 63709 GuideIntake Valve Owner's Manual 5 13 DESCRIPTION 870 1058 OWNER'S MANUAL REF. NO. PART NO.

DESCRIPTION Note 492167 PlugSpark (17/8" High, 48 mm) WrenchSpark Plug CapOil Fill (Used After Code Date 92072600). Note 493950 CapOil Fill (Used Before Code Date 92072700). SealFiller Tube TubeOil Filler (Used After Code Date 92072600). Note 493952 TubeOil Filler (Used Before Code Date 92072700). Cylinder Assembly Bushing SealOil HeadCylinder GasketCylinder Head Breather Assembly GasketBreather GasketBreather ScrewBreather Mtg. TubeBreather ScrewCylinder Hd. GasketIntake Elbow ScrewHex. Head ScrewHex. Head ScrewHex. Head PlugSpark (Resistor Type) (17/8" High, 48 mm)  
383 523 89838 495264 524 525 K280393 495265 869 870 871 213512 213513 262001 1058 272262 K Included in Gasket SetSee Ref.

358. D Included in Carburetor KitPart No. 493762. z Included in Carburetor Gasket SetPart No. 490937.

24302 Assemblies include all parts shown in frames. 2 94 121800 to 121899 562 24 29 27 32 741 27 35 28 26 25 34 40 35 33 REF. NO. 16 PART NO.

DESCRIPTION REF.

NO. PART NO. DESCRIPTION 493946 Crankshaft Used on Type No(s). 0214, 0221, 0410, 0414, 0424, 0430, 0431, 0433, 0436, 0464, 3212, 3214, 3414, 3415, 3419, 3420, 3421, 3422, 3427, 3428, 3429. KeyFlywheel Piston Assy. (Standard) 493385 Piston Assy. (.010" O.S.) 493386 Piston Assy.

(.020" O.S.) 493387 Piston Assy. (.030" O.S.) Ring Set (Standard) 493388 Ring Set (.010" O.S.

) 493389 Ring Set (.020" O.S.) 493390 Ring Set (.030" O.

S.) LockPiston Pin REF. NO. 28 PART NO. DESCRIPTION 16 227 592 615 230 45 40 377 616 493282 Crankshaft Note For Timing Gear Key Order Part No.

94388. 493362 Crankshaft Used on Type No(s). 0215, 0218, 0220, 0222, 0224, 0230, 0265, 0411, 0415, 0418, 0419, 0423, 0425, 0434, 0435, 0440, 0441, 0442, 0447, 0467, 0470, 0471, 3225. 493363 Crankshaft Used on Type No(s). 0216, 0217, 0408, 0409, 0412, 0416, 0422, 0426, 0428, 0429, 0439, 0444, 0446, 0448, 3411, 3418, 3423, 3424, 3425. 493566 Crankshaft Used on Type No(s). 0432, 3412, 3416, 29 32 33 34 35 40 45 227 230 377 24 25 222698 493262 26 493261 562 592 615 616 741 298909 PinPiston (Standard) 298908 PinPiston (.005" O.S.

) 490566 RodConnecting 490743 RodConn. (.020" Undersize) 94699 ScrewConnecting Rod 262651 ValveExhaust 262652 ValveIntake 262224 SpringValve 93312 RetainerValve 262204 TappetValve 492349 Lever Assembly Governor 67072 WasherGov. @@@@358. D Included in Carburetor KitPart No. 493762. z Included in Carburetor Gasket SetPart No. @@@@NO. 12 15 15A PART NO. 47 15 12 20 22 15A REF.

NO. 46A PART NO. 87 18 REF. NO. @@@@3426, 3431.

@@0425. SealOil ScrewHex. @@@@Head One Used in Hole Nearest Breather. @@0425. @@@@358.

D Included in Carburetor KitPart No. 493762. z Included in Carburetor Gasket SetPart No. @@@@Hd. @@@@SwitchStop Spacer (Includes 2) 621 REF. NO. 98A 188A 201 209 PART NO. 493280 94644 262579 262666 DESCRIPTION ScrewSpeed Adj. ScrewHex. Hd.

@@Used on Type No(s). 0444. 262656 SpringGov. Used on Type No(s). 0433, 0439. 262664 SpringGov. Used on Type No(s). 0222, 0407, 0418, 0425. 262665 SpringGov. Used on Type No(s).

0408, 0409, 0428, 0432, 3411, 3412, 3416, 3418, 3423, 3424, 3425. 262667 SpringGov. Used on Type No(s). 3413. REF.

NO. PART NO. DESCRIPTION REF. NO. 270 271 447 575 268 269 262678 SpringGov.

Used on Type No(s). 3212, 3414, 3415, 3426. @@@@358. D Included in Carburetor KitPart No. 493762. z Included in Carburetor Gasket SetPart No. @@@@NO. PART NO. REF. NO.

127 130 131 133 134 D 223470 493267 398187 D398188 PART NO. REF. NO. PART NO. 116 975 DESCRIPTION DESCRIPTION PlugWelch (Sold in Kit Only) ValveThrottle ShaftThrottle FloatCarburetor ValveNeedle (Includes Seat) GasketFloat Bowl (Sold in Kit Only) ShaftChoke SealFuel Intake Tube WasherShaft (Sold in Kit Only) ScrewFuel Bowl (Standard) OR 494870 ScrewFuel Bowl (For High Altitude) DESCRIPTION 95 94098 98 398185 104 D231371 108 223471 116 Dz 118 124 125 ScrewRound Head ScrewIdle Adjustment PinFloat Hinge ValveChoke GasketSealing (Sold in Kit Only) D493765 Valve KitNeedle 94525 ScrewCarburetor Mounting 494216 Carburetor Note 493627 Carburetor (For Primer) (Used Before Code Date 93080200). Used on Type No(s). 0208, 0404, 0464, 0509. 137 Dz 141 494218 617 Dz270344 634 Dz 955 493637 975 Note 496063 ScrewFuel Bowl (Standard) OR 494870 ScrewFuel Bowl (For High Altitude) (Used Before Code Date 93080200).



**[You're reading an excerpt. Click here to read official BRIGGS & STRATTON 121802 user guide](http://yourpdfguides.com/dref/3639915)**  
<http://yourpdfguides.com/dref/3639915>

Used on Type No(s). 0208, 0404, 0464, 0509.

493640 BowlFloat K Included in Gasket SetSee Ref. 358. D Included in Carburetor KitPart No. 493762. z Included in Carburetor Gasket SetPart No. 490937. 24306 Assemblies include all parts shown in frames. 6 94 121800 to 121899 131 134 634 104 133 124 137 98 95 617 116 955A REF. NO. PART NO. REF. NO. 127 130 131 133 134 D 223470 493267 398187 D398188 PART NO. REF. NO. PART NO. 125A 130 116 975 118 127 DESCRIPTION DESCRIPTION PlugWelch (Sold in Kit Only) ValveThrottle ShaftThrottle FloatCarburetor ValveNeedle (Includes Seat) GasketFloat Bowl (Sold in Kit Only) DESCRIPTION 95 94098 98 398185 104 D231371 116 Dz 118 124 125 ScrewRound Head ScrewIdle Adjustment PinFloat Hinge GasketSealing (Sold in Kit Only) D493765 Valve KitNeedle 94525 ScrewCarburetor Mtg. 496114 Carburetor (For Primer) (Used After Code Date 93080100). 137 Dz 617 Dz270344 SealFuel Intake Tube 634 Dz WasherShaft (Sold in Kit Only) 955A 493637 ScrewFuel Bowl (Standard) Note 494870 ScrewFuel Bowl (For High Altitude) 975 493640 BowlFloat K Included in Gasket SetSee Ref. 358.

D Included in Carburetor KitPart No. 493762. z Included in Carburetor Gasket SetPart No. 490937. 24307 Assemblies include all parts shown in frames. 7 94 121800 to 121899 969 968 606 971A 971 967 267 265 267 265B 969A 968A 971 621 922 258 163 387 529 966 966A 923 935 967 529A 971B REF. NO. 163 163A 258 265 265B 267 387 423 529 529A 606 621 PART NO. K272653 K272296 94512 213146 221535 94204 496115 93758 281299 280943 224815 396847 DESCRIPTION GasketAir Cleaner GasketAir Cleaner ScrewHex. Head ClampCasing ClampCasing ScrewClamp Mtg. PrimerCarburetor ScrewHex. Head Grommet Grommet StrapBracket SwitchStop REF. NO. 922 923 925 935 966 PART NO. 262640 493442 281145 398758 496116 DESCRIPTION SpringBrake Brake Assembly Cov 334 346 346A PART NO. 223664 94512 490547 94510 802574 93381 94602 93705 DESCRIPTION LockMuffler Screw ScrewHex. Head MufflerExhaust StudAlternator Mtg. Armature Magneto ScrewSem. ScrewHex. Hd. ScrewHex. Hd. REF. NO. 356 PART NO. DESCRIPTION REF. NO. 789 PART NO. DESCRIPTION 474 613 676 398808 WireStop Note 398708 WireStop Used on Type No(s). 3426, 3427, 3429.

492841 Alternator 94231 ScrewMuffler Mtg. 397931 DeflectorMuffler 789A 832 851 883 493379 HarnessWiring Used on Engines without Band Brake. 493380 HarnessWiring Used on Engines with Band Brake. 494224 GuardMuffler 221798 TerminalCable K272253 GasketMuffler K Included in Gasket SetSee Ref. 358. D Included in Carburetor KitPart No. 493762. z Included in Carburetor Gasket SetPart No. 490937. 243012 Assemblies include all parts shown in frames. 12 94 121800 to 121899 163A 7 163 9A 9 12 3 842 20 883 670A 52 524 358 GASKET SET 118 104 137 116 634 977 CARBURETOR GASKET SET REF. NO. PART NO. REF. NO.

@@NO. @@@@358. D Included in Carburetor KitPart No. 493762. z Included in Carburetor Gasket SetPart No. @@13 94 121800 to 121899 938 937 544 510 309 782 784 74 548 785 513 783 803 801 310 802 22A REF. NO. 22A 74 309 310 510 513 PART NO. 94268 93490 494233 94051 494147 394815 DESCRIPTION ScrewHex. Head ScrewHex. Head MotorStarter BoltThru DriveStarter ClutchDrive REF. NO. 544 548 782 783 784 785 PART NO. 492921 492919 281127 261606 224262 272201 DESCRIPTION ArmatureStarter Washer Set GearStarter GearStarter Cover-Gear GasketCover REF. NO.

801 802 803 937 938 PART NO. 492335 492922 492920 281125 93941 DESCRIPTION DriveCap CapEnd HousingStarter SplineStarter RetainerLock K Included in Gasket SetSee Ref. 358. D Included in Carburetor KitPart No. 493762. z Included in Carburetor Gasket SetPart No. 490937. 243014 Assemblies include all parts shown in frames. 14 94 .



[You're reading an excerpt. Click here to read official BRIGGS & STRATTON 121802 user guide](http://yourpdfguides.com/dref/3639915)  
<http://yourpdfguides.com/dref/3639915>