



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for BRIGGS & STRATTON 123802. You'll find the answers to all your questions on the BRIGGS & STRATTON 123802 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual BRIGGS & STRATTON 123802
User guide BRIGGS & STRATTON 123802
Operating instructions BRIGGS & STRATTON 123802
Instructions for use BRIGGS & STRATTON 123802
Instruction manual BRIGGS & STRATTON 123802

FORM MS-2427-894
REPLACES FORM MS-2427-893
FILE IN SECTION 3 OF SERVICE MANUAL
123800 to 123899

Illustrated Parts List **Model Series** **123800 to 123899**

TYPE NUMBERS
0108,
0208 through 0230,
0284 through 0289,
0408 through 0452,
0484 through 0488,
0509 through 0569,
3108,
3214 through 3220,
3408 through 3428,
4400 through 4403.

TO FIND THE CORRECT NUMBER OF THE PART YOU NEED: FOLLOW THE INSTRUCTIONS BELOW

- A. Refer to Engine Model, Type and Code Number that is stamped on the blower housing of engine. Engine type numbers such as 0123 01 are listed only as 0123 in most instances. The two digits (01 or 02, etc.) to the right of the space may be required for more accurate parts identification in some instances. Select the Illustrated Parts List covering the correct Model Series and Type Number.
- B. Refer to the illustrations and compare the original part with illustration. The number next to the illustration is the Reference Number. Assemblies include all parts shown in frames. All parts shown in assembly frames having individual reference numbers can be purchased separately.
- C. After the Reference Number has been identified, refer to the Numerical text, where Reference and Primary Part Number are listed. THE PRIMARY PART IS USED ON ALL TYPE NUMBERS EXCEPT THOSE TYPE NUMBERS UNDER "NOTE."
- D. If a "Note" appears below the Primary Part Number, it means that this part differs from the Primary Part for certain types. If your Type number is listed under "Note," order the part referred to at the "Note."
- E. If your Engine Type Number does not appear after any part number listed under "Note," use the Primary Part Number.
- F. For Engine Type Numbers not covered by this book, check other Parts Lists having the same engine model or contact your source of supply.

PRINTED IN U.S.A.



COPYRIGHT ©



[You're reading an excerpt. Click here to read official BRIGGS & STRATTON 123802 user guide](http://yourpdfguides.com/dref/3640143)
<http://yourpdfguides.com/dref/3640143>

Manual abstract:

2 OF SERVICE MANUAL 123800 to 123899 Illustrated Parts List Model Series 123800 to 123899 TYPE NUMBERS 0106, 0206 through 0230, 0264 through 0269, 0406 through 0452, 0464 through 0486, 0509 through 0569, 3106, 3214 through 3220, 3406 through 3428, 4400 through 4403. TO FIND THE CORRECT NUMBER OF THE PART YOU NEED: FOLLOW THE INSTRUCTIONS BELOW A. Refer to Engine Model, Type and Code Number that is stamped on the blower housing of engine. Engine type numbers such as 0123 01 are listed only as 0123 in most instances. The two digits (01 or 02, etc.) to the right of the space may be required for more accurate parts identification in some instances. Select the Illustrated Parts List covering the correct Model Series and Type Number. Refer to the Illustrations and compare the original part with Illustration. The number next to the illustration is the Reference Number.

Assemblies include all parts shown in frames.

All parts shown in assembly frames having individual reference numbers can be purchased separately. After the Reference Number has been identified, refer to the Numerical text, where Reference and Primary Part Number are listed. THE PRIMARY PART IS USED ON ALL TYPE NUMBERS EXCEPT THOSE TYPE NUMBERS UNDER "NOTE." B. C.

D. @@@@NO. 1 2 3 5 7 8 9 9A 10 11 13 52 54 284 306 307 337 PART NO. 493260 293708 K299819 213861 K272200 494489 K272481 K272238 94650 231685 94547 K272199 94526 94511 224324 94515 802592 525 871 842 307 847 5 13 DESCRIPTION REF. NO. 870 10 REQUIRES SPECIAL TOOLS TO INSTALL. SEE REPAIR INSTRUCTION MANUAL. REF. NO. 625 635 842 847 PART NO. 492717 66538 K280966 495263 DESCRIPTION ManifoldIntake BootSpark Plug SealCap Tube AssemblyOil (Used After Code Date 92072600). Note 493459 Tube AssemblyOil (Used Before Code Date 92072700). SeatValve (Intake) SeatValve (Exhaust) GuideExhaust Valve Note 63709 GuideIntake Valve Owner's Manual 1058 OWNER'S MANUAL PART NO. DESCRIPTION Note 492167 PlugSpark (17/8" High, 48 mm) WrenchSpark Plug CapOil Filler (Used After Code Date 92072600). Note 493950 CapOil Filler (Used Before Code Date 92072700).

SealFiller Tube TubeOil Filler (Used After Code Date 92072600). Note 493952 TubeOil Filler (Used Before Code Date 92072700). BaffleCylinder Cylinder Assembly Bushing SealOil HeadCylinder GasketCylinder Hd. Breather Assembly GasketBreather GasketBreather ScrewBreather Mtg. TubeBreather Screw-Cylinder Hd. GasketIntake Elbow ScrewHex. Head ScrewHex. Head ShieldCylinder ScrewHex. Head PlugSpark (Resistor Type) (17/8" High, 48 mm) 383 523 89838 495264 524 525 K280393 495265 869 870 871 213512 213513 262001 1058 272262 572 224328 K Included in Gasket SetSee Ref. 358.

D Included in Carburetor KitPart No. 493762. z Included in Carburetor Gasket SetPart No. 490937. 24372 Assemblies include all parts shown in frames. 2 94 123800 to 123899 562 24 29 27 26 27 35 28 25 34 40 35 33 REF. NO. 16 PART NO. DESCRIPTION REF. NO.

PART NO. DESCRIPTION 493946 Crankshaft Used on Type No(s). 0264, 0410, 0414, 0417, 0424, 0430, 0434, 0446, 0452, 0464, 0467, 0478, 0479, 0561, 3214, 3215, 3412, 3413, 3414, 3420, 3427, 3428, 4403. KeyFlywheel Piston Assy. (Standard) 493385 Piston Assy. (.010" O.S.) 493386 Piston Assy. (.

020" O.S.) 493387 Piston Assy. (.030" O.S.) Ring Set (Standard) 493388 Ring Set (.010" O.S.) 493389 Ring Set (.

020" O.S.) 493390 Ring Set (.030" O.S.

) LockPiston Pin REF. NO. 28 PART NO. DESCRIPTION 16 227 592 615 741 45 40 377 616 230 32 493282 Crankshaft Note For Timing Gear Key Order Part No. 94388.

493362 Crankshaft Used on Type No(s). 0211, 0212, 0215, 0216, 0218, 0219, 0221, 0228, 0229, 0265, 0267, 0409, 0411, 0412, 0415, 0418, 0419, 0425, 0426, 0428, 0433, 0436, 0437, 0438, 0443, 0465, 0472, 0474, 0483, 0486, 0560, 0567, 0568, 3416, 3417, 4401. 493363 Crankshaft Used on Type No(s). @@@67072 WasherGov. @@@@358. D Included in Carburetor KitPart No. 493762. z Included in Carburetor Gasket SetPart No. @@@@NO. 12 15 15A PART NO.

47 15 12 20 15A 22 REF. NO. 22 PART NO. 87 DESCRIPTION 18 REF. NO. @@@@Head One Used in Hole Nearest Breather. @@0230, 0417, 0434, 0438, 0452, 0472. 231279 GearDrive 391484 SealOil 93572 ScrewHex. @@358. D Included in Carburetor KitPart No.

493762. z Included in Carburetor Gasket SetPart No. @@@@63426 290568 93801 396291 621 REF. NO. 98A 188A 201 209 PART NO.

493280 94644 262579 262666 DESCRIPTION ScrewSpeed Adj. ScrewHex. Hd. @@Used on Type No(s). 0222, 0228, 0417, 0418, 0429, 0484, 0560. 262667 SpringGov. Used on Type No(s). 0428, 0437, 0474, 0478, 0479, 3411, 3415, 3416, 3417, 3420. 262678 SpringGov. Used on Type No(s). 0226, 0227, 0425, 0426, 0476, 3412, 3216, 3217, 3218, 3413, 3414. REF. NO. 268 PART NO. DESCRIPTION REF.

NO. @@Hd. @@@@NO. 12 15 15A PART NO. REF. NO.

130 131 133 134 PART NO. 223470 493267 398187 D398188 REF. NO. @@Used on Type No(s). 0208, 0264, 0464, 0465, 0509.

@@Used on Type No(s). 0208, 0264, 0464, 0465, 0509. 493640 BowlFloat K Included in Gasket SetSee Ref. 358. D Included in Carburetor KitPart No. 493762. z Included in Carburetor Gasket SetPart No. 490937. 24376 Assemblies include all parts shown in frames. 6 94 123800 to 123899 131 134 124 634 104 133 125A 137 98 130 116 617 116 955A REF. NO. PART NO. REF. NO. 127 130 131 133 134 D 223470 493267 398187 D398188 PART NO.

REF. NO. 955A PART NO. 118 127 95 975 DESCRIPTION DESCRIPTION PlugWelch (Sold in Kit Only) ValveThrottle ShaftThrottle FloatCarburetor Valve-Needle (Includes Seat) GasketFloat Bowl (Sold in Kit Only) SealFuel Intake Tube WasherShaft (Sold in Kit Only) DESCRIPTION 95 94098 98 398185 104 D231371 116 Dz 118 124 125A ScrewRound Head ScrewIdle Adjustment PinFloat Hinge GasketSealing (Sold in Kit Only) D493765 Valve KitNeedle 94525 ScrewCarburetor Mounting 496114 Carburetor (For Primer) (Used After Code Date 93080100). 137 Dz 617 Dz270344 634 Dz 975 493637 ScrewFuel Bowl (Standard) OR 494870 ScrewFuel Bowl (For High Altitude) (Used After Code Date 93080100). 493640 BowlFloat K Included in Gasket SetSee Ref. 358. D Included in Carburetor KitPart No. 493762. z Included in Carburetor Gasket SetPart No.



[You're reading an excerpt. Click here to read official BRIGGS & STRATTON 123802 user guide](http://yourpdfguides.com/dref/3640143)
<http://yourpdfguides.com/dref/3640143>

490937. 24377 Assemblies include all parts shown in frames. 7 94 123800 to 123899 969 968 606 971A 971 967 163 387 969A 529 966 968A 971 621 966A 922 258 923 967 529A 971B REF. NO. 163 163A 258 387 423 529 529A 606 621 922 923 PART NO.

K272653 K272296 94512 496115 93758 281299 280943 224815 396847 262640 493442 DESCRIPTION GasketAir Cleaner GasketAir Cleaner ScrewHex. Head PrimerCarburetor ScrewHex. Hd. Grommet Grommet StrapBracket SwitchStop SpringBrake Brake Assembly REF. NO. 925 935 966 163A 935 925 423 PART NO. DESCRIPTION REF. NO. 967 968 968A 969 969A 971 971A 971B PART NO. 491588 281340 281069 94120 94173 94121 94749 94269 DESCRIPTION FilterAir CoverAir Cleaner CoverAir Cleaner ScrewHex. Head ScrewCover Mtg. ScrewHex. Head ScrewHex. Head ScrewAir Cleaner 966A 281145 CoverLinkage 398758 SwitchStarter 496116 BaseAir Cleaner (Primer Style) (Used After Code Date 93080100). 494735 BaseAir Cleaner (Metal) (Used Before Code Date 3216, 3217, 3420).

Alternator ScrewMuffler Mtg. DeflectorMuffler HarnessWiring Used on Engines Without Band Brake. REF. NO. 789A PART NO. DESCRIPTION 474 613 676 789 492841 94231 393756 493379 832 851 883 493380 HarnessWiring Used on Engines With Band Brake. 494224 GuardMuffler 221798 Terminal-Cable K272253 GasketMuffler K Included in Gasket SetSee Ref. 358. D Included in Carburetor KitPart No. 493762.

z Included in Carburetor Gasket SetPart No. 490937. 243712 Assemblies include all parts shown in frames. 12 94 123800 to 123899 163A 163 7 883 9A 12 842 358 GASKET SET 118 104 137 116 634 977 CARBURETOR GASKET SET REF. NO.

PART NO. REF. NO. 134 137 163 163A 358 PART NO. 9 3 20 670A 52 524 134 127 617 116 617 137 634 121 CARBURETOR KIT REF.

NO. @@@@ @@@@358. D Included in Carburetor KitPart No. 493762. z Included in Carburetor Gasket SetPart No. 490937. 243713 Assemblies include all parts shown in frames. 13 94 123800 to 123899 938 937 544 510 309 782 784 74 548 785 513 783 803 801 310 802 22A REF. NO. 22A 74 309 310 510 513 PART NO.

94268 93490 494233 94051 494147 394815 DESCRIPTION ScrewHex. Head ScrewHex. Head MotorStarter ScrewHex. Head DriveStarter ClutchDrive REF. NO. 544 548 782 783 784 785 PART NO. 492921 492919 281127 261606 224262 272201 DESCRIPTION ArmatureSarter Washer Set GearStarter Gear-Starter CoverGear GasketCover REF. NO. 801 802 803 937 938 PART NO. 492335 492922 492920 281125 93941 DESCRIPTION CapDrive CapEnd HousingStarter SplineStarter RetainerLock K Included in Gasket SetSee Ref.

358. D Included in Carburetor KitPart No. 493762. z Included in Carburetor Gasket SetPart No. 490937. 243714 Assemblies include all parts shown in frames. 14 94 .



[You're reading an excerpt. Click here to read official BRIGGS & STRATTON 123802 user guide](http://yourpdfguides.com/dref/3640143)
<http://yourpdfguides.com/dref/3640143>