



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for BRIGGS & STRATTON 124802. You'll find the answers to all your questions on the BRIGGS & STRATTON 124802 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual BRIGGS & STRATTON 124802
User guide BRIGGS & STRATTON 124802
Operating instructions BRIGGS & STRATTON 124802
Instructions for use BRIGGS & STRATTON 124802
Instruction manual BRIGGS & STRATTON 124802

FORM MS2436-9/94
REPLACES FORM MS2436-10/93
FILE IN SECT 7 OF SERVICE MANUAL
124800 to 124899

Illustrated Parts List **Model Series** **124800 to 124899**

TYPE NUMBERS
0106,
0206 through 0284,
0406 through 0472,
0506 through 0560,
0610,
3100 through 3130,
3201 through 3246,
3401 through 3440.

TO FIND THE CORRECT NUMBER OF THE PART YOU NEED: FOLLOW THE INSTRUCTIONS BELOW

- A. Refer to Engine Model, Type and Code Number that is stamped on the blower housing of engine. Engine type numbers such as 0122 01 are listed only as 0123 in most instances. The two digits (01 or 02, etc.) to the right of the space may be required for more accurate parts identification in some instances. Select the Illustrated Parts List covering the correct Model Series and Type Number.
- B. Refer to the Illustrations and compare the original part with illustration. The number next to the illustration is the Reference Number. Assemblies include all parts shown in frames. All parts shown in assembly frames having individual reference numbers can be purchased separately.
- C. After the Reference Number has been identified, refer to the Numerical text, where Reference and Primary Part Number are listed. THE PRIMARY PART IS USED ON ALL TYPE NUMBERS EXCEPT THOSE TYPE NUMBERS UNDER "NOTE."
- D. If a "Note" appears below the Primary Part Number, it means that this part differs from the Primary Part for certain types. If your Type number is listed under "Note," order the part referred to at the "Note."
- E. If your Engine Type Number does not appear after any part number listed under "Note," use the Primary Part Number.
- F. For Engine Type Numbers not covered by this book, check other Parts Lists having the same engine model or contact your source of supply.

PRINTED IN U.S.A.



COPYRIGHT ©



[You're reading an excerpt. Click here to read official BRIGGS & STRATTON 124802 user guide](http://yourpdfguides.com/dref/3640213)
<http://yourpdfguides.com/dref/3640213>

Manual abstract:

2 OF SERVICE MANUAL 124800 to 124899 Illustrated Parts List Model Series 124800 to 124899 TYPE NUMBERS 0106, 0206 through 0284, 0406 through 0472, 0508 through 0560, 0610, 3100 through 3130, 3201 through 3246, 3401 through 3440. TO FIND THE CORRECT NUMBER OF THE PART YOU NEED: FOLLOW THE INSTRUCTIONS BELOW A. Refer to Engine Model, Type and Code Number that is stamped on the blower housing of engine. Engine type numbers such as 0123 01 are listed only as 0123 in most instances. The two digits (01 or 02, etc.) to the right of the space may be required for more accurate parts identification in some instances. Select the Illustrated Parts List covering the correct Model Series and Type Number. Refer to the Illustrations and compare the original part with Illustration. The number next to the illustration is the Reference Number. Assemblies include all parts shown in frames.

@@@ @@@ If a "Note" appears below the Primary Part Number, it means that this part differs from the Primary Part for certain types. @@@ @@@ NO. 1 2 3 5 7 8 9 9A 10 11 13 52 54 284 306 307 337 PART NO. @@@ SEE REPAIR INSTRUCTION MANUAL. PART NO.

DESCRIPTION 5 13 DESCRIPTION REF. NO. 870 1019 LABEL KIT 1058 OWNER'S MANUAL PART NO. DESCRIPTION 492167 PlugSpark (17/8" High, 48 mm) WrenchSpark Plug CapOil Fill (Used After Code Date 92072600). Note 493950 CapOil Fill (Used Before Code Date 92072700). SealFill Tube TubeOil Fill (Used After Code Date 92072600). Note 493952 TubeOil Fill (Used Before Code Date 92072700). BaffleCylinder ManifoldIntake BootSpark Plug REF. NO. 842 847 Cylinder Bushing SealOil HeadCylinder GasketCylinder Hd. BreatherAssembly GasketBreather GasketBreather Screw-Breather Mtg. TubeBreather ScrewCylinder Hd. GasketIntake Elbow ScrewHex. Head ScrewHex. Head ShieldCylinder ScrewHex.

Head PlugSpark (Resistor Type) (17/8" High, 48 mm) Note 383 523 89838 495264 869 870 871 524 525 K280393 495265 572 625 635 224328 492717 66538 1019 1058 K280966 SealCap 495263 TubeOil Fill (Used After Code Date 92072600). Note 493459 TubeOil Fill (Used Before Code Date 92072700). @@@ 358. D Included in Carburetor KitPart No. 493762. z Included in Carburetor Gasket SetPart No. @@@ @@@ NO. 16 24 25 PART NO. DESCRIPTION REF. @@@ NO.

33 34 35 40 45 227 230 377 PART NO. @@@ WasherGov. @@@ @@@ 222698 KeyFlywheel 493262 Piston Assy. (Standard) 493385 Piston Assy. (. 010" O.S.) 493386 Piston Assy. (.020" O. S.) 493387 Piston Assy. (.030" O.S.) 493261 Ring Set (Standard) 493388 Ring Set (.010" O.S.) 27 28 26026 298909 29 490566 32 94699 562 592 615 616 741 92613 231082 94474 262578 262598 K Included in Gasket SetSee Ref. 358.

D Included in Carburetor KitPart No. 493762. z Included in Carburetor Gasket SetPart No. 490937. 24363 Assemblies include all parts shown in frames. 3 104 124800 to 124899 69B 46A 46 69B 15 15 12 263 12 721 720 83 18A 20 15A REF. NO. 12 15 15A PART NO. DESCRIPTION REF. NO. 46A 47 PART NO. 47 83A 22 87 18 REF. NO. 83 PART NO. 20 22 DESCRIPTION DESCRIPTION 18 18A 20 22 46 K272198 GasketCrankcase 94613 Plug-Oil Drain 94470 PlugOil Drain (Hex.

Socket, 1/1627 NPTF) 493279 SumpEngine 493365 SumpEngine K399781 SealOil 94220 ScrewHex. Head Note 94612 ScrewHex. Head One Used in Hole Nearest Breather. 492830 GearCam 69B 493738 GearCam (Counterclockwise) 493737 SlingerOil (Used After Code Date 90030450 and 90031800). Note 492524 SlingerOil (Used Before Code Date 90030550 and 90031900).

68938 WasherThrust 83A 87 263 720 721 231671 ShaftDrive Note 231711 GearDrive Used on Type No(s). 3424. 231748 GearDrive Used on Type No(s). 0219, 0220, 0262, 0267, 0426, 0470. 231909 GearDrive Used on Type No(s). 0516, 3241. 231279 GearDrive 391484 SealOil 93572 ScrewSelf Tap 93474 Pin-Roll 224249 StopShaft K Included in Gasket SetSee Ref. 358. D Included in Carburetor KitPart No. 493762.

z Included in Carburetor Gasket SetPart No. @@@ @@@ NO. 98A 188A 201 209 268 PART NO. DESCRIPTION REF. NO. PART NO. @@@ LocknutCasing Lever-Control WasherLock NutHex. ScrewHex. Hd. @@@ REF.

@@@ @@@ 493895 Bracket Control (Used Before Code Date 93080200). Used on Type No(s). 3228, 3230. @@@ 94644 ScrewHex. Hd. 262579 Link SpringGovernor See Last Pages. @@@ @@@ 358. D Included in Carburetor KitPart No. 493762. z Included in Carburetor Gasket SetPart No. @@@ @@@ NO. PART NO. REF. NO. 127 130 131 133 134 D 223470 493267 398187 D398188 PART NO. REF. NO. @@@ @@@ Used on Type No(s). @@@ 3110, 3117, 3208, 3224, 3408, 3414, 3421, 3423, 3424. 493640 BowlFloat K Included in Gasket SetSee Ref.

358. D Included in Carburetor KitPart No. 493762. z Included in Carburetor Gasket SetPart No. @@@ @@@ NO. PART NO. DESCRIPTION REF. NO. @@@ @@@ Mtg. @@@ 358.

D Included in Carburetor KitPart No. 493762. z Included in Carburetor Gasket SetPart No. @@@ 7 104 124800 to 124899 969 968 606 971A 971 967 163 387 969A 267 971 267 966A 265A 621 529 966 968A 922 258 265 923 967 529A 971B REF. NO.

163 163A 258 265 265A 267 387 423 529 529A 606 621 PART NO. K272653 K272296 94512 213146 221535 94204 496115 93758 281299 280943 224815 396847 DESCRIPTION GasketAir Cleaner GasketAir Cleaner ScrewHex. Head ClampCasing ClampCasing ScrewClamp Mtg. PrimerCarburetor ScrewHex. Hd.

Grommet Grommet StrapBracket SwitchStop REF. NO. 922 923 925 935 966 163A 935 925 423 PART NO. 262640 493442 281145 398758 496116 DESCRIPTION REF. NO. 967 968 968A 969 969A 971 971A 971B PART NO. @@@ Head ScrewAir Cleaner ScrewHex. Head ScrewHex. @@@ @@@ 358. D Included in Car3, 3435, 3242.

DESCRIPTION REF. NO. @@@ @@@ 492841 Alternator 94231 ScrewMuffler Mtg. 94615 ScrewMuffler Mtg. @@@ 493380 HarnessWiring Used on Engines with Band Brake. @@@ 0517, 3211. 494224 GuardMuffler 221798 TerminalCable K272253 GasketExhaust K Included in Gasket SetSee Ref. 358. D Included in Carburetor KitPart No. 493762.

z Included in Carburetor Gasket SetPart No. 490937. 243612 Assemblies include all parts shown in frames. 12 104 124800 to 124899 163A 670A 163 7 12 842 358 GASKET SET 3 9 883 20 9A 52 118 524 104 137 116 634 977 CARBURETOR GASKET SET REF.



[You're reading an excerpt. Click here to read official BRIGGS & STRATTON 124802 user guide](http://yourpdfguides.com/dref/3640213)
<http://yourpdfguides.com/dref/3640213>

NO.

PART NO. REF. NO. 127 134 D D398188 PART NO. 134 127 617 116 617 137 634 121 CARBURETOR KIT DESCRIPTION PlugWelch (Sold in Kit Only) ValveNeedle (Includes Seat) GasketFloat Bowl (Sold in Kit Only) GasketAir Cleaner GasketAir Cleaner Gasket Set (Used After Code Date 93080100). Note 493263 Gasket Set (Used Before Code Date 93080200). REF. NO. PART NO. DESCRIPTION DESCRIPTION 3 K299819 7 K272200 9 K272481 9A K272238 12 K272198 20 K399781 52 K272199 104 D231371 116 Dz 118 121 SealOil GasketCylinder Hd. @@358. D Included in Carburetor KitPart No. 493762. z Included in Carburetor Gasket SetPart No. @@@@NO.

22A 74 309 310 510 513 PART NO. 94268 93490 494233 94051 494147 394815 DESCRIPTION ScrewHex. Head ScrewSem. MotorStarter BoltThru Drive-Starter ClutchDrive REF. NO. 544 548 782 783 784 785 PART NO. 492921 492919 281127 261606 224262 272201 DESCRIPTION ArmatureStarter Washer Set GearStarter GearStarter CoverGear GasketCover REF. NO. 801 802 803 937 938 PART NO. 492335 492922 492920 281125 93941 DESCRIPTION Cap-Drive CapEnd HousingStarter SplineStarter RetainerLock K Included in Gasket SetSee Ref. 358. D Included in Carburetor KitPart No. 493762. z Included in Carburetor Gasket SetPart No. 490937.

243614 Assemblies include all parts shown in frames. 14 104 124800 to 124899 REF. NO. 16 PART NO. DESCRIPTION REF.

NO. PART NO. DESCRIPTION REF. NO. PART NO. DESCRIPTION 262660 SpringGov. Used on Type No(s). @@262661 SpringGov. Used on Type No(s). 0511, 3415.

262662 SpringGov. Used on Type No(s). 3224, 3242. 262664 SpringGov. Used on Type No(s). 0226, 0284, 0427, 0428, 0560. 262665 SpringGov. Used on Type No(s). 0426. 262667 SpringGov.

Used on Type No(s). 0413, 3431. 262678 SpringGov. Used on Type No(s). 0410, 0417, 0420, 0429, 3124, 3217, 3416.

@@94388. 493362 Crankshaft Used on Type No(s). @@493363 Crankshaft Used on Type No(s). @@493433 Crankshaft Used on Type No(s). 3110, 3111, 3115, 3117, 3124, 3209, 3214, 3220, 3425.

493946 Crankshaft Used on Type No(s). 0210, 0211, 0214, 0217, 0218, 0219, 0220, 0262, 0264, 0267, 0414, 0422, 0423, 0432, 0433, 0468, 0467, 3217, 3221, 3226, 3227, 3416. 493947 Crankshaft Used on Type No(s). 3411, 3414, 3415. 494546 Crankshaft Used on Type No(s). 0511. 496809 Crankshaft Used on Type No(s). 3242. 262666 SpringGovernor ­.



[You're reading an excerpt. Click here to read official BRIGGS & STRATTON 124802 user guide](http://yourpdfguides.com/dref/3640213)
<http://yourpdfguides.com/dref/3640213>