



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for BRIGGS & STRATTON 125K00 TO 125K99. You'll find the answers to all your questions on the BRIGGS & STRATTON 125K00 TO 125K99 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual BRIGGS & STRATTON 125K00 TO 125K99
User guide BRIGGS & STRATTON 125K00 TO 125K99
Operating instructions BRIGGS & STRATTON 125K00 TO 125K99
Instructions for use BRIGGS & STRATTON 125K00 TO 125K99
Instruction manual BRIGGS & STRATTON 125K00 TO 125K99



FORM MS-5482-0710/2008
REPLACES FORM MS-5482-06/18/2008
FILE IN SECT. 2 OF SERVICE MANUAL

125K00

Illustrated Parts List

Model Series

125K00

TYPE NUMBERS
0005 through 3711.

TABLE OF CONTENTS

Alternator	4
Air Cleaner	4
Blower Housing/Shrouds	5
Camshaft	2
Carburetor	3
Controls	4
Crankshaft	2
Cylinder	2
Electric Starter	6
Electrical	4
Engine Sump	2
Exhaust System	4
Flywheel	6
Flywheel Brake	4
Fuel Supply	3
Governor Spring	4
Ignition	4
Kits/Gaskets	2 & 3
Lubrication	2
Piston Group	2
Rewind Starter	6
Valves	2



PRINTED IN U.S.A.
COPYRIGHT BY BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.



[You're reading an excerpt. Click here to read official BRIGGS & STRATTON 125K00 TO 125K99 user guide](http://yourpdfguides.com/dref/3640340)
<http://yourpdfguides.com/dref/3640340>

Manual abstract:

2 OF SERVICE MANUAL 125K00 Illustrated Parts List Model Series 125K00 TYPE NUMBERS 0005 through 3711. TABLE OF CONTENTS Alternator

.
.
.
. 4 Air Cleaner

.
.
.
. 4 Blower Housing/Shrouds

. 5 Camshaft
.
.
.

. 2 Carburetor
.
.
. 3 Controls

.
.
.
. 4 Crankshaft

.
.
. 2 Cylinder
.

.
.
. 2 Electric Starter
.

. 6 Electrical
.
.
.

. 4 Engine Sump
.
.
. 2 Exhaust System

.
.
. 4 Flywheel
.

.
.
. 6 Flywheel Brake
.

. 4 Fuel Supply
.
.
.

. 3 Governor Spring
.
.
. 4 Ignition

.....
.....
... 4 Kits/Gaskets .
.....

.....
... 2 & 3 Lubrication . .
.....
.....

..... 2 Piston Group ...
.....
.....
.....

2 Rewind Starter
.....
.....
.. 6 Valves

.....
.....
.....

. 2 PRINTED IN U.S.A. COPYRIGHT by BRIGGS & STRATTON CORPORATION All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation. 125K00 1319 WARNING LABEL 1058 OPERATOR'S MANUAL 1330 REPAIR MANUAL 1019 LABEL KIT REQUIRED when replacing parts with warning labels affixed. 1 2 3 718 584 10 8 9 306 306A 307 7 585 684 11 50 54 13 5 869 870 871 33 50A 40 36 40 35 45 16 24 45 51A 51 54 337 635 383 25 27 34 868 847 523 842 1095 VALVE GASKET SET 9 7 26 28 29 32A 883 27 32 146 741 287 525 358 ENGINE GASKET SET 3 7 20 51 51A 163 524 9 585 4 12 46 524 12 617 668 842 883 43 22 15 20 Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine. 5482-2 Assemblies include all parts shown in frames.

2 07/10/2008 125K00 125 365 163 97 365 125A 163 692 108 127 130 134 95 617 109A 633A 133 104 975 137 134 130A 95 617 633 97 633 127 133 104 975 137 118 276 276 117 276 118A 276 117A 276 276 PRIMER SYSTEM 121 CARBURETOR OVERHAUL KIT 125B 109B 97 104 127 163 633A 633 972 163 231 127 130 617 957A 108A 930 276 134 137 617 633 633A CHOKE SYSTEM 977 CARBURETOR GASKET SET 137 163 276 617 633 633A 957A 957B 134 187 601 187A 133 104 975 137 601 972B 957B 187B 190 601 240 1059 187C 601 118B 276 117B 276 276 601A AUTOCHOKE SYSTEM 670 Illustrations cover a range of engines. @@@Parts shown without corresponding text may not be used on your specific engine. 5482-4 Assemblies include all parts shown in frames. 4 07/10/2008 125K00 921A 969A 969 969A 921G 921K 969 969A 969A 921B 921H 921L 969A 969A 969A 921P 921C 921J 969 921F 930 930A 37 78 604 304 305 564 604A 604B 564A 564B 564C 1036 EMISSIONS LABEL Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine. 5482-5 Assemblies include all parts shown in frames. @@@@6 07/10/2008 125K00 REF. NO. 1

2 PART NO. DESCRIPTION REF. NO. 16 PART NO. DESCRIPTION REF. NO. 23A PART NO.

DESCRIPTION 697322 Cylinder Assembly 399269 Kit-Bushing/Seal (Magneto Side) 3 K299819S Seal-Oil (Magneto Side) 4 493279 Sump-Engine ----- Note ----- 696294 Sump-Engine Used on Type No(s). 0266, 0286. 5 691160 Head-Cylinder 7 K692249 Gasket-Cylinder Head 8 695250 Breather Assembly 9 K696125 Gasket-Breather 10 691125 Screw (Breather Assembly) 11 691781 Tube-Breather 12 K692232 Gasket-Crankcase 13 690912 Screw (Cylinder Head) 15 691680 Plug-Oil Drain (Square Socket) 691451 Crankshaft ----- Note ----- 691450 Crankshaft Used on Type No(s). 0025,0133,0139,0141, 0142,0180,0196,0197, 0198,0253,0263,0303, 0317,0318,0319,0325, 0336,0345,0355,0370, 0426,0427,0446,0448, 0449,0451,0453,0457, 0460,0461,0473,0477, 0482,0483,0487,0497, 0499,0500,0506,0509, 0512,0518,0542,0546, 0548,0561,0562,0578, 0579,0619,0624,0630, 0642,0654,0658,0659, 0661,0662,0683,0690, 0711,1024,1071,3711. 694849 Crankshaft Used on Type No(s). 0005,0130,0131,0132, 0137,0138. 696009 Crankshaft Used on Type No(s). 0179,0186,0189,0193, 0195. 691455 Crankshaft Used on Type No(s). 0129,0323. 791061 Crankshaft Used on Type No(s). 0187,0188,0194,0195, 0202. @ @ 0266, 0286. 691992 Flywheel Used on Type No(s). @ @ @ @ @ @ @ @ 791326 Piston Assembly (.020" Oversize) (Used After Code Date 04102100 and Before Code Date 07040400). 697341 Piston Assembly (.020" Oversize) (Used Before Code Date 04102200). K Included in Engine Gasket Set-Ref. No.358. D Included in Carburetor Overhaul Kit-Ref. No. 121. z Included in Carburetor Gasket Set-Ref. No. 977. Included in Valve Gasket Set-Ref. No 1095. Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine. 5482-7 Assemblies include all parts shown in frames. 7 07/10/2008 125K00 REF. NO. 26 PART NO.

DESCRIPTION REF. NO. 50 50A 51 51A 54 55 58 PART NO. DESCRIPTION REF. NO. 117 PART NO. DESCRIPTION 795431 Ring Set (Standard) (Used After Code Date 07090300). ----- Note ----- 791098 Ring Set (Standard) (Used After Code Date 04031400 and Before Code Date 07090400). 499425 Ring Set (Standard) (Used Before Code Date 04031500). 795432 Ring Set (.020" Oversize) (Used After Code Date 07090300). 791324 Ring Set (.020" Oversize) (Used After Code Date 04102100 and Before Code Date 07090400). @ @ @ @ 1024, 1071. @ @ 0197, 0198. @ @ @ @ @ @ @ @ @ @ 0134, 0561, 0658, 0659, 0683. @ @ 0005. @ @ 1024, 1071. @ @ 0134, 0561, 0658, 0659, 0683. @ @ 0005.

@ @ @ @ No.358. D Included in Carburetor Overhaul Kit-Ref. No. 121.
z Included in Carburetor Gasket Set-Ref. No. 977. Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine. 5482-8 Assemblies include all parts shown in frames. 8 07/10/2008 125K00 REF. NO. 121 PART NO. DESCRIPTION REF. NO. 188 190 202 209B PART NO. DESCRIPTION REF.

NO. 222 222C PART NO. @@0134, 0561, 0658, 0659, 0683. @@0005. @@1024, 1071. @@@@691851 Spring- Governor Used on Type No(s). 0130, 0139, 0141, 0180, 0196, 0197, 0198. 691290 Spring- Governor Used on Type No(s). 0005, 0131, 0132, 0137. 691291 Spring- Governor Used on Type No(s). 0129, 0138, 0140. 691852 Spring- Governor Used on Type No(s). 0193, 0194, 0195. 790143 Bracket-Control (Remote/Manual Friction)(Primer) 692150 Bracket-Control (Variable Speed) (5 Postion Manual Choke) 692467 Bracket-Control (Fixed Speed) ----- Note ----- 791128 Bracket- Control (Fixed Speed) Used on Type No(s). 0133, 0139, 0180, 0196, 0197, 0198, 0202, 0389, 0431, 0432, 0448, 0449, 0450, 0487, 0542, 0546, 0548, 0561, 0578, 0579, 0619, 0624, 0630, 0642, 0654, 0658, 0659, 0661, 0683, 0690, 0711, 3711.

690783 Lever-Governor Control 691636 Screw (Choke Valve) 691826 Link-Lockout 298090S Filter-Fuel 690798 Clamp-Casing 691044 Screw (Casing Clamp) 691025 Casing-Control Wire (Cut to Required Length) 691026 Wire-Control (Cut to Required Length) 222D 227 231 236 240 265 267 268 269 K Included in Engine Gasket Set-Ref.



[You're reading an excerpt. Click here to read official BRIGGS & STRATTON 125K00 TO 125K99 user guide](http://yourpdfguides.com/dref/3640340)

<http://yourpdfguides.com/dref/3640340>

No.358. D Included in Carburetor Overhaul Kit-Ref. No.

121. z Included in Carburetor Gasket Set-Ref. No. 977. Included in Valve Gasket Set-Ref. No 1095. Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine. 5482-9 Assemblies include all parts shown in frames. 9 07/10/2008 125K00 REF.

NO. 270 PART NO. DESCRIPTION REF. NO. 304 P93871 Deflector-Muffler 690661 Screw (Muffler Deflector) 690345 Screw (Breather Passage Cover) 691855 Spring-Friction 690572 Spring-Detent 691127 Screw (Drive Cap) 690959 Pin-Locating 795755 Gear-Timing (Plastic) ----- Note ----- 794388 Gear-Timing (Use Without Woodruff Key) (Used After Code Date 07093000). @@@@0180, 0198. 742 745 783 783A 784 785 K Included in Engine Gasket Set-

Ref. No.358. D Included in Carburetor Overhaul Kit-Ref.

No. 121. z Included in Carburetor Gasket Set-Ref. No. 977.

Included in Valve Gasket Set-Ref. No 1095. Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine. 5482-11 Assemblies include all parts shown in frames.

11 07/10/2008 125K00 REF. NO. 789B PART NO. DESCRIPTION REF. NO. 923 923A PART NO. DESCRIPTION REF. NO. 930 930A 935 937 957A 957B 966A 966B PART NO. @@0266, 0286.

@@Used on Type No(s). 0015, 0025, 0134, 0139, 0141, 0142, 0196, 0197, 0243, 0253, 0273, 0281, 0303, 0320, 0321, 0323, 0370, 0389, 0426, 0427, 0446, 0449, 0450, 0451, 0452, 0457, 0460, 0461, 0473, 0477, 0482, 0483, 0487, 0497, 0500, 0506, 0509, 0512, 0515, 0518, 0525, 0542, 0548, 0561, 0578, 0579, 0619, 0624, 0630, 0654, 0658, 0661, 0662, 0683, 0690, 0711, 3711. 796136 Brake (Used After Code Date 08043000). Used on Type No(s). 0015, 0025, 0134, 0139, 0141, 0142, 0196, 0197, 0243, 0253, 0273, 0281, 0303, 0320, 0321, 0323, 0370, 0389, 0426, 0427, 0446, 0449, 0450, 0451, 0452, 0457, 0460, 0461, 0473, 0477, 0482, 0483, 0487, 0497, 0500, 0506, 0509, 0512, 0515, 0518, 0525, 0542, 0548, 0561, 0578, 0579, 0619, 0624, 0630, 0654, 0658, 0661, 0662, 0683, 0690, 0711, 3711. 967A 493537S 968B 692298 969 690700 969A 970 972 972B 691138 691669 699392 699374 923B 975 976 977 990A 1005 1009 1019 493640 694395 498261 695951 691346 696255 694881 K Included in Engine Gasket Set-Ref. No.358. D Included in Carburetor Overhaul Kit-Ref. No.

121. Included in Carburetor Gasket Set-Ref. No. 977. Included in Valve Gasket Set-Ref.

No 1095. z Illustrations cover a range of engines. Parts shown without corresponding text may not be us.



[You're reading an excerpt. Click here to read official BRIGGS & STRATTON 125K00 TO 125K99 user guide](http://yourpdfguides.com/dref/3640340)

<http://yourpdfguides.com/dref/3640340>