



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for BRIGGS & STRATTON 12A600 TO 12A699. You'll find the answers to all your questions on the BRIGGS & STRATTON 12A600 TO 12A699 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

- User manual BRIGGS & STRATTON 12A600 TO 12A699**
- User guide BRIGGS & STRATTON 12A600 TO 12A699**
- Operating instructions BRIGGS & STRATTON 12A600 TO 12A699**
- Instructions for use BRIGGS & STRATTON 12A600 TO 12A699**
- Instruction manual BRIGGS & STRATTON 12A600 TO 12A699**



FORM MS-6739-07/22/2008
REPLACES FORM MS-6739-06/29/2008
FILE IN SECT. 2 OF SERVICE MANUAL
12A600

Illustrated Parts List Model Series 12A600

TYPE NUMBERS
0100 through 0112.

TABLE OF CONTENTS

Air Cleaner	6
Blower Housing/Shrouds	7
Camshaft	2
Carburetor	4
Controls	5
Crankshaft	2
Cylinder	2
Cylinder Head	3
Engine Sump	2
Exhaust System	6
Flywheel	7
Flywheel Brake	5
Fuel Supply	4
Governor Spring	5
Ignition	5
Lubrication	2
Piston Group	2
Rewind Starter	7



PRINTED IN U.S.A.
COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.



[You're reading an excerpt. Click here to read official BRIGGS & STRATTON 12A600 TO 12A699 user guide](http://yourpdfguides.com/dref/3640078)
<http://yourpdfguides.com/dref/3640078>

Manual abstract:

2 OF SERVICE MANUAL 12A600 Illustrated Parts List Model Series 12A600 TYPE NUMBERS 0100 through 0112. TABLE OF CONTENTS Air Cleaner . . .

.

.

.

. 6 Blower Housing/Shrouds

. 7 Camshaft

.

.

. 2 Carburetor

.

. 4 Controls

.

.

. 5 Crankshaft

.

.

. 2 Cylinder

.

.

. 2 Cylinder Head

.

.

. 3 Engine Sump

.

.

. 2 Exhaust System

.

.

. 6 Flywheel

.

.

. 7 Flywheel Brake

.

.

. 5 Fuel Supply

.

.

. 4 Governor Spring

.

.

. 5 Ignition

.

.

. 5 Lubrication

.

.

. 2 Piston Group

.

.....
2 Rewind Starter
.....
.....

. 7 PRINTED IN U.S.A. COPYRIGHT by BRIGGS & STRATTON CORPORATION All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation. 12A600 1058 OPERATOR'S MANUAL 1330 REPAIR MANUAL 1319 WARNING LABEL 1019 LABEL KIT REQUIRED when replacing parts with warning labels affixed. 847 525 523 2 3 1 584 684 842 11 585 306 524 287 718 8 9 16 28 27 29 25 27 307 24 10 32 32A 741 146 46 43 26 358 ENGINE GASKET SET 3 51B 51A 7 122 51 842 868 883 993 4 12 9 12 20 163A 524 585 1022 22 15 20

Illustrations cover a range of engines. @@@@3 07/22/2008 12A600 125 97 633A 121 CARBURETOR OVERHAUL KIT 51B 134 163A 51A 127 134 130 95 51 104 51 104 127 137 133 163A 276 975 137 122 122 633A 276 117 276 PRIMER SYSTEM 977 CARBURETOR GASKET SET 51 137 118 276 122A 51B 51A 163A 276 122 633A 365 51B 972 957B 190 670 1059 187 601 957 957B Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

6739-4 Assemblies include all parts shown in frames. 4 07/22/2008 12A600 222A 222B 843 621 51 51A 51B 122 188 51A 51B 51 267 268 265 269 270 271 209 227 562 505 615 404 564 202 616 604 922A 356 745 333 923B 621 922A 923A 851 334 Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine. 6739-5 Assemblies include all parts shown in frames. 5 07/22/2008 12A600 425 968 445 967 443 966 443A 529A 976 163A 300D 613 832C 836 883 613A 836A Illustrations cover a range of engines.

Parts shown without corresponding text may not be used on your specific engine. 6739-6 Assemblies include all parts shown in frames. 6 07/22/2008 12A600 563 949 997 1036 EMISSIONS LABEL 703 608 304 55 37 78 65 592 1210 925 332 455 459 689 456 597 58 65 592 1211 305 60 1005 363 23 Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine. 6739-7 Assemblies include all parts shown in frames.

7 07/22/2008 12A600 REF. NO. 1 2 3 4 5 PART NO. DESCRIPTION REF. NO. 25 PART NO. DESCRIPTION REF. NO. 27 28 29 32 32A 33 34 35 36 PART NO. 691866 499423 499424 691664 695759 499642 499641 691304 691304 DESCRIPTION Lock-Piston Pin Pin-Piston Rod-Connecting Screw (Connecting Rod) Screw (Connecting Rod) Valve-Exhaust Valve-Intake Spring-Valve (Intake) Spring-Valve (Exhaust) Guard-Flywheel Retainer-Valve Slinger-Governor/Oil Tappet-Valve Camshaft Gasket-Intake Gasket-Intake Gasket-Intake Housing-Rewind Starter Rope-Starter (Cut To Required Length) Grip-Starter Rope Screw (Rewind Starter) Screw (Flywheel Guard) Screw (Throttle Valve) Shaft-Throttle (Metal) ----- Note ----- 790121 Shaft-Throttle (Plastic) Pin-Float Hinge 692670 Cylinder Assembly 399269 Kit-Bushing/Seal (Magneto Side) K299819S Seal-Oil (Magneto Side) 493279 Sump-Engine 795501 Head-Cylinder (Used After Code Date 05110100).

@@@@0112. @@@@@@795431 Ring Set (Standard) (Used After Code Date 07090300). @@499631 Ring Set (Standard) (Used Before Code Date 04040500). @@@@@@No.358. D Included in Carburetor Overhaul Kit-Ref. No. 121. z Included in Carburetor Gasket Set-Ref. No. 977. Included in Valve Gasket Set-Ref. No 1095. Illustrations cover a range of engines. @ 8 07/22/2008 12A600 REF.

NO. 117 PART NO. DESCRIPTION REF. NO. 192 222A PART NO. DESCRIPTION REF. NO. 305 PART NO. @@@@118 497466 Jet-Main (High Altitude) (Used After Code Date 03110600). @@@@@@792403 Bracket-Control (Used After Code Date 05110100). ----- Note ----- 692672 Bracket- Control (Used Before Code Date 05110200). 691467 Lever-Governor Control 691300 Cap-Valve 690798 Clamp-Casing 691044 Screw (Casing Clamp) 691025 Casing-Control Wire (Cut To Required Length) 691026 Wire-Control (Cut To Required Length) 691027 Nut (Control Wire Casing) 691028 Lever-Control Dz271716 Washer-Sealing 690940 Screw (Dipstick Tube) 699769 Muffler-Exhaust 696527 Housing-Blower ----- Note ----- 697383 Housing- Blower Used on Type No(s). 0112. 691108 Screw (Blower Housing) ----- Note ----- 691138 Screw (Blower Housing) 691232 Shield-Cylinder 690345 Screw (Cylinder Shield) 690662 Nut (Flywheel) 691061 Screw (Magneto Armature) 692051 Plug-Spark (Resistor) ----- Note ----- 692720 Plug-Spark (EMS) 692390 Wire-Stop 792384 Gasket Set-Engine 19069 Puller-Flywheel 691129 Screw (Carburetor) (Used After Code Date 05110100). ----- Note ----- 691136 Screw (Carburetor) (Used Before Code Date 05110200).

19374S Wrench-Spark Plug 690272 Washer (Governor Crank) 690670 Screw (Air Cleaner Cover) 691637 Screw (Air Cleaner Primer Base) 692523 Screw (Air Cleaner Primer Base) 491588S Filter-Air Cleaner Cartridge 306 307 332 334 337 222B 227 238 265 267 268 269 270 271 276 287 300D 304 356 358 363 365 383 404 425 443 443A 445 K Included in Engine Gasket Set-Ref. No.358. D Included in Carburetor Overhaul Kit-Ref. No. 121. z Included in Carburetor Gasket Set-Ref. No. 977. Included in Valve Gasket Set-Ref.

No 1095. Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine. 6739-9 Assemblies include all parts shown in frames. 9 07/22/2008 12A600 REF.

NO. PART NO. DESCRIPTION REF. NO. 635 670 684 689 703 718 741 PART NO. DESCRIPTION REF. NO. 914 922A 923A 923B 925 PART NO. DESCRIPTION 455 791960 Cup-Flywheel 456 692299 Plate-Pawl Friction 459 281505S Ratchet-Pawl 505 691251 Nut (Governor Control Lever). 523 499621 Dipstick 524 K692296 Seal-Dipstick Tube 525 495265 Tube-Dipstick 529A 691923 Grommet 562 691119 Bolt (Governor-Control Lever) 563 691138 Screw (Debris Guard Screen) 564 693808 Screw (Control Cover) 584 697734 Cover-Breather Passage 585 K691879 Gasket-Breather Passage 592 690800 Nut (Rewind Starter) 597 691696 Screw (Pawl Friction Plate) 601 791850 Clamp-Hose 604 692669 Cover-Control 608 497680 Starter-Rewind 613 691108 Screw (Muffler) 613A 691140 Screw (Muffler) 615 690340 Retainer-Governor Shaft 616 698801 Crank-Governor 619 691108 Screw (Cylinder Head Plate) 621 692310 Switch-Stop 633ADz691321 Seal-Choke/Throttle Shaft 66538S Boot-Spark Plug 692294 Spacer-Fuel Tank 690345 Screw (Breather Passage Cover) 691855 Spring-Friction 696309 Clip 690959 Pin-Locating 794388 Gear-Timing (Use Without Woodruff Key) (Used After Code Date 07093000).



[You're reading an excerpt. Click here to read official BRIGGS & STRATTON 12A600 TO 12A699 user guide](http://yourpdfguides.com/dref/3640078)
<http://yourpdfguides.com/dref/3640078>

@@@796136 Brake (Used After Code Date 08043000). 795403 Cover-Linkage (Used After Code Date 07072200). @@696306 Guard-Debris Screen 692046 Cap-Fuel Tank (Plastic) 699985 Cap-Fuel Tank (Plastic) 692673 Base-Air Cleaner Primer 493537S Filter-Pre Cleaner 692298 Cover-Air Cleaner 699374 Tank-Fuel (Plastic) 493640 Bowl-Float 694395 Primer-Carburetor 792385 Gasket Set-Carburetor 696310 Shield-Debris K694088 Gasket-Cylinder Head Plate 691346 Fan-Flywheel 696438 Kit-Label K691890 Gasket-Rocker Cover 499624 Cover-Rocker Arm 692045 Rod-Push 691230 Arm-Rocker 949 957 957B 966 967 968 972 975 976 977 997 993 1005 1019 1022 1023 1026 1029 745 830 832C 836 836A 842 843 847 851 868 883 886 K Included in Engine Gasket Set-Ref. No.358.

D Included in Carburetor Overhaul Kit-Ref. No. 121. z Included in Carburetor Gasket Set-Ref. No. 977. Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

6739-10 Assemblies include all parts shown in frames. 10 07/22/2008 12A600 REF. NO. 1034 1036 PART NO. DESCRIPTION REF. NO. 1059 1095 1210 PART NO. DESCRIPTION REF. NO. 1211 1319 1330 PART NO.

DESCRIPTION 691343 Guide-Push Rod Label-Emissions (Available From A Briggs & Statton Authorized Dealer) 277102 Operator.



[You're reading an excerpt. Click here to read official BRIGGS & STRATTON 12A600 TO 12A699 user guide](http://yourpdfguides.com/dref/3640078)

<http://yourpdfguides.com/dref/3640078>