



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for BRIGGS & STRATTON 12F800 TO 12F899. You'll find the answers to all your questions on the BRIGGS & STRATTON 12F800 TO 12F899 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual BRIGGS & STRATTON 12F800 TO 12F899
User guide BRIGGS & STRATTON 12F800 TO 12F899
Operating instructions BRIGGS & STRATTON 12F800 TO 12F899
Instructions for use BRIGGS & STRATTON 12F800 TO 12F899
Instruction manual BRIGGS & STRATTON 12F800 TO 12F899



FORM MS-0517-06/02/2008
REPLACES FORM MS-0517-06/07/2008
FILE IN SECT. 2 OF SERVICE MANUAL

12F800

Illustrated Parts List

Model Series

12F800

TYPE NUMBERS
0600 through 3511.

TABLE OF CONTENTS

Alternator	8
Air Cleaner	4
Blower Housing/Shrouds	6
Camshaft	2
Carburetor	3
Controls	5
Crankshaft	2
Cylinder	2
Electric Starter	8
Electrical	8
Engine Sump	2
Exhaust System	4
Flywheel	7
Flywheel Brake	8
Fuel Supply	5
Governor Spring	5
Ignition	8
Lubrication	2
Kits/Gaskets	2 & 3
Piston Group	2
Rewind Starter	7
Valves	2



PRINTED IN U.S.A.
COPYRIGHT BY BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.



[You're reading an excerpt. Click here to read official BRIGGS & STRATTON 12F800 TO 12F899 user guide](http://yourpdfguides.com/dref/3640281)
<http://yourpdfguides.com/dref/3640281>

Manual abstract:

2 OF SERVICE MANUAL 12F800 Illustrated Parts List Model Series 12F800 TYPE NUMBERS 0600 through 3511. TABLE OF CONTENTS Alternator

.
.
.
..... 8 Air Cleaner

.
.
.
. . 4 Blower Housing/Shrouds

. . . . 6 Camshaft
.
.
.

. 2 Carburetor
.
.
..... 3 Controls

.
.
.
..... 5 Crankshaft

.
.
. . . . 2 Cylinder
.

.
.
. . 2 Electric Starter
.

. 8 Electrical
.
.
.

. 8 Engine Sump
.
.
..... 2 Exhaust System

.
.
. . . . 4 Flywheel
.

.
.
. 7 Flywheel Brake
.

. 8 Fuel Supply
.
.
.

. 5 Governor Spring
.
.
. 5 Ignition

.....
.....
... 8 Lubrication .
.....

.....
... 2 Kits/Gaskets . .
.....

..... 2 & 3 Piston Group ...
.....
.....
.....

2 Rewind Starter
.....
.....

.. 7 Valves
.....
.....

. 2 PRINTED IN U.S.A. COPYRIGHT by BRIGGS & STRATTON CORPORATION All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation. 12F800 1319 WARNING LABEL 1058 OPERATOR'S MANUAL 1330 REPAIR MANUAL 1019 LABEL KIT REQUIRED when replacing parts with warning labels affixed. 1 2 3 718 584 10 8 9 306A 306 585 684 307 7 847 13 5 869 870 871 11 50 36 54 33 35 51 383 635A 24 1095 VALVE GASKET SET 9 7 26 28 29 32A 883 27 32 377 4 12 4A 12 146 741 43 374 743 1102 22 83 46 374 524 46A 715 721 101 25 27 34 16 525 868 287 40 45 842 40 45 523 337 635 358 ENGINE GASKET SET 3 7 20 20A 51 163 524 9 585 12 617 668 842 883 15 20 15A 15 20 20A Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine. 0517-2 Assemblies include all parts shown in frames.

2 06/30/2008 12F800 125 365 163 98 97 365 125A 163 692 108 127 109A 95 617 217 633A 98 133 104 94 975 137 109 217 118 276 276 117 276 118A 276 117A 276 276 633 134 130A 130 95 617 633 97 633 127 134 94 133 104 975 137 130A 130 PRIMER SYSTEM CHOKE SYSTEM 125B 109B 97 633A 633 121 CARBURETOR OVERHAUL KIT 163 231 108A 127 94 134 276 617 104 134 130 617 127 137 163 633 633A 133 104 975 137 977 CARBURETOR GASKET SET 137 163 118B 276 117B 276 276 617 633 633A AUTOCHOKE SYSTEM Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine. 0517-3 Assemblies include all parts shown in frames. 3 06/30/2008 12F800 425A 467 968B 966A 159 967A 445A 443A 966B 163 976 529 163 529 970 976 291 1386 1388 1387 883 300 883 300A 300B 81 613 832 836 832A 836 81 613A 836A 832B 836B 81 613B 836 676 676A 676B 676C 676D 994 994A 677 677 677 677 677 346 Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine. 0517-4 Assemblies include all parts shown in frames. 4 06/30/2008 12F800 972B 957B 1059 958 601A 190 670 957 187A 601 601 187B 601 240 601 957B 187 187C 601A 843 222 621 98A 222A 843A 188 222C 621 621 227 562 505 668 222D 222E 668 668 202 615 404 616 209 668 268 271 269 270 267 265 668 267 265A 209A Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine. 0517-5 Assemblies include all parts shown in frames. @@@@ @@@@ 7 06/30/2008 12F800 356 356A 356B 356C 356D 892 578 990 347 497 373 500 664 910 259 940 990A 1119 474 333 333A 851A 851 334 635A 627 359 507 520 789 789A 789B 935 236 923 621 745 922 1160 309 510 742 937 309A 510 742 937 922A 923A 651 783 784 785 513 783A 651 783 784 785 513 783A 923B 621 922A 801 545 544 853 697 803 310 1236 853 802 1009 Illustrations cover a range of engines.

Parts shown without corresponding text may not be used on your specific engine. 0517-8 Assemblies include all parts shown in frames. 8 06/30/2008 12F800 REF. NO. 1 2 PART NO.

DESCRIPTION REF. NO. PART NO. DESCRIPTION REF. NO.

12 13 15 15A PART NO. DESCRIPTION REF. NO. PART NO. DESCRIPTION REF. NO. 3 K299819S Seal-Oil (Magneto Side) 4 493279 Sump-Engine ----- Note ----- 498983 Sump-Engine Used on Type No(s). 2026, 3116, 3134. 696294 Sump-Engine Used on Type No(s). @@@@ 2007, 2685, 2687. @@@@ No. 358. D Included in Carburetor Overhaul Kit-Ref. No. 121.

z Included in Carburetor Gasket Set-Ref. No. 977. Included in Valve Gasket Set-Ref. No 1095. Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine. 0517-9 Assemblies include all parts shown in frames. 9 06/30/2008 12F800 REF. NO.

16 PART NO. DESCRIPTION REF. NO. PART NO. DESCRIPTION REF. NO. 694443 Crankshaft (Used Before Code Date 97011300).

Used on Type No(s). 0650,0667,1750. 691452 Crankshaft (Used After Code Date 97011200). Used on Type No(s). 0639,0640,0653,0654, 0817,0823,0830,0844, 0845,0853,0859,0862, 0866,0868,0870,0874, 0879,0882,0883,0887, 0894,0905,0907,0908, 0911,0914,0915,0916, 0918,1145,1151,1152, 1157,1158,1166,1167, 1170,1171,1175,1178, 1181,1182,1183,1186, 1190,1193,1194,1198, 1199,1208,1209,1210, 1212,1310,1311,1318, 1319,1320,1327,1328, 1329,1360,1366,1376, 1377,1378,1520,1521, 1566,1571,1574,1717, 1733,1753,1754,1782, 1783,1785,1786,1792, 1793,1917,1927,1934, 1936,1937,1938,1941, 1943,1944,1945,1955, 1959,1966,1967,1982, 2003,2026,2027,2029, 2031,2032,2036,2049, 2050,2051,2052,2057, 2060,2327,2329,2355, 2356,2357,2366,2371, 2378,2379,2380,2399, 2402,2414,2671,2674, 2686,3105,3111,3119, 3120,3127,3131,3132, 3136,3165,3166,3168, 3177,3178,3200,3320, 3322,3323,3324,3325.

694059 Crankshaft (Used Before Code Date 97011300). Used on Type No(s). 0639,0640,0817,0823, 0830,0844,0845,0853, 0859,0862,0866,0868, 0870,0874,0879,0882, 0883,0887,0894,0907, REF. NO. PART NO. DESCRIPTION REF. NO. PART NO. DESCRIPTION REF. NO. 0908,1145,1151,1152, 1157,1158,1166,1167, 1170,1171,1175,1178, 1181,1182,1183,1186, 1190,1194,1310,1311, 1366,1376,1377,1520, 1521,1566,1571,1574. 691455 Crankshaft (Used After Code Date 97011200). Used on

Type No(s). 0815,0877,0888,1189, 1192,1581,1914,1977, 2001,2017,2407,2411, 2409,2681,2682,2918. 691375 Crankshaft (Used Before Code Date 97011300).

Used on Type No(s). 0815,0877,0888,1189, 1581. 691454 Crankshaft Used on Type No(s). 0857,0858,0860,0878, 0880,1164,1177,1948, 1978,1980,2004,2005, 2007,2037,2038,2044, 2045,2685,2687,3510, 3511. 692981 Crankshaft (Used After Code Date 97011200). Used on Type No(s). 1142. 691482 Crankshaft Used on Type No(s). 3116, 3134. 694079 Crankshaft Used on Type No(s).



[You're reading an excerpt. Click here to read official BRIGGS & STRATTON 12F800 TO 12F899 user guide](http://yourpdfguides.com/dref/3640281)
<http://yourpdfguides.com/dref/3640281>

1769. 696009 Crankshaft Used on Type No(s). 1770,1901.

695242 Crankshaft Used on Type No(s). 1213, 1214, 2033. 694850 Crankshaft Used on Type No(s). 2406, 2413. 691451 Crankshaft (Used After Code Date 97011200).

----- Note ----- 694442 Crankshaft (Used Before Code Date 97011300). 691450 Crankshaft (Used After Code Date 97011200). Used on Type No(s). 0600,0808,0820,0833, 0835,0838,0840,0841, 0842,0852,0863,0876, 0884,0890,0906,1108, 1110,1147,1149,1154, 1159,1160,1162,1163, 1173,1174,1188,1191, 1201,1215,1220,1221, 1312,1508,1523,1524, 1557,1558,1560,1569, 1573,1700,1718,1719, 1720,1721,1722,1737, 1791,1908,1932,1946, 1947,1949,1950,1951, 1952,1961,1962,1965, 1968,1969,1970,1971, 1973,1974,1976,1985, 2006,2011,2021,2047, 2058,2059,2308,2310, 2373,2374,2608,2611, 2612,2613,2623,2624, 2625,2626,2627,2628, 2925,3112,3133,3180, 3185,3186,3187,3188. 694440 Crankshaft (Used Before Code Date 97011300). Used on Type No(s). 0600,0808,0820,0833, 0835,0838,0840,0841, 0842,0852,0863,0876, 0884,0890,0906,1108, 1110,1147,1149,1154, 1159,1160,1162,1163, 1173,1174,1188,1191, 1508,1523,1524,1557, 1558,1560,1569,1573, 1976. 692980 Crankshaft (Used After Code Date 97011200). Used on Type No(s). 0650,0667,1734,1735, 1750,1767.

K Included in Engine Gasket Set-Ref. No.358. D Included in Carburetor Overhaul Kit-Ref. No. 121. z Included in Carburetor Gasket Set-Ref. No. 977. Included in Valve Gasket Set-Ref.

No 1095. Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine. 0517-10 Assemblies include all parts shown in frames. 10 06/30/2008 12F800 REF.

NO. PART NO. DESCRIPTION REF. NO. 25 PART NO.

DESCRIPTION REF. NO. 26 PART NO. DESCRIPTION REF. NO. 20 K399781S Seal-Oil (PTO Side) 20A K691952 Seal-Oil (PTO Side) (Auxiliary PTO) 22 691092 Screw (Crankcase Cover/Sump) 23A 691987 Flywheel ----- Note ----- 691992 Flywheel Used on Type No(s). @@696291 Flywheel Used on Type No(s). @@795429 Piston Assembly (Standard) (Used After Code Date 07090300). @@493262 Piston Assembly (Standard) (Used Before Code Date 97011300). @@@@795431 Ring Set (Standard) (Used After Code Date 07090300). ----- Note ----- 791098 Ring Set (Standard) (Used After Code Date 04031400 and Before Code Date 07090400). 499425 Ring Set (Standard) (Used After Code Date 97011200 and Before Code Date 04031500).

493261 Ring Set (Standard) (Used Before Code Date 97011300). 795432 Ring Set (.020" Oversize) (Used After Code Date 04102100). 791324 Ring Set (.020" Oversize) (Used After Code Date 04102100 and Before Code Date 07090400). 499427 Ring Set (.020" Oversize) (Used After Code Date 97011200 and Before Code Date 04102200). 493389 Ring Set (.020" Oversize) (Used Before Code Date 97011300). 493390 Ring Set (.030" Oversize) (Used Before Code Date 97011300). K Included in Engine Gasket Set-Ref. No.358. D Included in Carburetor Overhaul Kit-Ref.

No. 121. z Included in Carburetor Gasket Set-Ref. No. 977ore Code Date 96060300).

498978 Jet-Main (Standard) Used on Type No(s). @@498981 Jet-Main (Standard) Used on Type No(s). @@697355 Jet-Main (Standard) 497315 Jet-Main (High Altitude) (Used After Code Date 96060200). ----- Note ----- 496495 Jet-Main (High Altitude) (Used After Code Date 95102900 and Before Code Date 96060300). 497348 Jet-Main (High Altitude) (Used Before Code Date 95103000). 498981 Jet-Main (High Altitude) (Used After Code Date 96060200). ----- Note ----- 496063 Jet-Main (High Altitude) (Used Before Code Date 96060300). 498975 Jet-Main (High Altitude) Used on Type No(s). @@494870 Jet-Main (High Altitude) Used on Type No(s). @@@@No.

358. D Included in Carburetor Overhaul Kit-Ref. No. 121. z Included in Carburetor Gasket Set-Ref. No. 977. Included in Valve Gasket Set-Ref. No 1095. Illustrations cover a range of engines.

@@13 06/30/2008 rol (Fixed Speed and 5 Position Manual Choke) 690783 Lever-Governor Control 691636 Screw (Choke Valve) 691826 Link-Lockout 298090S Filter-Fuel 691223 Bracket-Casing Clamp 690798 Clamp-Casing 691024 Clamp-Casing 691044 Screw (Casing Clamp) 691025 Casing-Control Wire (Cut to Required Length) 691026 Wire-Control (Cut to Required Length) 691027 Nut (Control Wire Casing) 691028 Lever-Control D:271716 Washer-Sealing 280973 Washer-Sealing (Pawl Friction Plate) 690940 Screw (Dipstick Tube) 790830 Thermostat 496106S Muffler (Tuned) ----- Note ----- 790828 Muffler Used on Type No(s). 1970, 2047, 2058, 2059. 494343S Muffler (Square Lo Tone) 497681 Muffler (Catalyst) 493293 Housing-Blower ----- Note ----- 493294 Housing- Blower Used on Type No(s). 0645,0653,0817,0837, 0841,0842,0843,0847, 0859,0862,0869,0875, 0879,0882,0883,0905, 0906,0908,0910,0917, 0919,1160,1161,1162, 1167,1175,1176,1177, 1178,1181,1182,1186, 1187,1189,1191,1192, 1198,1199,1312,1314, 1328,1329,1360,1379, 1524,1558,1559,1560, 1562,1568,1570,1571, 1573,1580,1581,1720, 1729,1733,1781,1782, 1785,1910,1914,1917, 1918,1940,1943,1956, 1975,1982,2001,2003, 2006,2010,2013,2017, 2023,2026,2029,2031, 2032,2035,2036,2043, 222C 222D 300A 300B 304 222E 227 231 236 240 259 265 265A 267 K Included in Engine Gasket Set-Ref. No.

358. D Included in Carburetor Overhaul Kit-Ref. No. 121. z Included in Carburetor Gasket Set-Ref.

No. 977. Included in Valve Gasket Set-Ref. No 1095. Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine. 0517-16 Assemblies include all parts shown in frames. 16 06/30/2008 12F800 REF. NO. 305 306 306A 307 309 309A 310 332 333 PART NO.

DESCRIPTION REF. NO. PART NO. DESCRIPTION REF. NO. 505 507 510 513 520 523 524 525 529 544 545 562 564 564A 564B 578 584 585 592 597 601 601A 604 604A 604B 604D 608 PART NO. @@795092 Motor-Starter (Used After Code Date 07052800). @@1931, 2062. @@1931. @@1931.

@@1969. @@No.358. D Included in Carburetor Overhaul Kit-Ref. No.

121. z Included in Carburetor Gasket Set-Ref. No. 977. Included in Valve Gasket Set-Ref.

No 1095. Illustrations cover a range of engines. @@17 06/30/2008 12F800 REF. NO. 613 PART NO. DESCRIPTION REF. NO. 676 676A 676B 676C PART NO. DESCRIPTION REF. NO.

743 PART NO. @@1970, 2047, 2058, 2059. 613A 691653 Screw (Muffler) 613B 691114 Screw (Muffler) 615 690340 Retainer-Governor Shaft 616 698801 Crank-Governor 617KD:270344 Seal-O Ring (Intake Manifold) 621 692310 Switch-Stop 627 692872 Bracket-Stopswitch ----- Note ----- 792565 Bracket-Stopswitch Used on Type No(s). 3134. 633 D:691321 Seal-Choke/Throttle Shaft 633A D:693867 Seal-Choke/Throttle Shaft 635 66538S Boot-Spark Plug 635A 792597 Boot-Spark Plug (Screw On Style) ----- Note ----- 793351 Boot-Spark Plug (Snap On Style) 651 691660 Screw (Starter Gear Cover) 664 691087 Nut (Key Switch) 668 K493823 Spacer 670 692294 Spacer-Fuel Tank 396548 Deflector-Muffler (Louvered) 393756 Deflector-Muffler (Side Out) (Shallow) 397931 Deflector-Muffler (Direct Out) 493871 Deflector-Muffler (Side Out) (Extended) (Horseshoe) 497682 Deflector-Muffler (For TUV) 690661 Screw (Muffler Deflector) 224278 Spacer-Rewind 690345 Screw (Breather Passage Cover) 691855 Spring-Friction 262625 Spring-Friction (Rewind Starter) 690572 Spring-Detent 691127 Screw (Drive Cap) 691147 Screw (Shaft Stop) 690959 Pin-Locating 690449 Stop-Shaft 795755 Gear-Timing (Plastic) ----- Note ----- 794388 Gear-Timing (Use Without Woodruff Key) (Used After Code Date 07093000).



[You're reading an excerpt. Click here to read official BRIGGS & STRATTON 12F800 TO 12F899 user guide](http://yourpdfguides.com/dref/3640281)
<http://yourpdfguides.com/dref/3640281>

790345 Gear-Timing (Use Without Woodruff Key) (Used Before Code Date 07100100). 691830 Gear-Timing (Uses Woodruff Key) 93941 Retainer-E Ring 691772 Gear-Drive (Counterclockwise) ----- Note ----- 690516 Gear-Drive (Clockwise) Used on Type No(s). 0860, 2950. 691648 Screw (Brake) 396526 Guide-Rope 691918 Gear-Pinion (Starter) 691269 Gear-Pinion 795095 Cover-Starter Gear 692352 Gasket-Starter Cover 696546 Harness-Wiring (Used After Code Date 00040600). ----- Note ----- 690790 Harness- Wiring (Used Before Code Date 00040700). 695552 Harness-Wiring (Used After Code Date 00040600). ----- Note ----- 691372 Harness- Wiring (Used Before Code Date 00040700). 494544 Harness-Wiring ----- Note ----- 696547 Harness- Wiring Used on Type No(s). 0644, 0654, 0918, 1209, 1210, 1212, 1213, 1324, 1327, 1719, 1735, 1787, 1792, 1903, 1924, 1930, 1934, 1936, 1944, 1950, 1951, 1962, 1963, 1974, 2005, 2054, 2058, 2377, 2414, 2614, 3127, 3132, 3510. 745 776 783 783A 784 785 789 676D 677 678 684 689 689A 692 697 715 718 721 741 789A 789B 742 K Included in Engine Gasket Set-Ref.

No.358. D Included in Carburetor Overhaul Kit-Ref. No. 121.

z Included in Carburetor Gasket Set-Ref. No. 977. Included in Valve Gasket Set-Ref. No 1095. Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine. 0517-18 Assemblies include all parts shown in frames. 18 06/30/2008 12F800 REF. NO.

801 802 PART NO. DESCRIPTION REF. NO. 871 PART NO. DESCRIPTION REF. NO. 923 PART NO. @@----- Note ----- 695975 Cap-End (Used Before Code Date 00040700). 695266 Housing-Starter (Used After Code Date 00040600). @@@@3129, 3130.

697338 Seal-Valve 691155 Seat-Valve (Intake) 690380 Seat-Valve (Exhaust) 262001 Bushing-Valve Guide (Exhaust) ----- Note ----- 63709 Bushing-Valve Guide (Intake) 883 K691881 Gasket-Exhaust 892 690646 Switch-Key 910 691094 Stud (Alternator) 921 497233 Cover-Blower Housing 921A 695886 Cover-Blower Housing 921B 692931 Cover-Blower Housing (Black) ----- Note ----- 692932 Cover-Blower Housing (Red) 921C 695889 Cover-Blower Housing 921E 696262 Cover-Blower Housing 921F 697343 Cover-Blower Housing 921G 790701 Cover-Blower Housing 921H 790037 Cover-Blower Housing 921L 791026 Cover-Blower Housing 921N 792675 Cover-Blower Housing 921R 793771 Cover-Blower Housing 922 691831 Spring-Brake 922A 692135 Spring-Brake 691994 Brake ----- Note ----- 691994 Brake (Used Before Code Date 06081400). Used on Type No(s). 1734, 1959, 1987, 2045, 2055, 2057, 2059, 2060, 2380. 695891 Brake ----- Note ----- 695891 Brake (Used After Code Date 06081300 and Before Code Date 08050100). Used on Type No(s). 1734, 1959, 1987, 2045, 2055, 2057, 2059, 2060, 2380. 695891 Brake (Used Before Code Date 08050100). Used on Type No(s). @@796136 Brake (Used After Code Date 08043000). Used on Type No(s).

803 923A 832 832A 832B 836 836A 836B 842 843 843A 847 851 851A 853 923B 868 869 870 K Included in Engine Gasket Set-Ref. No.358. D Included in Carburetor Overhaul Kit-Ref. No. 121. z Included in Carburetor Gasket Set-Ref. No. 977. Included in Valve Gasket Set-Ref.

No 1095. Illustrations cover a range of engines. @@19 06/30/2008 12F800 REF. NO. 925 PART NO. DESCRIPTION REF. NO. 972B PART NO. DESCRIPTION REF. NO.

1095 1102 1119 1134 1160 1210 PART NO. DESCRIPTION 795403 Cover-Linkage (Used After Code Date 07072200). @@691919 Guard-Rewind (Round) 691345 Guard-Rewind (Tear Drop) 690598 Guard-Rewind (Trim Ring) 499421 Switch-Interlock 691325 Spline-Starter 691004 Screw (Casing Clamp Bracket) 691738 Stop-Rope 397974S Cap-Fuel Tank (Plastic) 699985 Cap-Fuel Tank (Plastic) 698183 Valve-Fuel Shut Off (Plastic) 496116 Base-Air Cleaner Primer 792040 Base-Air Cleaner Primer 493537S Filter-Pre Cleaner 692298 Cover-Air Cleaner 690700 Screw (Blower Housing Cover) 691138 Screw (Blower Housing Cover) 691669 Screw (Air Cleaner Primer Bracket) 699374 Tank-Fuel (Plastic) ----- Note ----- 699387 Tank-Fuel (Plastic) Used on Type No(s). 1717, 1925, 1958, 2027, 2038, 2044, 2046, 2327, 2329, 2611, 2612, 2613, 2685, 2687, 3186, 3322, 3324. 493640 Bowl-Float 694395 Primer-Carburetor 498261 Gasket Set-Carburetor 691959 Key Set 695951 Key Set 398067 Arrestor-Spark 692957 Arrestor-Spark 691346 Fan-Flywheel 696255 Screw (Starter Motor) 494256 Kit-Label ----- Note ----- 790231 Kit-Label (Touch N Mow) Label-Emissions (Available From A Briggs & Stratton Authorized Dealer) 277039 Operator's Manual ----- Note ----- 277101 Operator's Manual (Touch N Mow) 692311 Kit-Screw/Washer ----- Note ----- 696293 Kit-Screw/ Washer (Touch N Mow) 498528 Gasket Set-Valve 691255 Pilot-Guide 691648 Screw (Alternator) 224322 Washer (Pawl Friction Plate) 690345 Screw (Interlock Switch) 498144 Pulley/Spring Assembly (Pulley) 498144 Pulley/Spring Assembly (Spring) 695959 Starter-Mechanical (Touch N Mow) (Do Not Service Individual Parts, Only As A Whole) ----- Note ----- 699914 Starter- Mechanical (Touch N Mow) (Do Not Service Individual Parts, Only As A Whole) Used on Type No(s).

1958, 2685. 794467 Label-Warning 270962 Manual-Repair 790848 Vane-Air (Autochoke System) 790849 Spring-Air Vane 790850 Screw (Air Vane) (Autochoke System) 930 930A 930C 935 937 940 946 957 957B 958 966A 966B 967A 968B 969 969A 970 975 976 977 990 990A 994 994A 1005 1009 1019 1211 1236 1036 1058 1319 1330 1386 1387 1388 1059 K Included in Engine Gasket Set-Ref. No.358. D Included in Carburetor Overhaul Kit-Ref. No. 121. Included in Carburetor Gasket Set-Ref. No. 977. Included in Valve Gasket Set-Ref. No 1095. z Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine. 0517-20 Assemblies include all parts shown in frames.

20 06/30/2008 .



[You're reading an excerpt. Click here to read official BRIGGS & STRATTON 12F800 TO 12F899 user guide](http://yourpdfguides.com/dref/3640281)
<http://yourpdfguides.com/dref/3640281>